


850G-10PWI Industrial Ethernet Switch Quick Installation Guide

Version: 1.00

Connecting Power

The 850G-10PWI Industrial Ethernet Switch can be powered from two power supplies (input range 24~57 VDC). Two power supplies are on the top panel of the switch. Insert the positive and negative wires (AWG 12-24) into V+ and V- contacts on the terminal block respectively and use a flathead screwdriver to push in and open the wire clamp.

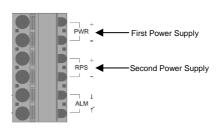


A WARNING

The DC power should be connected to a well-fused power supply.

Alarm Relay and Ground

- The alarm relay output contacts are shown as ALM next to the DC terminal block connector as the figure below.
- The alarm relay out is "Normal Open", and it will be closed when it is detecting any predefined failure such as power failures.
- · The relay output with current carrying capacity of 1A @ 24 VDC.
- $\boldsymbol{\cdot}$ The switch must be properly grounded for optimum system performance.

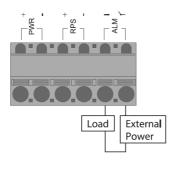



Ground Connector

DIP Switch Setting



DIP	Function Description	
1 (PWR)	ON: Power alarm reporting is enabled.	
2 (RPS)	OFF: Power alarm reporting is disabled.	
3 (Storm)	ON: Broadcast storm control is enabled. OFF: Broadcast storm control is disabled.	
4 (QoS)	ON: Port Priority is enabled on Port 2.	
4 (Q03)	OFF: Port Priority is disabled.	
5 (Port 9)	ON: Port 100FX support is enabled.	
6 (Port 10)	OFF: Port 100FX support is disabled.	


Reset Button



Function	Operation		
Reboot	Press the Reset button for 2 seconds		
Keboot	and release.		
Reset to	Press the Reset button for 10 seconds		
factory default	and release.		

LED Indicators

LED	Color	Description			
PWR/RPS	On: Green	PWR/RPS is powered.			
PWK/KPS	Off	PWR/RPS is not powered.			
ALM	On: Red	Alarm for abnormal power status or function.			
ALIVI	Off	Normal operation or DIP switch OFF.			
	On: Green	Ethernet LINK UP.			
RJ45 LAN port	Blinking:	Ethernet traffic detected.			
Link/Act	Green				
	Off	Ethernet LINK DOWN.			
RJ45 LAN port	On: Green	Ethernet LINK UP at 1000Mbps.			
Speed	Off	Ethernet LINK DOWN or LINK UP at			
Speed	Oii	10Mbps/100Mbps			
	On: Green	LINK UP.			
UPLINK	Blinking:	Traffic detected.			
OFLINK	Green				
	Off	LINK DOWN.			
PoE On: Green PoE PD (Powered Device) conr		PoE PD (Powered Device) connected.			
	Off	PoE PD (Powered Device) disconnected.			

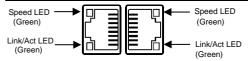

RJ45 Connector Pinouts


The pin assignment of RJ45 connector is shown in the following table.

8-pin RJ45				
ппппп				
1 8				

Pin	Description	PoE Pinouts
1,2	T/Rx+, T/Rx-	V+
3,6	T/Rx+, T/Rx-	V-
4,5	T/Rx+, T/Rx-	Χ
7,8	T/Rx+, T/Rx-	Χ


DIN-rail Mounting

STEP 1: Use the screws to install the DIN-rail kit to attach at the rear side of the switch.

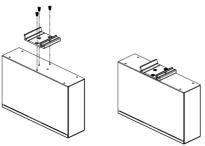

STEP 2: Hook the unit onto the DIN-rail.

STEP 3: Push the bottom of the unit towards the DIN-rail until it locks in place.

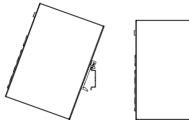

Web Interface: Connect & Login

- 1. Factory default IP: 192.0.2.1
- 2. Login with default account and password.

Username: root Password: 2wsx#EDC

NOTE

Please scan below QR Code to download online resources. Download Link: https://www.proscend.com/en/product/850G-10PWI.html



850G-10PWI