

5099N Series G.SHDSL.bis NTU

User Manual

V1.00

Tables of Contents

1	Introduction.....	1
1.1	Features	1
1.2	Specification	2
1.3	Applications	2
2	Getting to know about the SHDSL.bis NTU	3
2.1	Front Panel.....	3
2.1.1	E1 interface model.....	3
2.1.2	Serial interface model	3
2.2	Rear Panel	5
2.2.1	E1 Interface Model.....	5
2.2.2	Serial Interface Model.....	6
2.3	Installation	7
2.3.1	E1 Interface.....	8
2.3.2	Serial Interface.....	9
2.4	Models vs. Interface modes support	10
2.5	CAUTION	11
3	Configuration with Keypad and LCD.....	13
3.1	Keypad	13
3.2	Main menu Tree	13
3.3	Menu tree for SHOW STATUS.....	14
3.4	Menu tree for SHOW STATISTICS	16
3.4.1	Show Statistic on E1 Interface.....	18
3.5	Menu tree for SYSTEM SETUP	19
3.5.1	SETUP INTERFACE.....	19
3.5.2	Sub-Menu tree for SETUP SHDSL.....	20
3.5.3	Sub-Menu tree for SETUP E1 Interface	21
3.5.4	Sub-Menu tree for SETUP SERIAL Interface	25
3.5.5	Application of STU-R configuration follow STU-C	28
3.6	Sub-menu tree for REBOOT SYSTEM	28
3.7	Sub-Menu tree for DISGNOSTIC.....	29
3.7.1	Loopback function.....	29
3.7.2	BER Test function	32
4	Parameters Table	33
4.1	NTU and SHDSL parameters.....	33
4.2	E1 parameters.....	33
4.3	Serial parameters.....	33
5	Configuration with Console Port	34
5.1	Login Procedure	35
5.2	Window structure	36

5.3	Main Menu Summary	37
5.4	Configuration	39
5.4.1	Configure NTU Interface	40
5.4.2	Configure SHDSL parameters	41
5.4.3	Configure E1 parameters	44
5.4.4	Configure Serial parameters	55
5.4.5	Remote configuration	60
5.4.6	Restore factory default	61
5.5	Reboot	62
5.6	View the system status	63
5.6.1	View the SHDSL status	63
5.6.2	View the Interface status	64
5.6.3	View the Statistics	67
5.7	View System Configuration	71
5.7.1	Show system Information	72
5.7.2	Show system with listing format	73
5.7.3	Show system with script format	74
5.8	Upgrade	76
5.9	Diagnostic	80
5.10	Exit	83
6	Appendix	84
6.1	Abbreviation	84
6.2	Serial Interface Pin Assignments	87
6.3	V.35 DB25(M) to M.34(F) adaptor Cable	88
6.4	X.21 DB25(M) to DB15(F) adaptor Cable	90
6.5	Console Cable	92
6.6	E1 Balanced Cable	93
6.7	E1 Unbalanced Cable	94
6.8	Ethernet Cable	95
6.9	DSL Cable	96
6.10	Power Cord	97
6.11	Illustration of Loopback connection device (E1)	98
6.12	Illustration of Loopback connection device (Serial)	99

1 Introduction

The G.SHDSL.bis NTU offers two different interfaces (E1 and Serial) connecting customers to high-speed TDM services. This series has six models types as follows:

- **E1 interface model: 5099N-*/*/W/E1**

It offers two different ways to connect customers a high-speed TDM services with two G.703 E1 interfaces (Balanced 120Ω RJ45 jack and Unbalanced 75Ω dual BNCs). The G.703 interface will carry from 64kbps to 2.048Mbps.

- **Serial interface model: 5099N-*/*/W/SER**

It offers the customers premise a high-speed TDM service with a DB25 interface. The industry standard DB25 interface can be configured as a V.35/RS530 or V.36/X.21 connection. The DB25 interface can transfers data up to 2.304 Mbps (for 2-wire model).

They can be configured and managed via EOC, or menu-driven VT100 compatible Asynchronous Terminal Interface, either locally or remotely.

The G.SHDSL.Bis NTU is equipped with an auto rate capability that identifies the maximum line rate supported by the copper loop. This powerful automatic configuration capability makes installation and service provisioning simple and painless. Further flexibility is provided as the ability to manually set the maximum NTU speed at different levels for different customer-tailored service offerings.

1.1 Features

- Standard G.SHDSL.Bis ITU G.991.2 (2004) supports improved reach/speed and greater interoperability
- Fast and cost-effective provisioning of traditional frame relay (FR or T-HDLC) or TDM leased line services
- User existing copper loop infrastructures
- Can operate in point to point connection
- Efficient single wire pair usage
- Up to 2.304 Mbps (2-wire) symmetric service bit rate
- Auto rate installation maximizes data rate based on loop conditions
- Wetting current sink to protect SHDSL line
- Local management interface with LCD display
- Remote line loopback
- SHDSL Line performance monitoring
- Raw and per time interval statistics
- Bandwidth guaranteed transmission equipment
- Remote firmware upgrade

1.2 Specification

WAN Interface

- Line Rate: ITU G.991.2 (2004)
- Coding: trellis coded pulse amplitude modulation
- Support: Annex A, B, F and G
- Payload rates:
64 Kbps to 2.3 Mbps (N=1 to 36) for 2-wire model
- Connection: RJ-45 jack (2-wire or 4-wire)
- Impedance: 135 ohms

G.703 Interface (as E1)

- Connection: RJ-48C for balanced 120Ω E1 cable and BNC for unbalanced 75Ω E1 cable
- Line Rate: 2048 KHz +/- 50 ppm
- Line code: HDB3/AMI
- Framing: PCM30/PCM30C/PCM31/PCM31C and Unframed
- Data Rate: 64 Kbps to 2.048 Mbps (Nx64 Kbps, N=1 to 32)
- Operation: Full E1 and Fractional E1

Serial Interface (as RS-530/V.35/X.21)

- Payload rates: Up to 2.304 Mbps (for 2-wire model)
- Support V.35/RS-530 or V.36/X.21

DSL Timing

- Internal
- From E1 Recovery (as E1)
- From DTE (as V.35)

Performance Monitoring

- ES, SES, UAS, LOWS for SHDSL
- ES, SES, UAS for E1
- Alarms and Errors for SHDSL or interface

Loopback Tests (for E1 and V.35 interface only)

- Local Digital Loopback
- Local Loopback
- Remote Line Loopback
- Remote Payload Loopback
- Far-end Line Loopback
- Far-end Payload Loopback
- V.54 Loopback (for V.35 interface)
- Build-in 2047(2¹¹-1) bit BER tester



Management

- Configuration with keypads and LCD display
- Console port (RJ45, RS232C)
- Support firmware upgradeable

Physical/Electrical

- Dimensions: 19.8 x 4.6 x 16.8 cm
- AC Input: 100 - 240 V AC with 50 - 60 Hz, 200 mA
- DC Input: -48 V $\overline{\text{---}}$, 300 mA
- Power Consumption: 12 W Max
- Operation temperature: 0 to 45 °C
- Humidity: Up to 95% (non-condensing)
- External screw for frame grounding

1.3 Applications

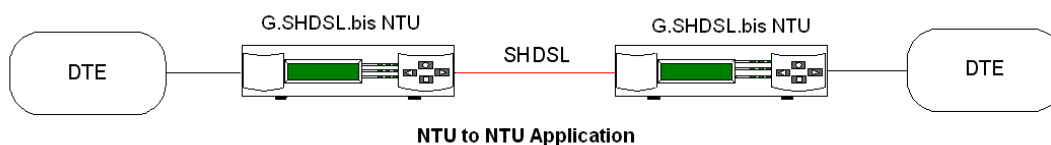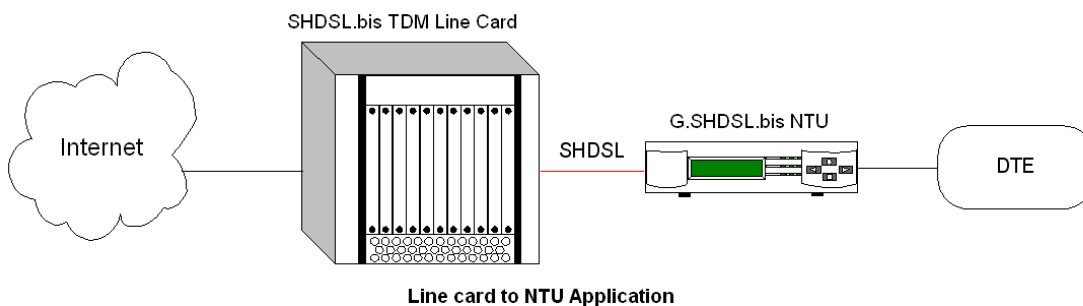

2 Getting to know about the SHDSL.bis NTU


This chapter shows the front and rear panel and how to install the hardware.

The models listing on G.SHDSL.bis NTU series:


Interface type	2/4 wires	AC Power supply	DC Power supply	AC & DC Dual Power supply
E1	2	5099N-AC/2W/E1	5099N-DC/2W/E1	5099N-DA/2W/E1
	4	5099N-AC/4W/E1	5099N-DC/4W/E1	5099N-DA/4W/E1
Serial	2	5099N-AC/2W/SER	5099N-DC/2W/SER	5099N-DA/2W/SER

2.1 Front Panel

2.1.1 E1 interface model

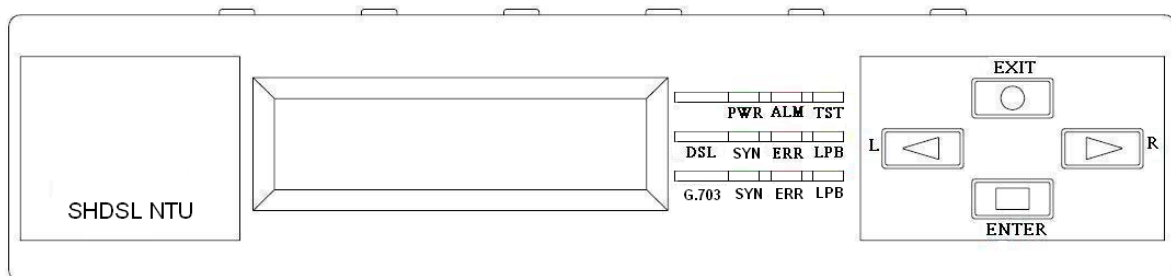

2.1.2 Serial interface model

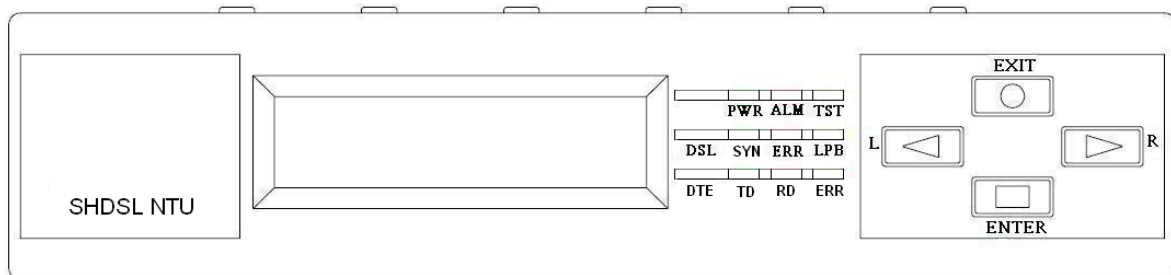

Front panel can be separated into three parts: LCD display, LED indicator and Keypads.

The LCD display can show the status and configuration of the device. The local management interface will be done by keypad with this LCD display.

The purpose of the keypad is to configure the setting or function selection on this NTU.

The following table describes the LEDs' functions of the SHDSL.bis NTU:

LED		Color	Action	Description
PWR	Green	Green	On	Power is on. (RT)
			Off	Power is off.
	Blue	Blue	On	Power is on. (CO)
			Off	Power is off.
ALM	Red	Red	On	System loss.
			Off	System is working nomarally.
TST	Yellow	Yellow	On	System is testing for connection.
			Off	System is working nomarally.
SHDSL	SYN	Green	On	SHDSL line is connected.
			Blink	Data transmit in SHDSL line.
			Off	SHDSL line is dropped.
	ERR	Red	Blink	Error second occurs.
			Off	No error second.
	LPB	Yellow	On	Loopback is on.
Off			Loopback is off.	
E1	SYN	Green	On	E1 line is connected.
			Off	E1 line is dropped.
	ERR	Red	Blink	There are error seconds.
			Off	There is not any error second.
	LPB	Yellow	On	Loopback is on.
			Off	Loopback is off.
V.35	TD	Green	On	Data transmit in V.35.
			Off	No data transmit in V.35.
	RD	Green	On	Data receive in V.35.
			Off	No data reveive in V.35.
	ERR	Red	Blink	Error second occurs.
			Off	No error second.


2.2 Rear Panel

2.2.1 E1 Interface Model

AC power input version

5099N-AC/2W/E1

5099N-AC/4W/E1

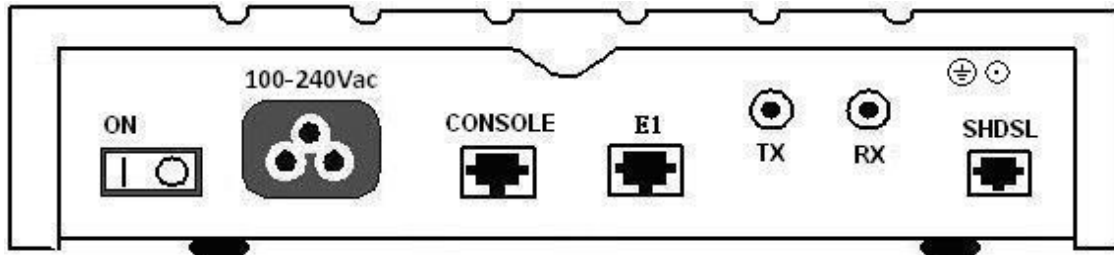


The rear panel of this model is including power switch, AC power socket, RJ-45 console, G.703 RJ-48C jack or BNC jack for transmitting and receiving and RJ-45 for DSL cable from left to right.

DC power input version

5099N-DC/2W/E1

5099N-DC/4W/E1

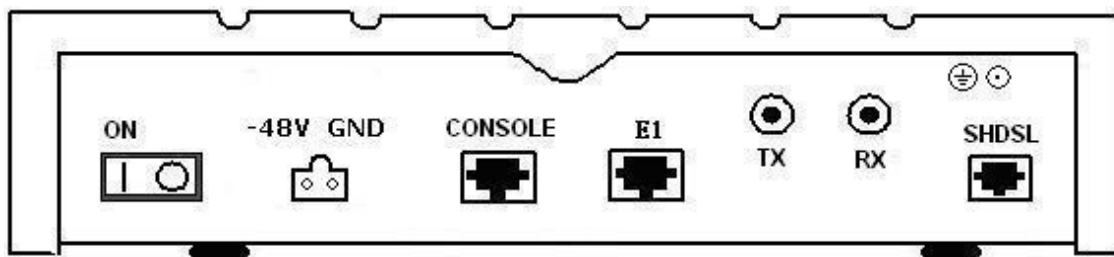


The rear panel of this model is including power switch, DC power socket, RJ-45 console, G.703 RJ-48C jack or BNC jack for transmitting and receiving and RJ-45 for DSL cable from left to right.

AC & DC dual power input version

5099N-DA/2W/E1

5099N-DA/4W/E1

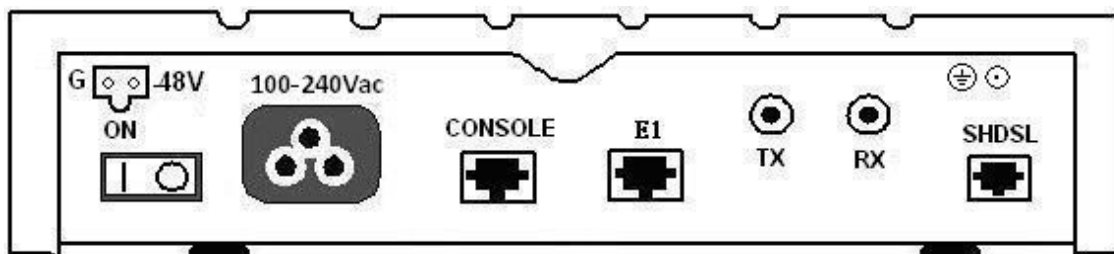


The rear panel of this model is including DC power socket, AC power switch, AC power socket, RJ-45 console, G.703 RJ-48C jack or BNC jack for transmitting and receiving and RJ-45 for DSL cable from left to right.

Connector Description	
ON	Power switch. Press 1 for turn on and press 0 for off
100 -240Vac	IEC-320 C6 AC input connector. It has power adapting function from 100V to 240V
-48V GND	DC power input connector (-48V)
CONSOLE	RJ-45 for system configuration and maintenance
G.703	RJ-48C for 120Ω E1 connection with PABX (Private Automatic Branch Exchange) or E1 Router
TX	BNC for 75Ω E1 transmitting
RX	BNC for 75Ω E1 receiving
SHDSL	RJ-45 for DSL connection

2.2.2 Serial Interface Model

AC power input version


5099N-AC/2W/SER

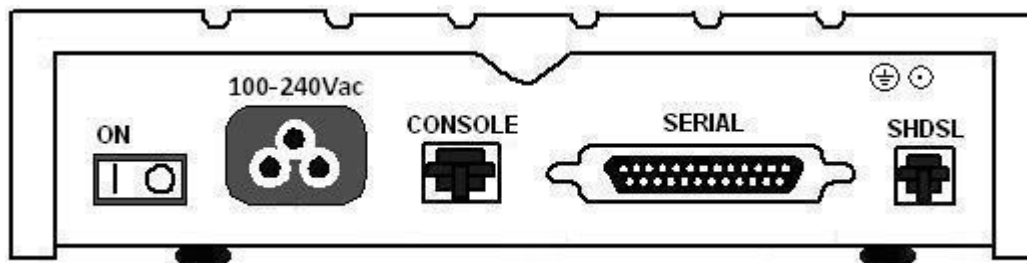

The rear panel of this model is including power switch, AC power socket, RJ-45 for console cable, DB-25 (Female) for serial cable and RJ-45 for DSL cable from left to right.

DC power input version


5099N-DC/2W/SER

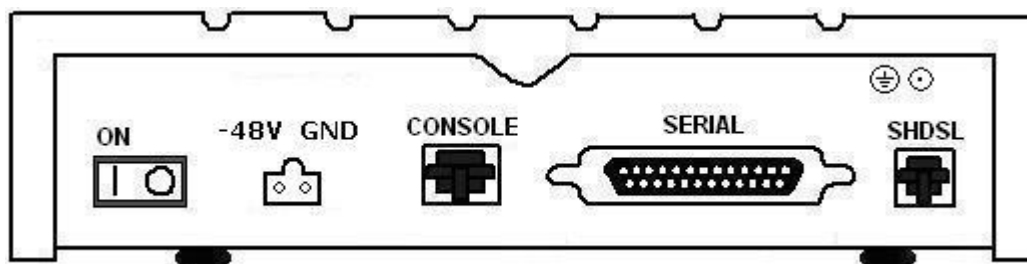

The rear panel of this model is including power switch, DC power socket, RJ-45 for console cable, DB-25 (Female) for serial cable and RJ-45 for DSL cable from left to right.

AC & DC dual power input version

5099N-DA/2W/SER

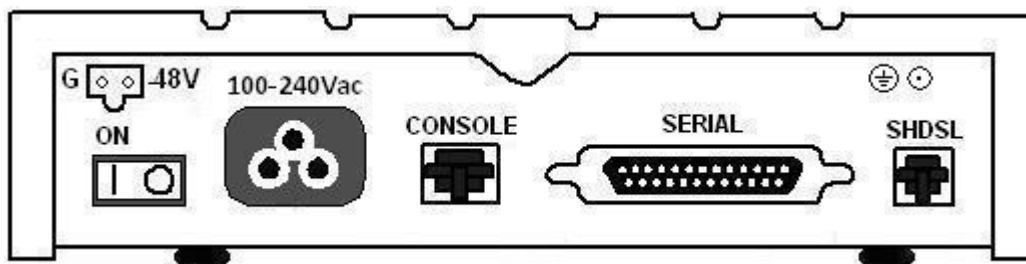

The rear panel of this model is including DC power socket, AC power switch, AC power socket, RJ-45 for console cable, DB-25(Female) for serial cable and RJ-45 for DSL cable from left to right.

Connector Description	
ON	Power switch. Press 1 for turn on and press 0 for off.
100 -240Vac	IEC-320 C6 AC input connector. It has power adapting function from 100V to 240V
-48V GND	DC power input connector (-48V)
CONSOLE	RJ-45 for system configuration and maintenance
SERIAL	DB-25(F) for RS-530 and V.35 or X.21(with adaptor cable)
SHDSL	RJ-45 for DSL Connection


2.3 Installation

Note: To avoid possible damage to this NTU, do not turn on the product before hardware installation.


- (a) Plug the power cord in the power socket.
- (b) Plug the console port in console if you want to configure the NTU with VT100 program of NB or PC.
- (c) Plug the E1 cable (75Ω BNC cables for E1 or 120Ω cable for E1)
or/and SERIAL cable
or/and Ethernet cable
- (d) Plug SHDSL cable
- (e) Power on

2.3.1 E1 Interface


AC power input version

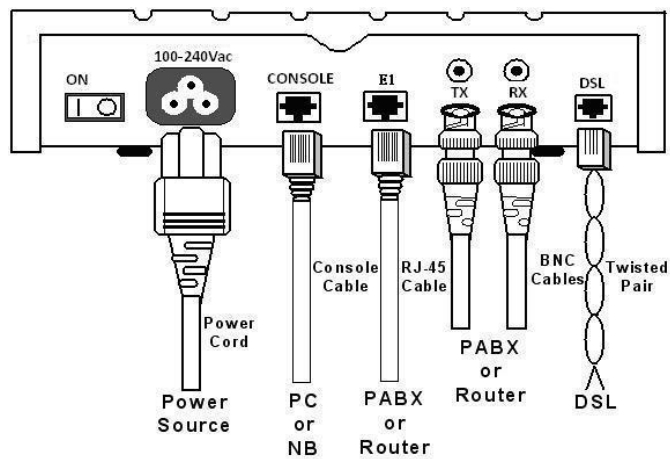

DC power input version

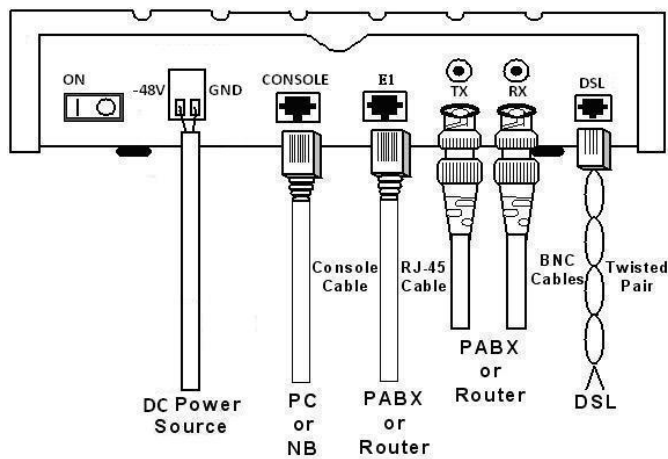


AC & DC dual power input version (Use DC input only)

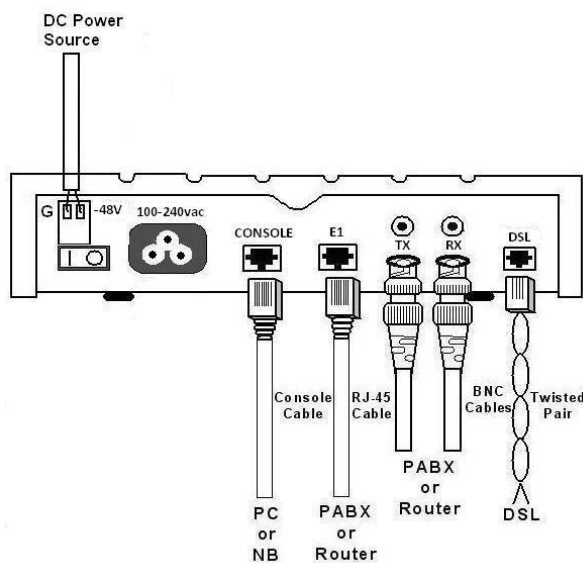


2.3.2 Serial Interface


AC power input version

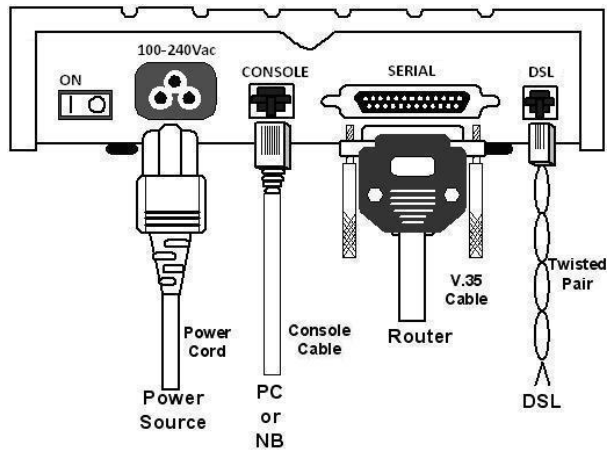

DC power input version

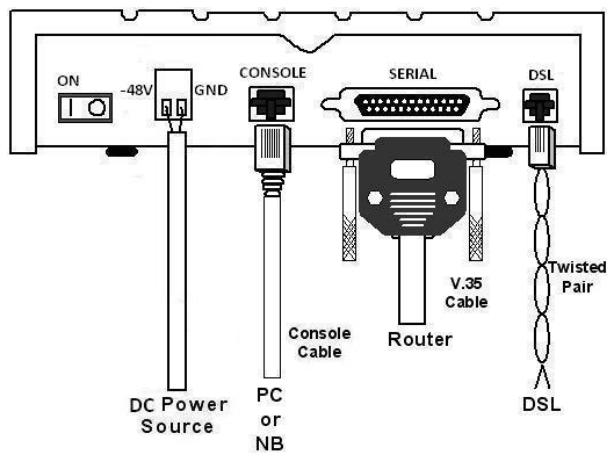

AC & DC dual power input version (Use DC input only)

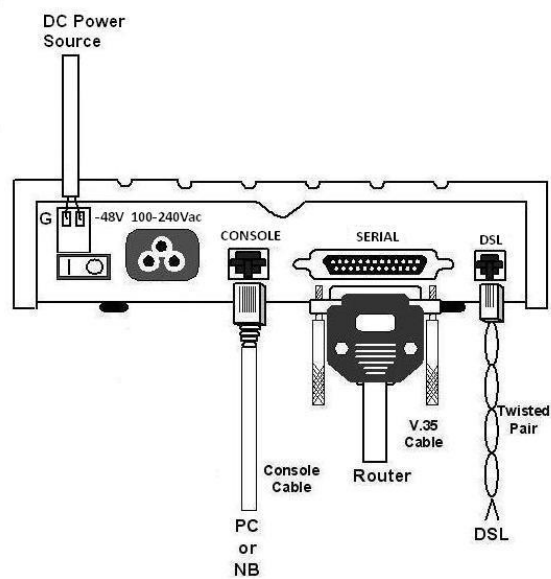

2.4 Models vs. Interface modes support



Models vs. Interface modes support (table 1):

Model	Interface modes support
E1 interface model 5099N-AC/2W/E1 5099N-DC/2W/E1 5099N-DA/2W/E1 5099N-AC/4W/E1 5099N-DC/4W/E1 5099N-DA/4W/E1	E1
Serial interface model 5099N-AC/2W/SER 5099N-DC/2W/SER 5099N-DA/2W/SER	Serial

Models vs. Interface modes support (table 2):

Model \ Interface		E1	SER
5099N-AC/2W/E1	5099N-AC/4W/E1	●	
5099N-DC/2W/E1	5099N-DC/4W/E1		
5099N-DA/2W/E1	5099N-DA/4W/E1		
5099N-AC/2W/SER			●
5099N-DC/2W/SER			
5099N-DA/2W/SER			

Models vs. Interface modes support (table 3):

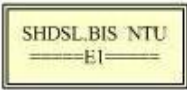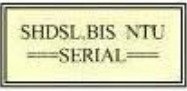Model	Interface modes support
<p>E1 interface model 5099N-AC/2W/E1 5099N-DC/2W/E1 5099N-DA/2W/E1 5099N-AC/4W/E1 5099N-DC/4W/E1 5099N-DA/4W/E1</p>	
<p>Serial interface model 5099N-AC/2W/SER 5099N-DC/2W/SER 5099N-DA/2W/SER</p>	

2.5 CAUTION

CAUTION for accessibility

Be sure that the power outlet you plug the power card into is easily accessible and located as close as to the equipment operator as possible. When you need to disconnect power to the equipment, be sure to unplug the power card from the electrical outlet.

Warnings

- Do not use this product near water.
- Do not place this product on an unstable cart, stand or table. If the product falls, it could be seriously damaged.
- Slots and openings are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, soft, rug or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind onto or into the product.

Using electrical power

- This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- Do not allow anything to rest on the power card. Do not locate this product where people will walk on the cord.
- If an extension cord is used with this product, make sure that the total ampere rating of the equipment plugged into the extension cord does not exceed the extension card ampere rating. Also, make sure that the total rating of all products plugged into the wall outlet does not exceed the fuse rating.

- Do not overload a power outlet, strip or receptacle by plugging in too many devices. The overall system load must not exceed 80% of the branch circuit rating. If power strips are used, the load should not exceed 80% of the power strip's input rating.
- The product's power supply is equipped with a three-wire grounding plug. The plug only fits in a grounded power outlet. Make sure the power outlet is properly grounded before inserting the power supply plug. Do not insert the plug into a non-grounded power outlet. Contact your electrician for details.



Warning!

The grounding pin is a safety feature. Using a power outlet that is not properly grounded may result in electric shock and/or injury.

Note: The grounding pin also provides good protection from unexpected noise produced by other nearby electrical devices that may interfere with the performance of this product.

Product servicing

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks, refer all servicing to qualified service personnel.

Unplug this product from the wall outlet and refer servicing to qualified service personnel when:

- The power cord or plug is damaged, cut or frayed
- Liquid was spilled into the product
- The product was exposed to rain or water
- The product has been dropped or the case has been damaged
- The product exhibits a distinct change in performance, indicating a need for service
- The product does not operate normally after following the operating instructions

Note: Adjust only those controls that are covered by the operating instructions, since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal condition.

Disposal instructions

Do not throw this electronic device into the trash when discarding.

To minimize pollution and ensure utmost protection of the global environment, please recycle.




3 Configuration with Keypad and LCD

This chapter provides information about the configuration of your G.SHDSL.Bis NTU via front panel LCD display and keypads.

3.1 Keypad


The G.SHDSL.bis NTU is designed to provide a user-friendly configuration and management by using keypad and LCD display on the front panel without a computer with the VT100 terminal software connected.

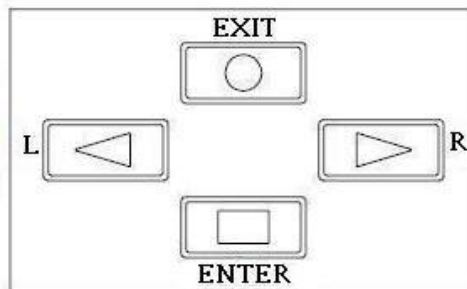

Key Pad	Description
Exit/-	● Return to previous configuration menu.
Enter/+	■ Skip to next configuration menu or configure this item.
L	◀ Select other parameter in the same level menu.
R	▶ Select other parameter in the same level menu.

3.2 Main menu Tree

After turning on device, the LCD display will prompt **G.SHDSL.BIS NTU**. Press **Enter** to enter. There will display some sub-menus as following:

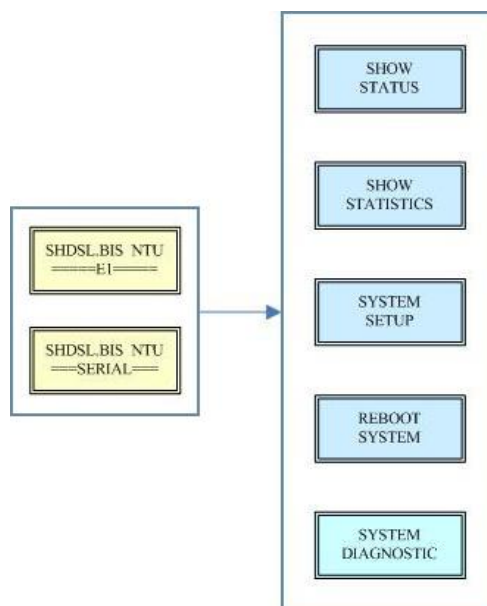


For more detail on these sub-menus, please refer to each chapter.

3.3 Menu tree for SHOW STATUS


You can check the status via LCD display.

The SHOW STATUS menu tree is as following.

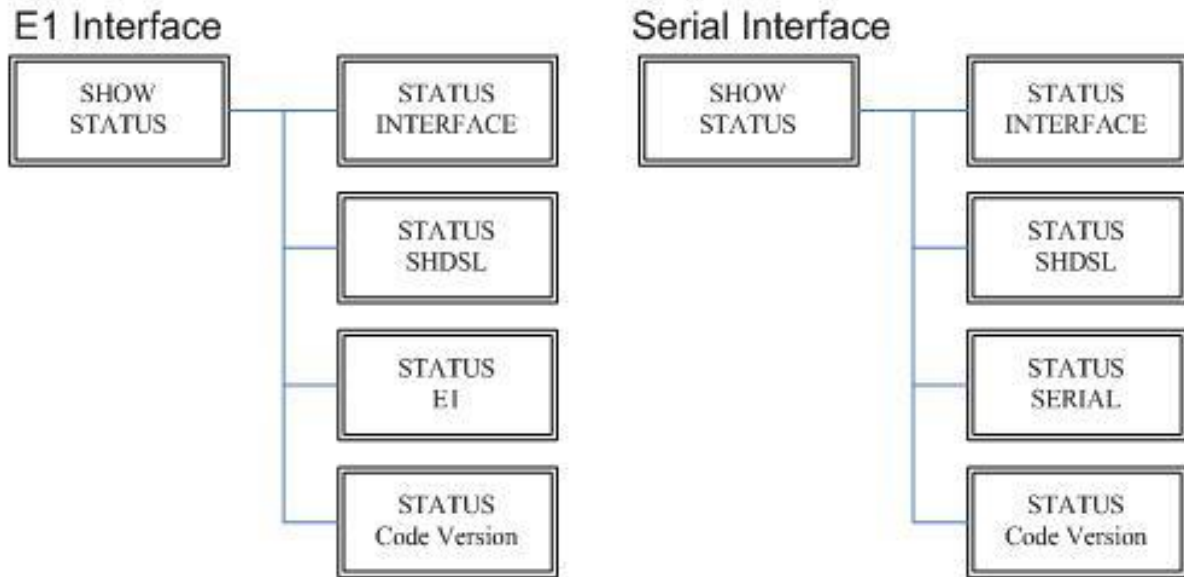


For more detail on these sub-menus, please refer to following:


SHOW STATUS > STATUS INTERFACE




SHOW STATUS > STATUS SHDSL

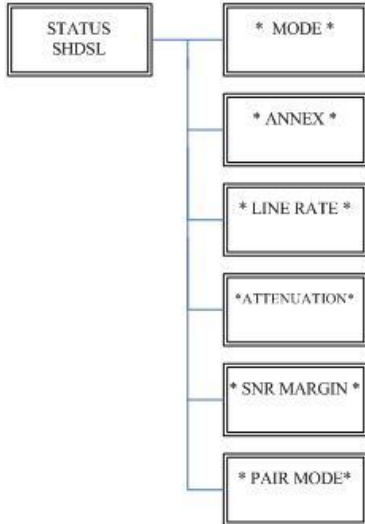


SHOW STATUS > STATUS E1

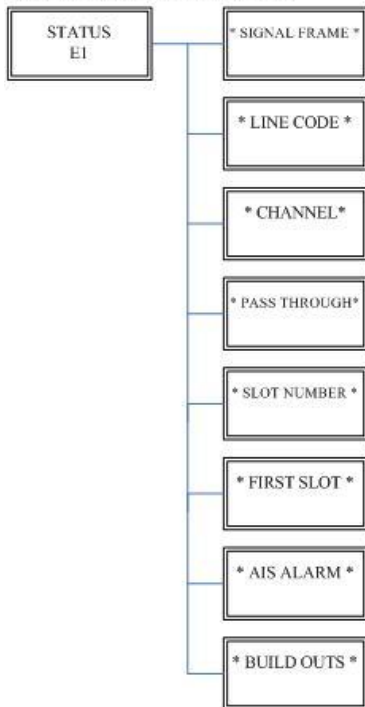

SHOW STATUS > STATUS SERIAL

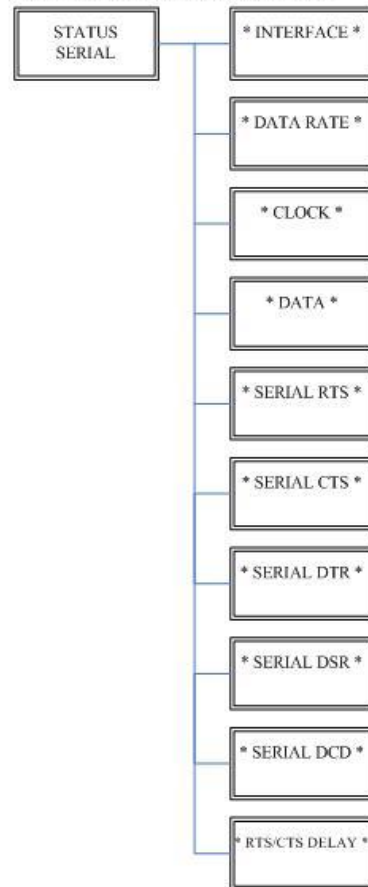

SHOW CODE VERSION > KERNEL FPGA



3.4 Menu tree for SHOW STATISTICS

The product can display two kinds of statistics data:

- (a) Current 15-minute period and 96 previous 15-minute periods of SHDSL performance.
- (b) Current 24-hour period and 7 previous 24-hour periods of SHDSL performance.

SHDSL's statistics data:

SHDSL
ES
SES
UAS
LOSW

If using the E1 interface mode, it can also show the E1 performance data.

- (c) Current 15-minute period and 96 previous 15-minutes periods of E1 performance.
- (d) Current 24-hour period and 7 previous 24-hours periods of E1 performance.

E1's statistics data:

E1
ES
SES
UAS


Abbrev of statistics terms:

ES	Error Second
SES	Severely Error Second
UAS	Unavailable Second
LOWS	Loss of Synchronization word

Model vs. Interface modes and statistics support:

Model	Interface modes support	SHDSL statistics support ES, SES, UAS, LOSW
E1 interface model 5099N-AC/2W/E1 5099N-DC/2W/E1 5099N-DA/2W/E1 5099N-AC/4W/E1 5099N-DC/4W/E1 5099N-DA/4W/E1	E1	•
Serial interface model 5099N-AC/2W/SER 5099N-DC/2W/SER 5099N-DA/2W/SER	Serial	•


3.4.1 Show Statistic on E1 Interface

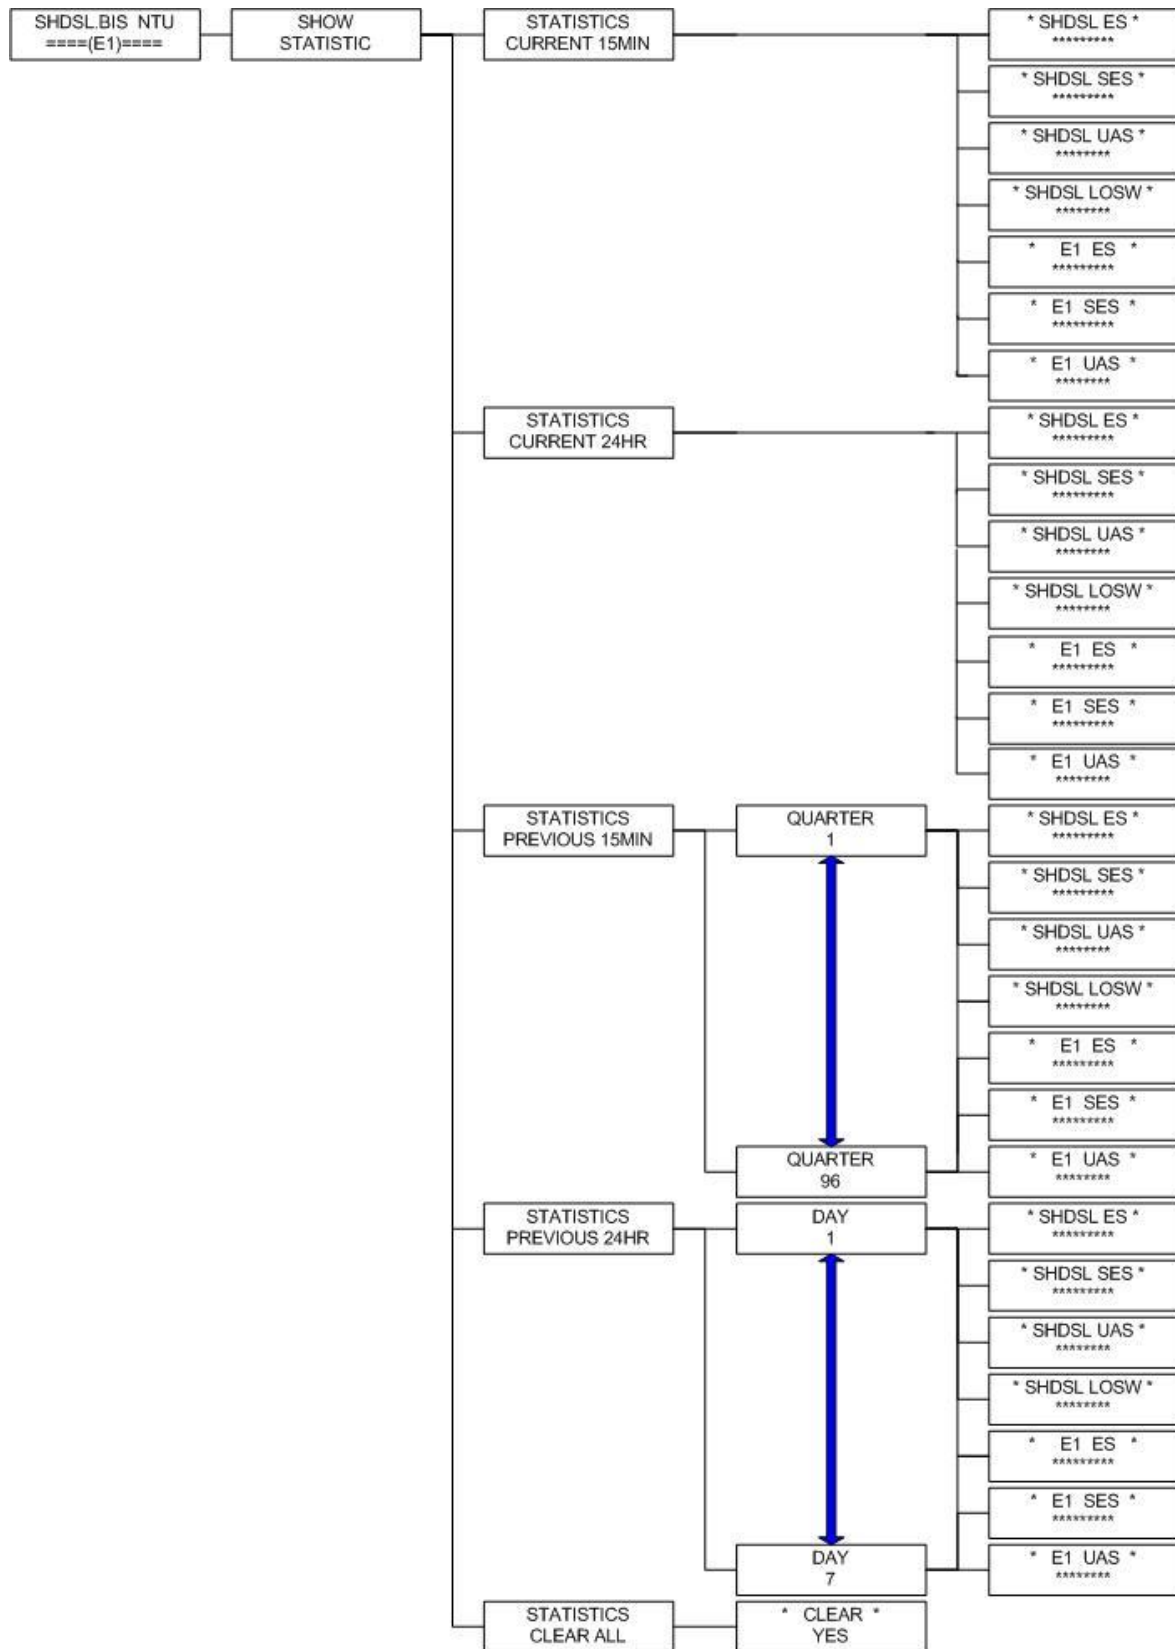


3.5 Menu tree for SYSTEM SETUP

You can setup 11 interface modes via LCD display.

E1 Interface Mode

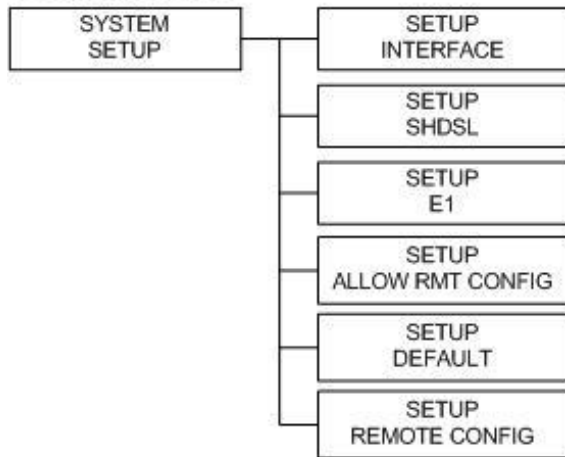

Serial Interface Mode

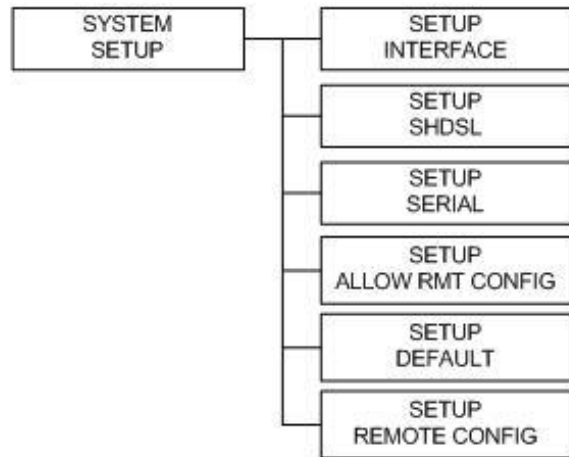


3.5.1 SETUP INTERFACE

Models	Setup Interface
E1 interface model 5099N-AC/2W/E1 5099N-DC/2W/E1 5099N-DA/2W/E1 5099N-AC/4W/E1 5099N-DC/4W/E1 5099N-DA/4W/E1	<div style="border: 1px solid black; padding: 5px; display: inline-block;">E1</div>
Serial interface model 5099N-AC/2W/SER 5099N-DC/2W/SER 5099N-DA/2W/SER	<div style="border: 1px solid black; padding: 5px; display: inline-block;">Serial</div>

3.5.2 Sub-Menu tree for SETUP SHDSL

SYSTEM SETUP > SETUP SHDSL

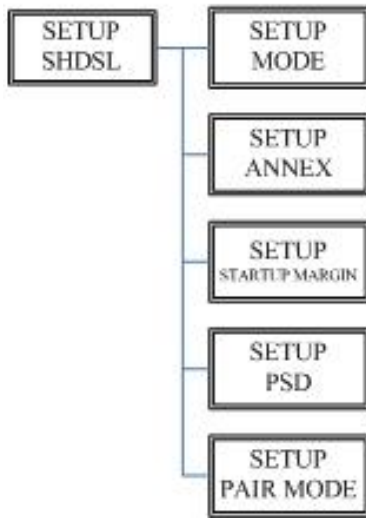


SETUP SHDSL	Selection items
SETUP MODE	STU-R, STU-C-INTCLK, STU-C-EXTCLK
SETUP ANNEX	A, B, F, G
SETUP STARTUP MARGIN	-10 to 21
SETUP PSD	SYM, ASYM
SETUP PAIR MODE	1 Pair, 2 Pair

The following are commonly used acronyms for SETUP MODE:

STU-R	RT side, where the clock source is set to external
STU-C-INTCLK	CO side, where the clock source is set to internal
STU-C-EXTCLK	CO side, where the clock source is set to external

3.5.3 Sub-Menu tree for SETUP E1 Interface

SYSTEM SETUP → SETUP E1

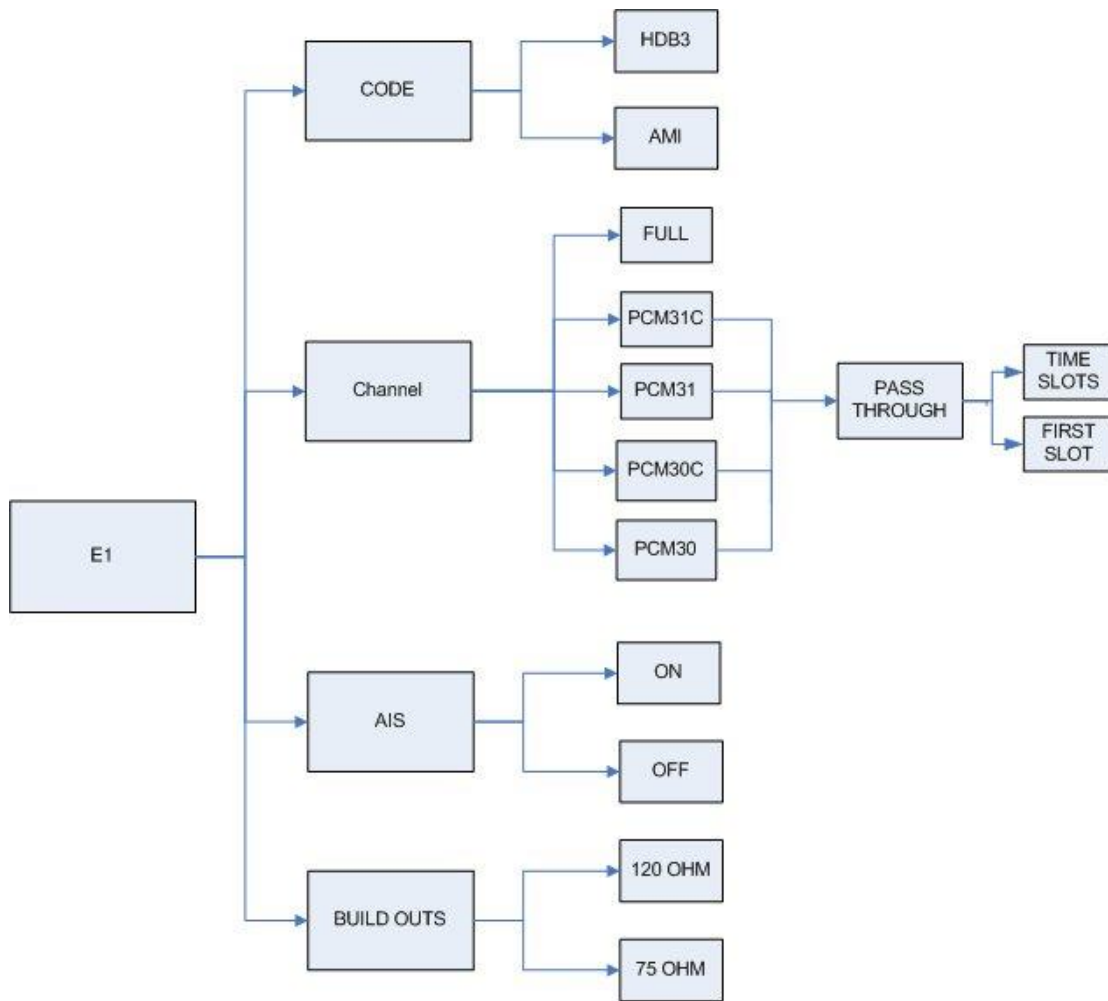

E1 parameter setting:

E1 Items	Setting
Channel	PCM31 PCM31C PCM30 PCM30C FULL
Pass Through	Off On
Code	HDB3 AMI
AIS	On Off
Build Outs	120 ohms 75 ohms

Framer Setting:

Framer		Slot Number	First Slot
PCM31	FAS	1 to 31	1 to 31
PCM31C	FAS+CRC4	1 to 31	1 to 31
PCM30	FAS+CAS	1 to 30	1 to 31 (cannot use 16)
PCM30C	FAS+CAS+CRC4	1 to 30	1 to 31 (cannot use 16)
FULL	UNFRAMED		

The table of number of time slot vs. 1st time slot:

Annex A/B/F/G 2-wire

Channel	Number of slot	1st slot
FULL (UNFRAMED)	----	----
PCM31 PCM31C	31	1
	30	1~2
	29	1~3
	28	1~4
	27	1~5
	26	1~6
	25	1~7
	24	1~8
	23	1~9
	22	1~10
	21	1~11
	20	1~12
	19	1~13
	18	1~14
	17	1~15
	16	1~16
	15	1~17
	14	1~18
	13	1~19
	12	1~20
11	1~21	
10	1~22	
9	1~23	
8	1~24	
7	1~25	
6	1~26	

	5	1~27
	4	1~28
	3	1~29
	2	1~30
	1	1~31
PCM30 PCM30C	30	1
	29	1~2
	28	1~3
	27	1~4
	26	1~5
	25	1~6
	24	1~7
	23	1~8
	22	1~9
	21	1~10
	20	1~11
	19	1~12
	18	1~13
	17	1~14
	16	1~15
	15	1~15,17
	14	1~15,17~18
	13	1~15,17~19
	12	1~15,17~20
	11	1~15,17~21
	10	1~15,17~22
	9	1~15,17~23
	8	1~15,17~24
	7	1~15,17~25
	6	1~15,17~26
	5	1~15,17~27
	4	1~15,17~28
	3	1~15,17~29
	2	1~15,17~30
	1	1~15,17~31

Annex A/B/F/G 4-wire

Channel	Number of slot	1st slot
FULL (UNFRAMED)	-----	-----
PCM31 PCM31C	30	1~2
	28	1~4
	26	1~6


	24	1~8
	22	1~10
	20	1~12
	18	1~14
	16	1~16
	14	1~18
	12	1~20
	10	1~22
	8	1~24
	6	1~26
	4	1~28
	2	1~30
PCM30 PCM30C	30	1
	28	1~3
	26	1~5
	24	1~7
	22	1~9
	20	1~11
	18	1~13
	16	1~15
	14	1~15,17~18
	12	1~15,17~20
	10	1~15,17~22
	8	1~15,17~24
	6	1~15,17~26
	4	1~15,17~28
2	1~15,17~30	

Note:

When SHDSL.bis using 2-pairs (4-wires), the time slot number can only use even number
When E1 framer is PCM31C and PCM30C and set pass through ON, no fractional function can be use.

3.5.4 Sub-Menu tree for SETUP SERIAL Interface


SYSTEM SETUP → SETUP SERIAL

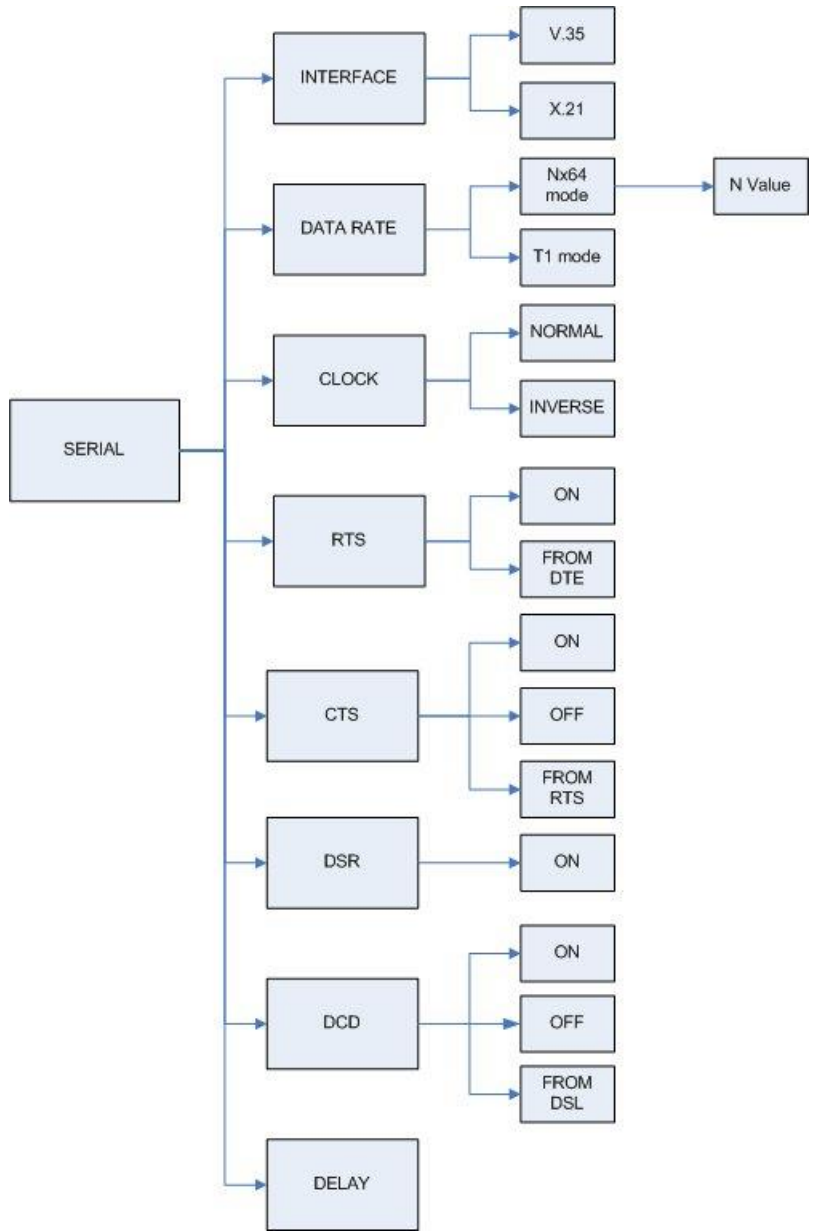



Serial interface control signals settings:

Serial Items	Setting			
INTERFACE	V.35 X.21 (RS-530)			
Nx64K (Rate)	T1 mode			
	Nx64K mode	2-wires	Annex A/B	1 ~ 36
CLOCK	Normal Inverse			
RTS	On From DTE			
CTS	On Off From RTS			
DSR	On Off From DTR			
DCD	On Off From DSL			
DELAY	0mS 1mS 2mS 3mS			

The handshake signal direction between DCE and DTE

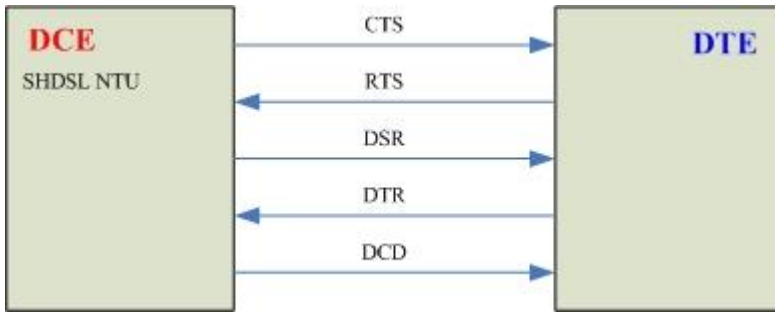


The below diagram shows CTS follow RTS, DSR follow DTR

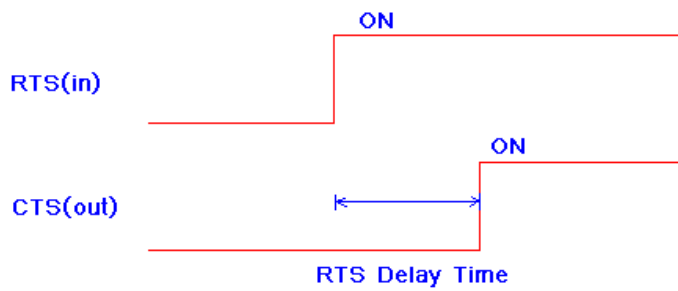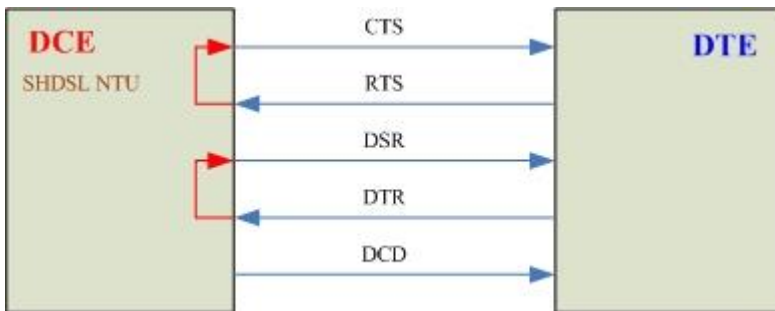

The RTS delay time is use to control CTS on delay to RTS signal, it works only for the setting: *CTS follow RTS and RTS follow from DTE.*

3.5.5 Application of STU-R configuration follow STU-C


Some configurations on STU-R side can follow STU-C side after DSL link up is finish. Such that on STU-R side, you do not care about the settings of the E1 channel/slot number/first slot, serial data rate. When the DSL link up is finished, these configurations will follow the STU-C side.

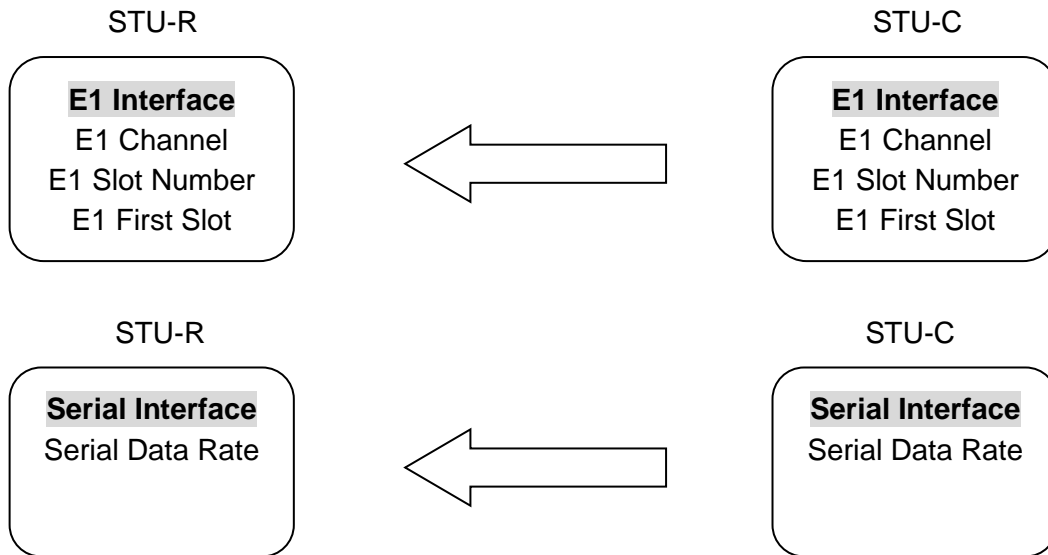

For the application on multi-interface, this function is not available. User must setup the configuration for both as the same time before DSL link.

3.6 Sub-menu tree for REBOOT SYSTEM

REBOOT SYSTEM -> * REBOOT * YES -> press" ENTER" key
Some settings request system reboot for the setting to take effect.

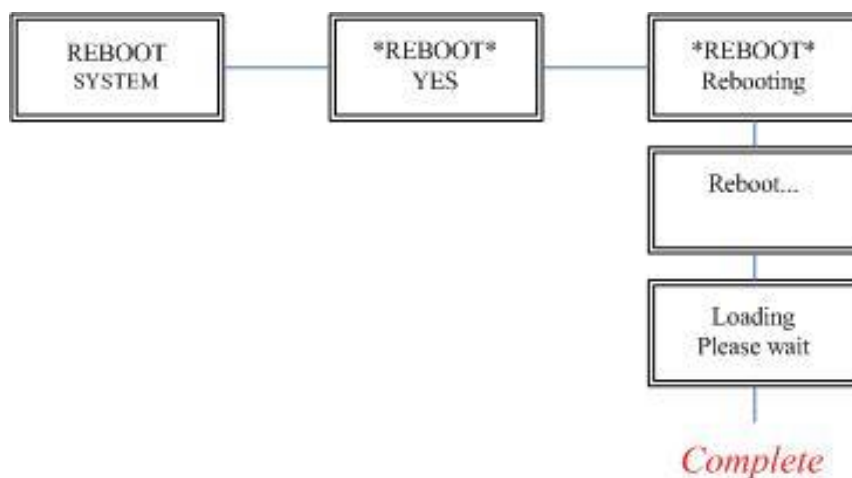

3.7 Sub-Menu tree for DISGNOSTIC

3.7.1 Loopback function

SYSTEM DIAGNOSTIC → DIAG LOOPBACK


Note:

If the device hasn't connected or it is under handshake, it will not support farend line, farend payload and V.54.

Standalone NTU, no connection with other NTU:

E1 / Serial interface
Local digital
Local
Remote line
Remote payload


For E1 and Serial interface

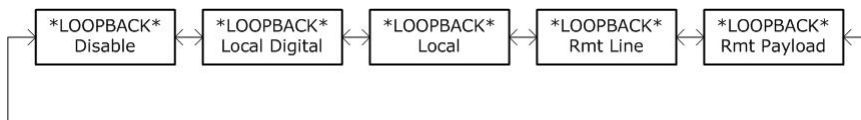


After connection both CO side and CPE side:



E1 interface	Serial interface
Local digital	Local digital
Local	Local
Remote line	Remote line
Remote payload	Remote payload
Farend line	Farend line
Farend payload	Farend payload
	V.54

For E1 interface model:

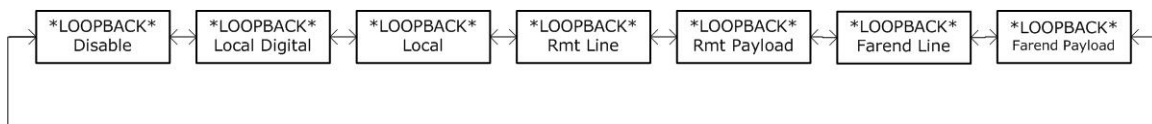


For Serial interface model:




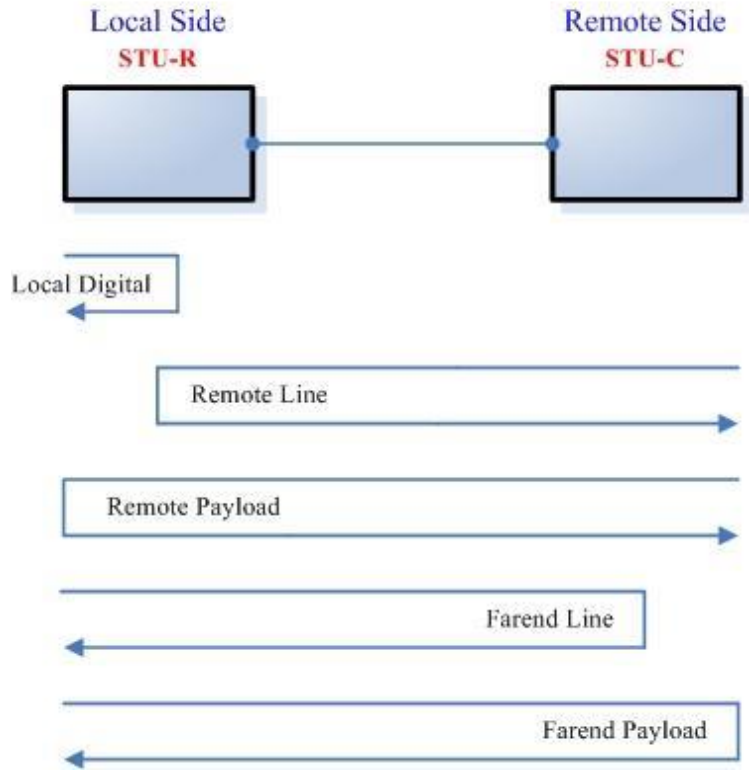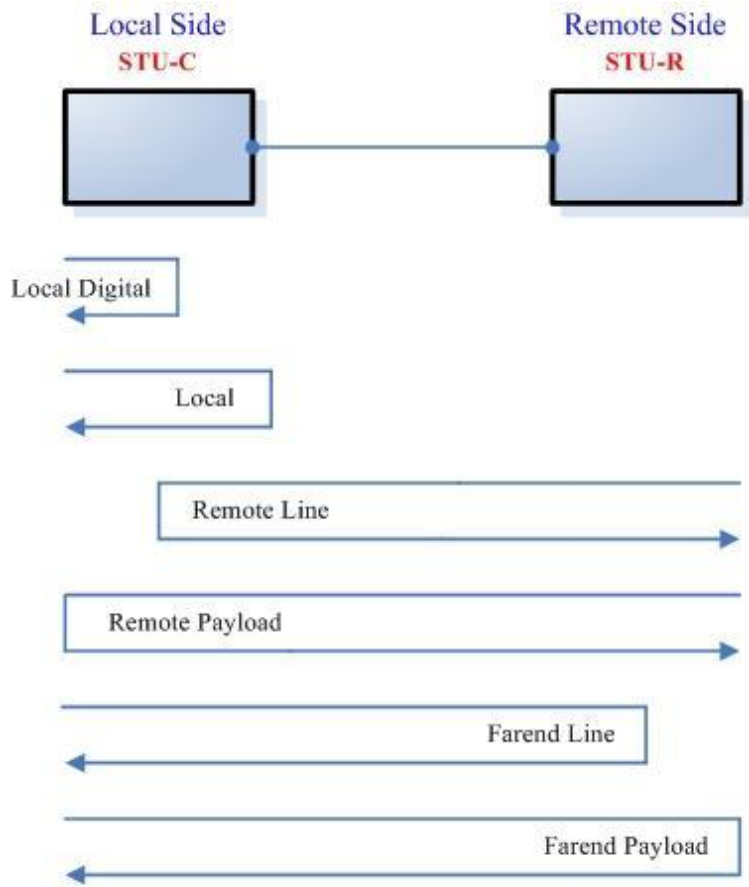

E1 Interface

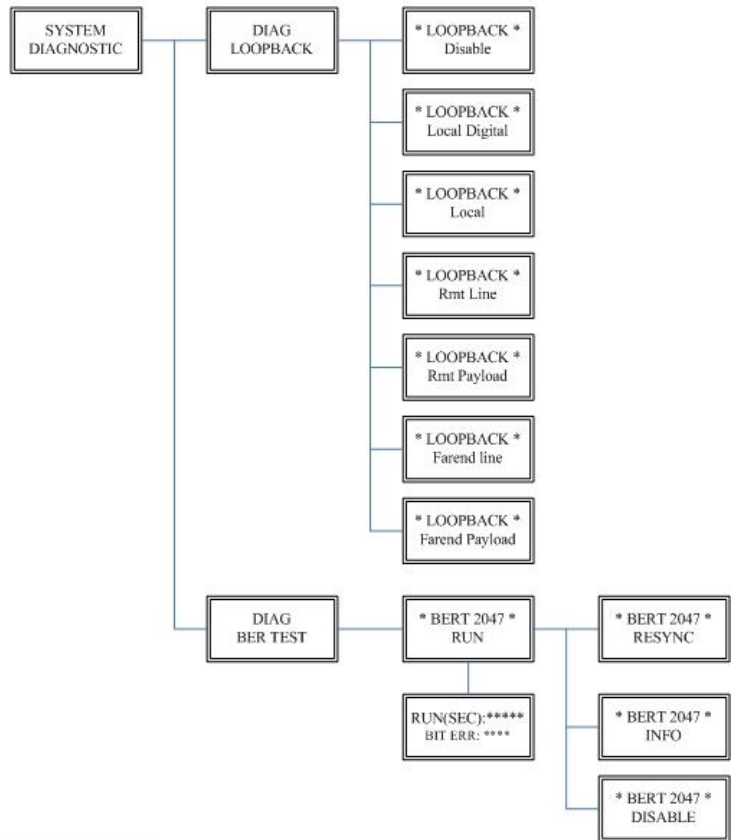

Serial Interface

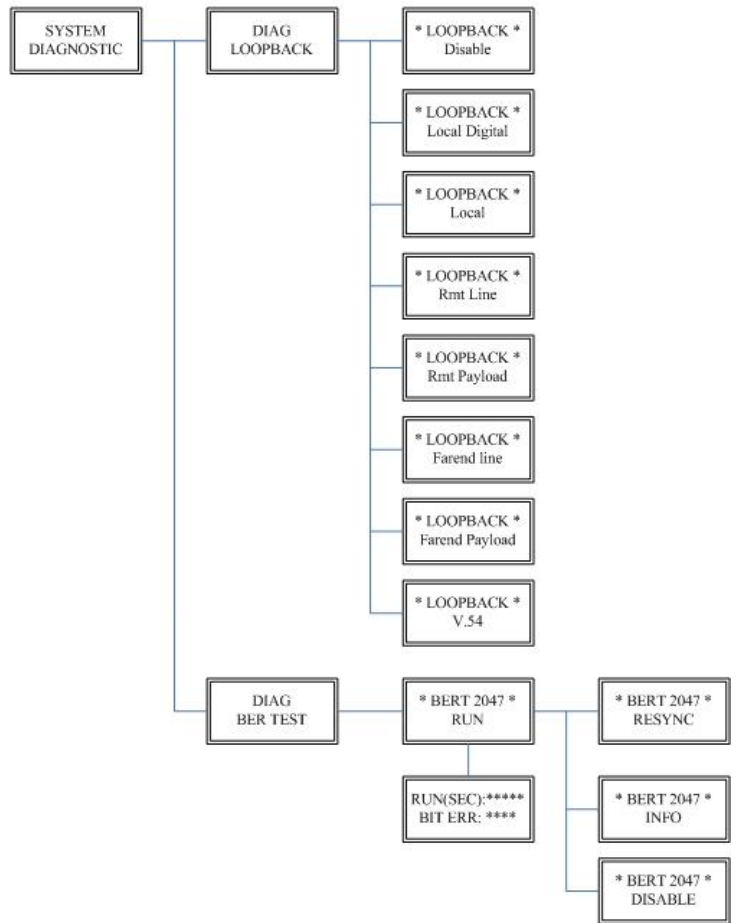

3.7.2 BER Test function

SYSTEM DIAGNOSTIC → DIAG BER TEST

This is the internal Bit Error Rate Tester (BERT) for complete testing of local and remote modem and the link quality without any external test equipment.

This built-in Bit Error Rate Test generator can generate a standard 2047 ($2^{11}-1$) test pattern.

```
DIAG
BER TEST
```

```
*BERT 2047*
RUN
```

When the BERT doesn't have Bit Errors, it shows zero. Otherwise, it will show some number counter.

RUN(SEC) item shows the time elapsed in seconds

```
RUN(SEC): 00001
BIT ERR: 00000
```

If there is NO SYNC on bit error message, it is because the testing path hasn't been connected.

```
RUN(SEC): 00001
BIT ERR: NO SYNC
```

Press ENTER key on this display message, it will re-sync again.

```
*BERT 2047*
RESYNC
```

Press ENTER key on this display message, it will show the real time status of this testing.

```
*BERT 2047*
INFO
```

If you want to exit the BERT, please press **ENTER** key from this display message.

```
*BERT 2047*
DISABLE
```

4 Parameters Table

There are many parameters tables for end user easily to write down all setting of devices before installing those on sites.

4.1 NTU and SHDSL parameters

NTU	Type	<input type="checkbox"/> STU-R	<input type="checkbox"/> STU-C-INTCLK	<input type="checkbox"/> STU-C-EXTCLK
SHDSL	Annex	<input type="checkbox"/> A	<input type="checkbox"/> B	<input type="checkbox"/> F <input type="checkbox"/> G
	PSD	<input type="checkbox"/> SYM	<input type="checkbox"/> ASYM	
	SNR Margin	(-10~21)		
	Pair Mode	<input type="checkbox"/> 1 Pair	<input type="checkbox"/> 2 pair	

If using 1 pair (2-wire) models, no Pair Mode item.

4.2 E1 parameters

E1	Channel	<input type="checkbox"/> PCM31	<input type="checkbox"/> PCM31C	<input type="checkbox"/> PCM30	<input type="checkbox"/> PCM30C	<input type="checkbox"/>
	Pass Through	<input type="checkbox"/> Off	<input type="checkbox"/> On			
	Slot Number					
	First Slot					
	Code	<input type="checkbox"/> HDB3	<input type="checkbox"/> AMI			
	AIS	<input type="checkbox"/> Off	<input type="checkbox"/> On			
	Build Outs	<input type="checkbox"/> 75 Ohm	<input type="checkbox"/> 120 Ohm			

When SHDSL.bis using 2-pairs (4-wires), the E1 time slot number can only use even number

When E1 framer is PCM31C and PCM30C and set pass through ON, no fractional function can be use.

4.3 Serial parameters

Serial	Interface	<input type="checkbox"/> V.35 <input type="checkbox"/> X.21			
	Data Rate	<input type="checkbox"/> Nx64K			
		1 Pair	Annex A/B	(1~36)	
	Clock	<input type="checkbox"/> Normal	<input type="checkbox"/> Inverse		
	RTS	<input type="checkbox"/> On	<input type="checkbox"/> From DTE		
	CTS	<input type="checkbox"/> On	<input type="checkbox"/> Off	<input type="checkbox"/> From RTS	
	DSR	<input type="checkbox"/> On	<input type="checkbox"/> Off	<input type="checkbox"/> From DTR	
	DCD	<input type="checkbox"/> On	<input type="checkbox"/> Off	<input type="checkbox"/> From DSL	
Delay	<input type="checkbox"/> 0mS	<input type="checkbox"/> 1mS	<input type="checkbox"/> 2mS	<input type="checkbox"/> 3mS	

5 Configuration with Console Port



This chapter will deal with the details of configuration and operation of this product via console port with terminal emulation program. The configuration of the SHDSL.bis NTU is performed via a menu-driven embedded software, using a standard ASCII terminal or a PC running a terminal emulation application connected to the rear panel CONSOLE port.

Windows includes a terminal emulation program called HyperTerminal. Connect the appropriated communication port from the PC to this device. After the physical connection is made, you are ready to configure this product. Make sure you have connected the supplied RS-232C serial cable (DB9F to RJ-45 Plug) to the console port on the rear panel of this product.

Run the terminal emulation program such as Hyper Terminal with the following setting:

Emulation: VT-100 compatible

Band rate: 115200, Data bits: 8, Parity: None, Stop Bits: 1, Flow Control: None

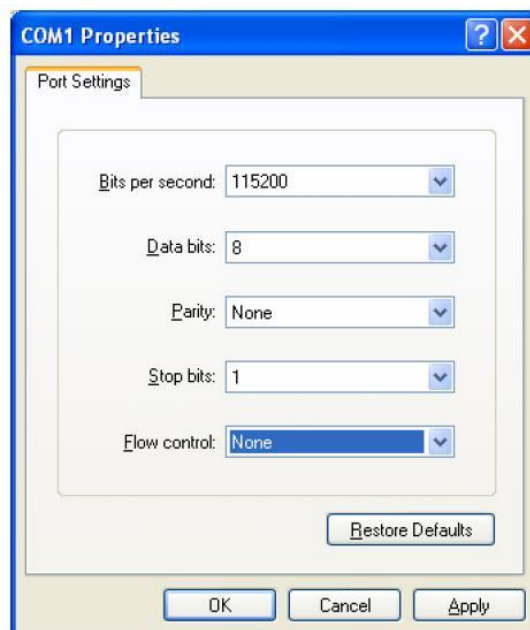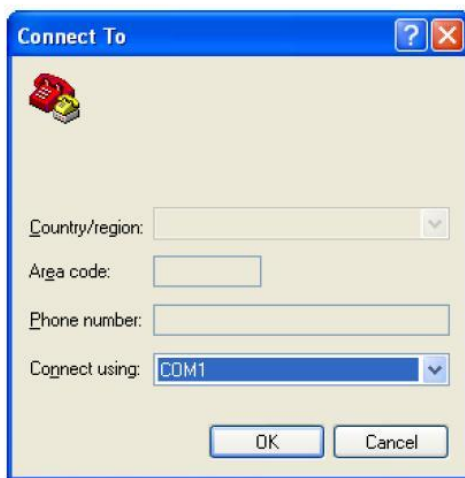

5.1 Login Procedure

At the start up screen, you will see:

```
DownLoad FPGA Code 000120f1/000120f1...Ok
SHDSL.bis (E1) Interface, STU_R Mode
Model = 5099B-4W/E1/T1/SER/ETH Software Version = 1.14.08 FPGA Version = 1.30
MCSV 14D9-0000-11416201 / 14D2-0000-114DBEC5

Load SDFE4 FW...
SDFE-4: Firmware download complete!

Press SPACE key to enter console mode configuration!
```

Press the SPACE key until the login screen appears. When you see the login screen, you can logon to device. Username use “**admin**”. When the system prompts you for a password, type “**admin**” to enter is O.K.

```
User: admin
Password: *****
```

5.2 Window structure

After you type the password, it will display the main menu.


```
SHDSL.BIS NTU
-----
>> setup          Configure system
   status        Show running system status
   show          View system configuration
   reboot        Reset and boot system
   upgrade       Console software upgrade
   exit          Quit system
-----
Command:setup <more...>
Message:
-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

Above captured screen shows the common structure for all windows used throughout the configuration console terminal. From top to bottom, the window is divided into four major sections.

- The very top line displays the product name as "SHDSL.BIS NTU".
- Next a block of commands is listed where the ">>" symbol indicates the current cursor placeholder.
- The next block down is the "command" section. The command that is selected and ready for execution is displayed after the "Command:" prompt. The "<more...>" designation indicates that there are other sub menus for this command. The "Message:" field is used to display any special system messages or warnings.
- Finally, at the very bottom of the screen is a help command line and reminder of the currently available command keys. In most cases, the keyboards four cursor keys can be used to navigate all the menu system. If for some reason your keyboard's cursor keys are not supported in the terminal emulation software, you may use the keys listed on the help command line.

Menu Commands

Before changing the configuration, familiarize yourself with the operations listed in the following table. The operation list will be shown on the window.

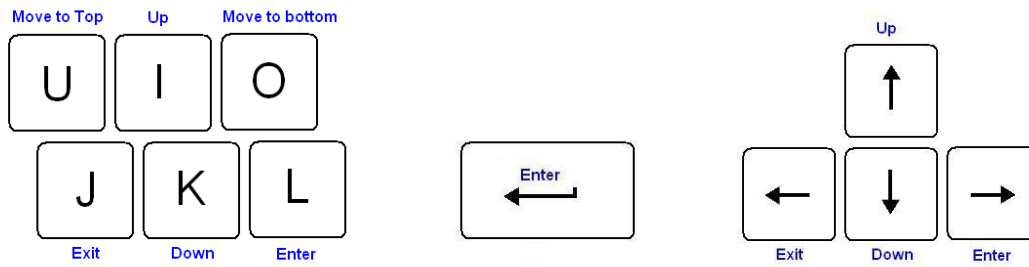


Keypads	Description
[UP] or I	Move to above field in the same level menu
[DOWN] or K	Move to below field in the same lever menu
U	Move to top field in the same level menu
O	Move to bottom field in the same level menu
[LEFT] or J	Move back to previous menu (Exit)
[RIGHT] , L or [ENTER]	Move forward to submenu(Enter)
[TAB]	To choose another parameters
Ctrl + C	To quit the show data display screen

5.3 Main Menu Summary

The main menu is prompted as following:

Menu Title	Function
Setup	Use this menu to setup SHDSL type, SHDSL parameters and E1 /SERIAL parameters or restore factory default setting.
Status	Use this menu to show SHDSL status, E1/SERIAL status and statistics or clear the statistics
Show	Use this menu to show general information, all configurations and all configurations in command script.
Reboot	Use this menu to reset and reboot the system
Diag	Use this menu to setup diagnostic utility
Upgrade	Use this menu to upgrade kernel and FPGA.
Exit	Use this menu to exit

Menu tree:

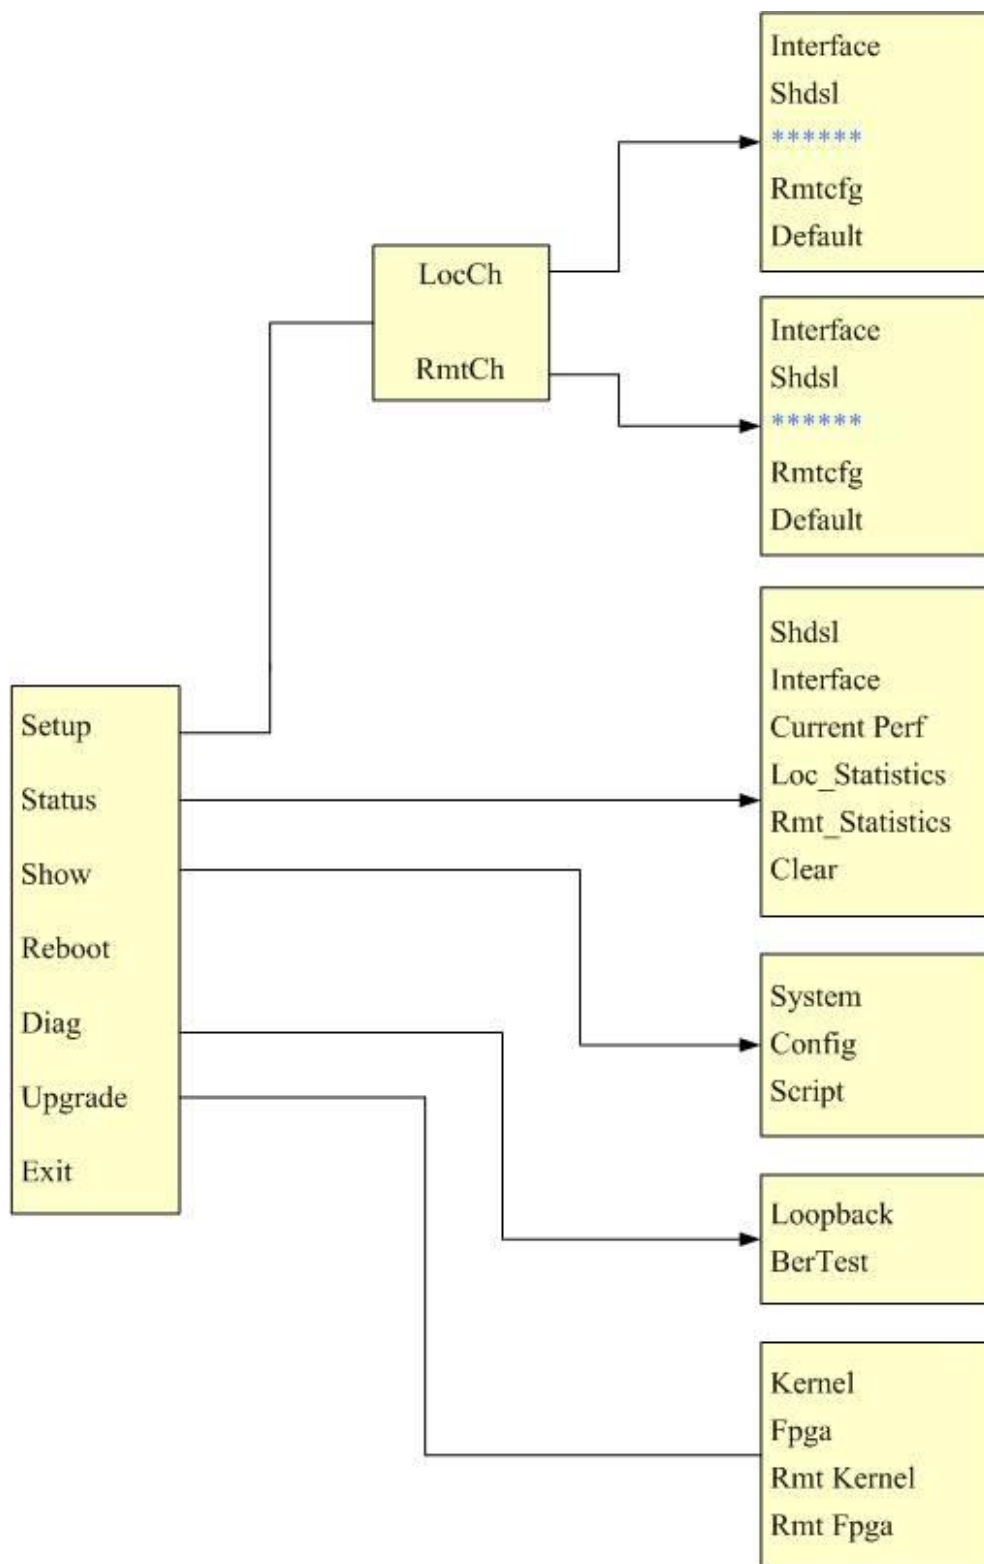

The item “*****” according to which interface modes you have setup.

5.4 Configuration

This section provides information about the configuration of SHDSL.Bis NTU. Follow the procedures:

In the main menu, select **setup** and press [ENTER] or [RIGHT]

```
SHDSL.BIS NTU
-----
>> setup          Configure system
   status         Show running system status
   show           View system configuration
   reboot         Reset and boot system
   diag           Diagnostic utility
   upgrade        Console software upgrade
   exit           Quit system
-----
Command:setup <more...> _
Message:
-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The screen will prompt as following:

```
SHDSL.BIS NTU
-----
>> LocCh          Setup Local Channel
   RmtCh          Setup Remote Channel
-----
Command:LocCh <CR> _
Message:
-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

For setup the local side, select **LocCH** and press [ENTER] or [RIGHT].

Otherwise, setup the remote side by select **RmtCH**.

```

CH A                                SHDSL.BIS NTU
-----
>> Interface      Configure NTU Interface
  Shdsl           Configure SHSDL Parameters
  E1              Configure E1 Parameters
  Rmtcfg          Enable/Disable Remote Config
  Default         Restore NTU's Default Setting

-----

Command:Interface <CR>
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

5.4.1 Configure NTU Interface

Setup Interface

```

CH A                                SHDSL.BIS NTU
-----
>> Interface      Configure NTU Interface
  Shdsl           Configure SHSDL Parameters
  E1              Configure E1 Parameters
  Serial          Configure Serial Parameters
  Rmtcfg          Enable/Disable Remote Config
  Default         Restore NTU's Default Setting

-----

Command:Interface <CR>
Message: Please input the following information.

SHDSL Interface (TAB Select) <E1+Serial>: E1+Serial



-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

If the SHDSL.bis NTU is the multi-interfaces model, it will display more types of interfaces that can be selected.

Press [TAB] key to choose their interface types.

Models	Setup Interface
<p>E1 interface model</p> <p>5099N-AC/2W/E1 5099N-DC/2W/E1 5099N-DA/2W/E1 5099N-AC/4W/E1 5099N-DC/4W/E1 5099N-DA/4W/E1</p>	<div style="text-align: center;">  </div>
<p>Serial interface model</p> <p>5099N-AC/2W/SER 5099N-DC/2W/SER 5099N-DA/2W/SER</p>	<div style="text-align: center;">  </div>

5.4.2 Configure SHDSL parameters

This section shows how to setup the SHDSL parameters: **SHDSL Mode, Annex type, Psd Mask, SNR margin.**

Select **Shdsl**, and press [ENTER] or [RIGHT].

Setup SHDSL Parameter, Mode

```

CH A                               SHDSL.BIS NTU
-----
>> Mode           Configure SHDSL Mode
Annex             Configure SHDSL Annex
Psd               Configure SHDSL PSD Mask
Margin            Configure SHDSL SNR Margin
Pair Mode         Configure SHDSL Pair Mode

-----

Command: Mode <CR>
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
  
```

Press [TAB] to select the operating type and press enter to finish setting.

The SHDSL modes have three types: **STU-R, STU-C-INTCLK** and **STU-C-EXTCLK**

INTCLK: The device will generate the appropriate clock speed defined by the speed setting of the interface.

EXTCLK: The device will accept the clock from the interface and will use that clock to receive and transmit data across the interface.

Most applications use Internal Clock. If the DTE provides a clock with TX data, the clock can be set to External Clock.

To set the SHDSL Annex type, move the cursor to Annex and press [ENTER]. Select the annex type by using [TAB] key.

Set Up SHDSL parameter, Annex

```
CH A                               SHDSL.BIS NTU
-----
Mode                               Configure SHDSL Mode
>> Annex                           Configure SHDSL Annex
Psd                                 Configure SHDSL PSD Mask
Margin                             Configure SHDSL SNR Margin
Pair Mode                          Configure SHDSL Pair Mode

-----
Command:Annex <CR>
Message: Please input the following information.

SHDSL Annex (TAB Select) <Annex-G>: Annex-G

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The Annex has four types: A, B, F and G.

To configure the SHDSL PSD, move the cursor to **psd** and press [ENTER]. Select the parameter via [TAB] key.

Set up SHDSL parameter, PSD

```
CH A                               SHDSL.BIS  NTU
-----
Mode                               Configure SHDSL Mode
Annex                              Configure SHDSL Annex
>> Psd                             Configure SHDSL PSD Mask
Margin                             Configure SHDSL SNR Margin
Pair Mode                          Configure SHDSL Pair Mode

-----

Command:Psd <CR>
Message: Please input the following information.

SHDSL PSD Mask (TAB Select) <SYM>: SYM

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The PSD has two types: **SYM** and **ASYM**. Default setting is SYM.

To set the SHDSL Margin, move the cursor to **margin** and press [ENTER]. Select the margin via [TAB] key and key in the Next margin.

Setup SHDSL parameter, SNR Margin

```
CH A                               SHDSL.BIS  NTU
-----
Mode                               Configure SHDSL Mode
Annex                              Configure SHDSL Annex
Psd                                Configure SHDSL PSD Mask
>> Margin                          Configure SHDSL SNR Margin
Pair Mode                          Configure SHDSL Pair Mode

-----

Command:Margin <CR>
Message: Please input the following information.

SHDSL Margin <3> (-10~21): 3

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

SNR margin is an index of line connection. You can see the actual SNR margin in STATUS SHDSL. If it has larger SNR margin, it will have the better line connection. For example, if you set SNR margin in the field as 3, the SHDSL connection will drop down and reconnect when the SNR margin is lower than 3. The setting range is -10 to 21.

Setup SHDSL parameter, Pair Mode

```
CH A                               SHDSL.BIS NTU
-----
Mode                               Configure SHDSL Mode
Annex                              Configure SHDSL Annex
Psd                                Configure SHDSL PSD Mask
Margin                             Configure SHDSL SNR Margin
>> Pair Mode                       Configure SHDSL Pair Mode

-----

Command:Pair Mode <CR>
Message: Please input the following information.

SHDSL Wire Mode (TAB Select) <2 Pair>: 2 Pair_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

When using 4-wires (2-pair) models, it will show Pair Mode item on here. User can select 1 Pair or 2 Pair for the DSL connection. When using 2-wires mode, on this item.

5.4.3 Configure E1 parameters

When using on E1 interface, select the **E1** item and press [ENTER] or [RIGHT].

```
CH A                               SHDSL.BIS NTU
-----
Interface                          Configure NTU Interface
Shdsl                               Configure SHDSL Parameters
>> E1                              Configure E1 Parameters
Serial                             Configure Serial Parameters
Rmtcfg                             Enable/Disable Remote Config
Default                             Restore NTU's Default Setting

-----

Command:E1 <more...>
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The E1 setting includes the Channel (frame mode), line code, AIS and build out settings.

Setup E1 Parameter, Channel

```

CH A                                SHDSL.BIS NTU
-----
>> Channel          Configure E1 Channel
   Code             Configure E1 code
   Ais              Configure E1 AIS
   Build_outs       Configure E1 build outs

-----

Command:Channel <CR>
Message: Please input the following information.

Change E1 Channel (TAB Select) <PCM31>: PCM31

-----


<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```


Framing is required to recover the channelized E1. In transparent operation, the framing is configured as Unframed. In this case the G.SHDSL framer must be set to Nx64 with N=32. For any framing such as FAS or CAS, the G.SHDSL framer must be set to E1, then the E1 framing here may be set accordingly.

Channel	Framing
PCM31	FAS
PCM31C	FAS+CRC4
PCM30	FAS+CAS
PCM30C	FAS+CAS+CRC4
FULL	Unframed


FAS	Frame Alignment Signal uses a 7-bits pattern to establish and maintain the frame synchronization. The FAS word is located in timeslot 0 of frame. In FAS mode there are 1~31 timeslot available for use data.
CAS	Also known as time slot 16 multi-framing. It requires a multi-framing alignment signal to be present for frame sync. The Multi-frame Alignment Signal (MFAS) is inserted into the 16th timeslot of frame 0 of the 16-frame multi-frame. In CAS mode, there are 30 channels available for user data. If timeslot 16 is included in the unit's mapping, it will be disregarded.

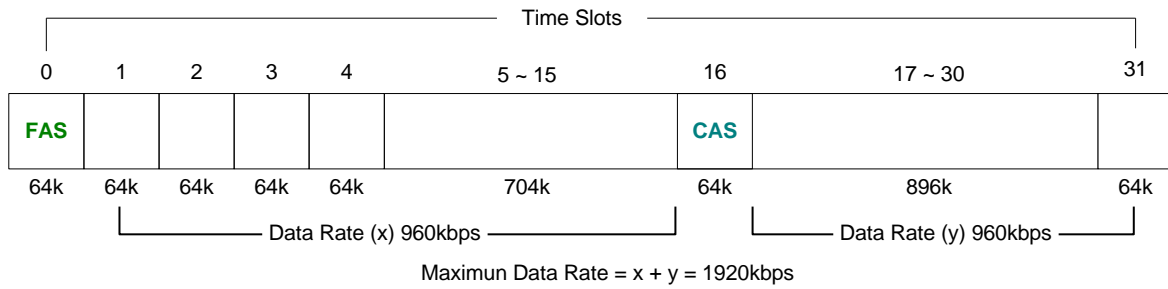


CRC4	The CRC-4 checksum bits are transmitted in the outgoing E1 data stream. Also the received signal is checked for errors. CRC-4 checksum cannot be sent in unframed mode.
Unframed	In this mode, user data is inserted into all 32 channels (64k x 32 = 2048k) of the E1 stream. The object of running without framing is to utilize the full bandwidth of the E1 line.

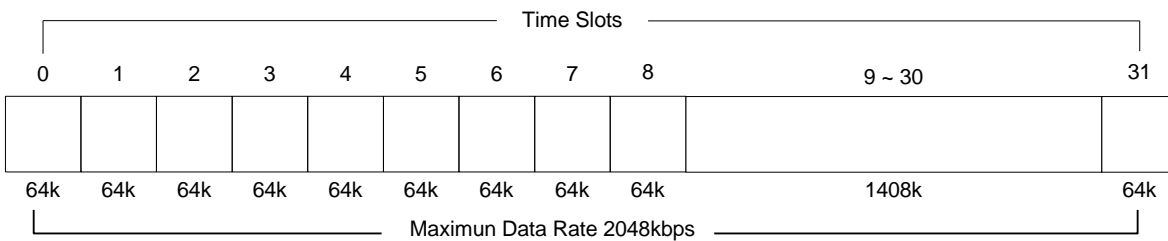

ITU 991.2 (2004) (G.SHDSL.Bis) supports data rate up to 5696Kbps, but G.703 (E1 standard) only supports data rate of 2048kbps so the maximum data rate of SHDSL line, connected with E1 DCEs, depends on data rate of E1, 2048kbps.



If the connection is E1 vs V.35 or V.35 vs E1, the frame has to be used N x 64k. In this case, the data rate depends on value of N. Same as above case, SHDSL and V35 can support up to 5696kbps data rate, but E1 supports maximum data rate of 2048kbps (32 x 64k).

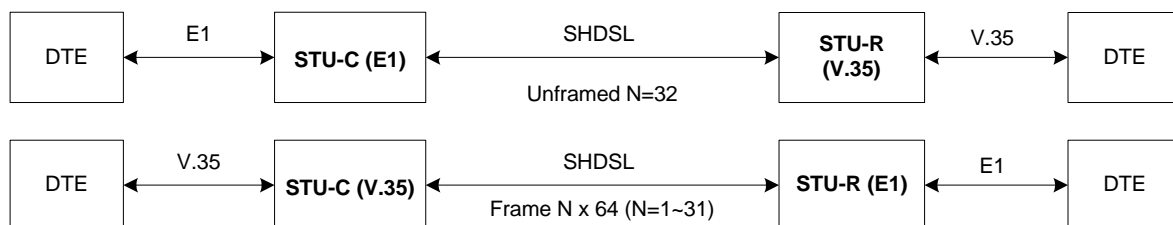


Time slots, N value, are placed in the frame. If time Slot Number is 1 from 1~31 (N=1~31), it is Fractional E1. If time Slot Number is 32 (N=32), it is unframed.

Fractional E1

- **PCM31 and PCM31C**

For fractional E1 (FE1), the data rate is from 64k (N=1) to 1984k(N=31), according to the E1 framing. If the E1 frame is **PCM31** (FAS) or **PCM31C** (FAS+CRC4), there are 1~31 available time slot for use data. For example, if the data rate of SHDSL line set to be 512k, the time slot number is 8 and first time slot number is 1. The frame is shown as below.

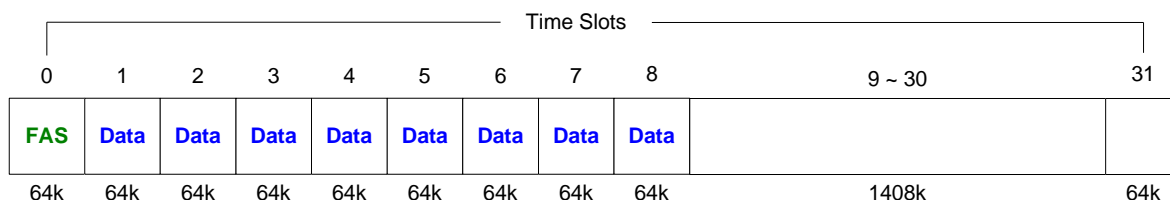


The First Time Slot setting of PCM31 (FAS) and PCM31C (FAS+ CRC4) have to follow the rule:

$$\text{First Time Slot} \leq 31 - \text{Time Slot Number}$$

- **PCM30 and PCM30C**

Using the E1 framing of **PCM30** (FAS+CAS) or **PCM30C** (FAS+CAS+CRC4), the FAS will occupy Time Slot 0 and CAS Time Slot 16. There are only 30 Time Slot left for data. On the other hand, the data rate is 1920kbps.

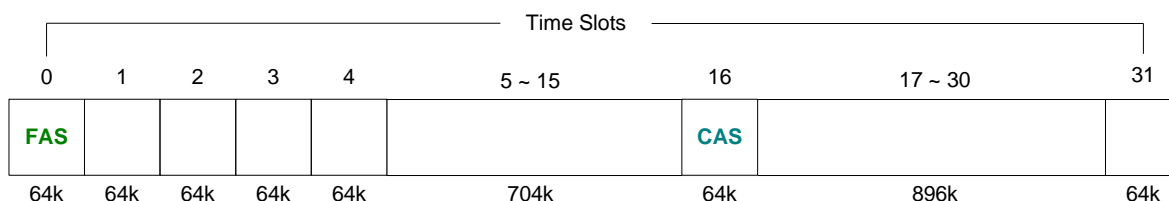


The First Time Slot setting of PCM30(FAS+CAS) and PCM30C(FAS+CAS+CRC4) have to follow the rule:

$$\text{First Time Slot} \leq 30 - \text{Time Slot Number}$$

(Cannot use Time Slot 16)

Unframed E1

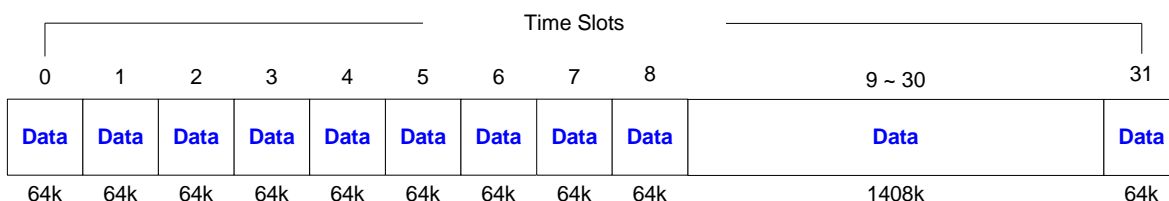

In Unframed E1, user data are inserted into all 32 channels (64k x 32 = 2048k) of the E1 stream.

The object of running without framing is to utilize the full bandwidth of the E1 line.

Setup E1 Parameter, Pass Through

```
CH A                               SHDSL.BIS  NTU
-----
>> Channel          Configure E1 Channel
   Code             Configure E1 code
   Ais              Configure E1 AIS
   Build_outs       Configure E1 build outs

-----
Command:Channel <CR>
Message: Please input the following information.
Change E1 Channel (TAB Select) <PCM30>: PCM30
Change E1 Pass Through (TAB Select) <Off>: Off_

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

When set the E1 channel on PCM31C, PCM31, PCM30C and PCM30, there have E1 Pass Through selection item. You can set it Off or On for your application.

Note:


When SHDSL.bis using 2-pairs (4-wires), the time slot number can only use even number.

When E1 framer is PCM31C and PCM30C and set pass through ON, no fractional function can be use.


Table of Pass through function with user data rate vs. DSL line rate (for 2-wires)

Channel	Time Slot number	1 st Time Slot	User data rate	Pass Through: On	Pass Through: Off
				DSL line rate	DSL line rate
PCM31/PCM31C	31	1	31	32	31
PCM30/PCM30C	30	1	30	32	30
PCM31/PCM31C	30	1	30	32	30
PCM30/PCM30C	29	1	29	32	29
PCM31/PCM31C	29	1	29	30	29
PCM30/PCM30C	28	1	28	30	28
PCM31/PCM31C	28	1	28	29	28
PCM30/PCM30C	27	1	27	29	27
PCM31/PCM31C	27	1	27	28	27
PCM30/PCM30C	26	1	26	28	26
PCM31/PCM31C	26	1	26	27	26
PCM30/PCM30C	25	1	25	27	25
PCM31/PCM31C	25	1	25	26	25
PCM30/PCM30C	24	1	24	26	24
◦	◦	◦	◦	◦	◦
◦	◦	◦	◦	◦	◦
PCM31/PCM31C	15	10	15	16	15
PCM30/PCM30C	14	10	14	16	14
PCM31/PCM31C	14	5	14	15	14
PCM30/PCM30C	13	5	13	15	13
◦	◦	◦	◦	◦	◦
PCM31/PCM31C	10	5	10	11	10
PCM30/PCM30C	9	5	9	11	9
◦	◦	◦	◦	◦	◦
PCM31/PCM31C	4	1	4	5	4
PCM30/PCM30C	3	1	3	5	3
PCM31/PCM31C	3	1	3	4	3
PCM30/PCM30C	2	1	2	4	3
PCM31/PCM31C	2	1	2	3	3
PCM30/PCM30C	1	1	1	3	3
PCM31/PCM31C	1	1	1	3	3


For example (1), use channel as PCM30 or PCM30C (with time slot number is 30 and first time slot is 1) as following show. When Pass Through set **Off**, the DSL transfer data is not including the time slot of FAS and CAS. The information of FAS and CAS on remote is made by method of re-creation. The DSL line rate is 30.

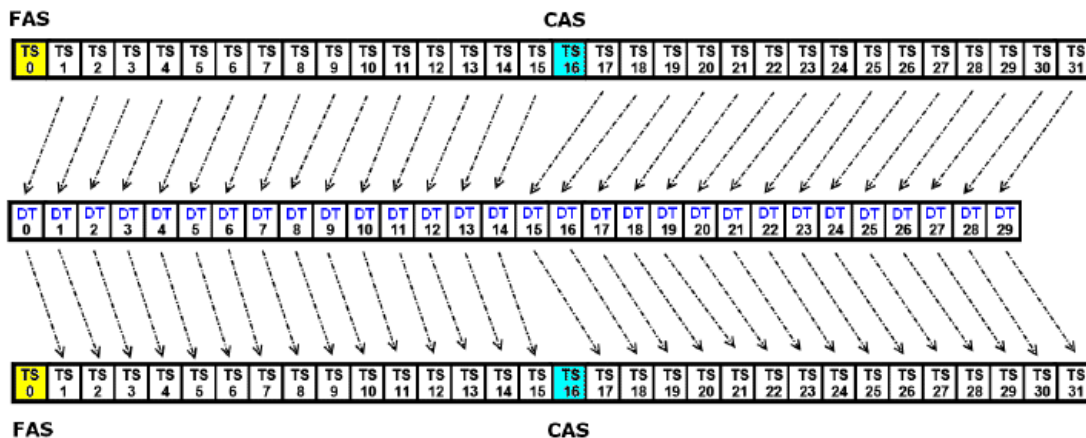

The following shows when Pass Through set **On**, the DSL transfer data is including the time slot of FAS and CAS. The DSL line rate is 32.

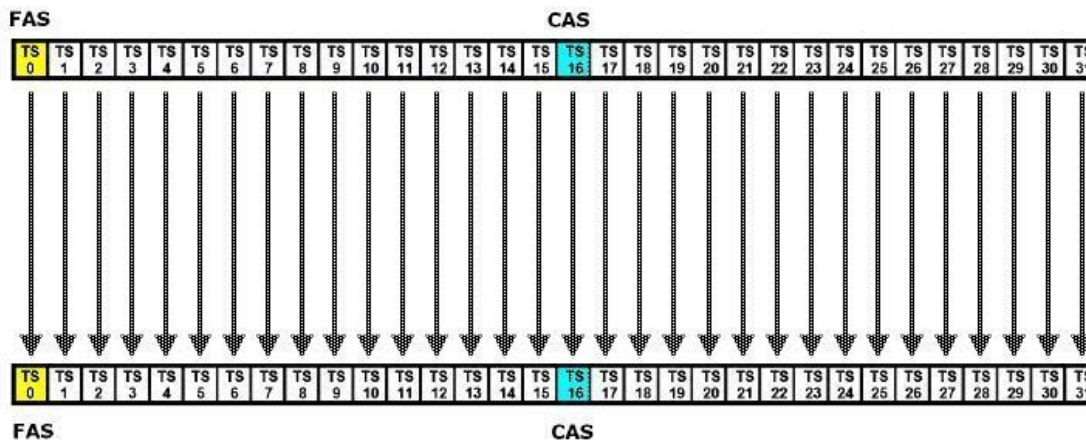


For example (2), use channel as PCM30 or PCM30C (with time slot number is 10 and first time slot is 1) as following show. When Pass Through set **Off**, the DSL transfer data is not including the time slot of FAS and CAS. The information of FAS and CAS on remote is made by method of re-creation. The DSL line rate is 10.

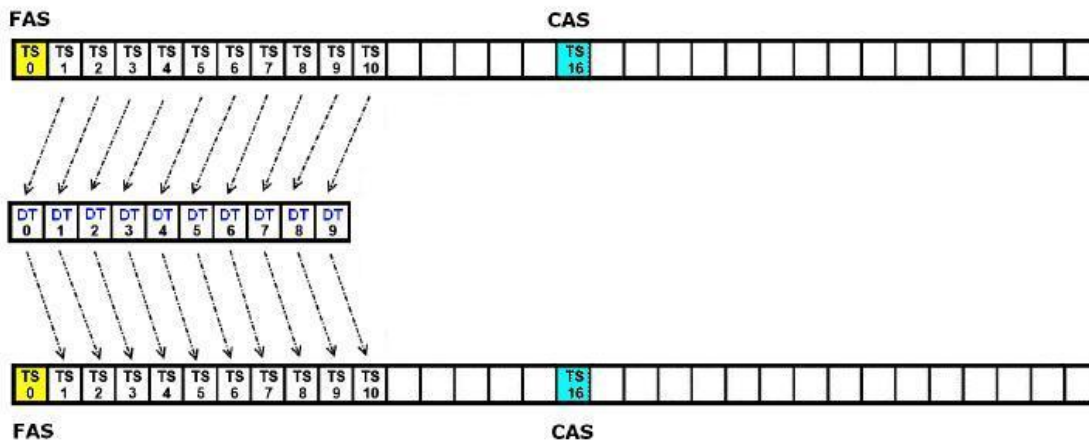

The following shows when Pass Through set **On**, the DSL transfer data is including the time slot of FAS and CAS.

The DSL line rate is 12.

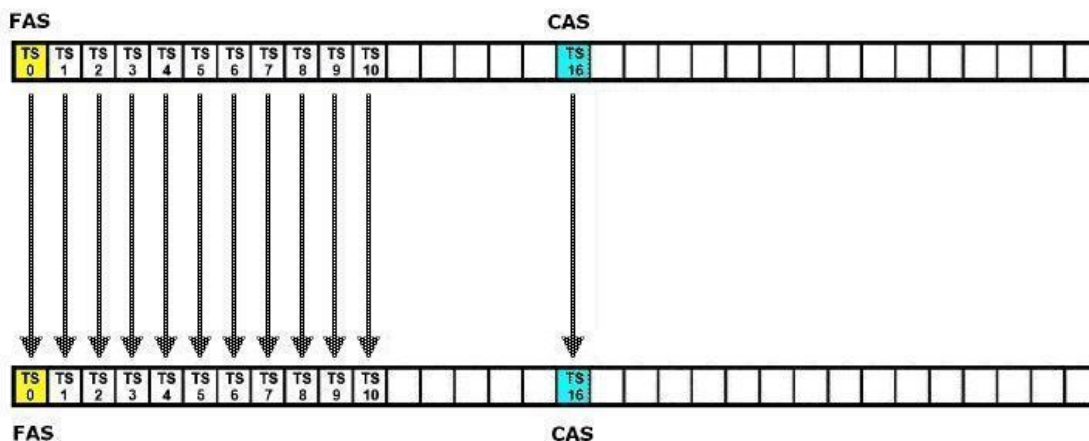

Setup E1 Parameter, Line Code

```

CH A                               SHDSL.BIS NTU
-----
Channel                            Configure E1 Channel
>> Code                            Configure E1 code
Ais                                 Configure E1 AIS
Build_outs                          Configure E1 build outs

-----

Command:Code <CR>
Message: Please input the following information.

Change E1 Line Code (TAB Select) <HDB3>: HDB3_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

The G.SHDSL.Bis NTU supports two different line code. HDB3 is the most popular and preferred line coding and is also the default setting. AMI line coding is also selectable.

HDB3	In this line coding, the transmitter substitutes a deliberate bipolar violation when excessive zeros in the data stream are detected. The receiver recognizes these special violations and decodes them as zeros. This method enables the network to minimize pulse density requirements. Unless AMI is required for your application, HDB3 should be used whenever possible.
AMI	Alternate Mark Inversion defines a pulse as a “mark,” a binary one, as opposed to a zero. In an E1 network connection, signals are transmitted as a sequence of one and zero. One is sent as pulse, and zero is sent as spaces, i.e. no pulse. Every other pulse is inverted from the previous pulse in polarity, so that the signal can be effectively transmitted. This means, however, that a long sequence of zeros in data stream will cause problems, since the NTU receiving the signal relies on the signal to recover the 2048kbps clock.

Setup E1 Parameter, AIS

```

CH A                               SHDSL.BIS NTU
-----
Channel                             Configure E1 Channel
Code                                 Configure E1 code
>> Ais                               Configure E1 AIS
Build_outs                           Configure E1 build outs

-----

Command:Ais <CR>
Message: Please input the following information.

Change E1 Ais (TAB Select) <Off>: Off


-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom


```

AIS (Alarm Indication Signal) is a method to inform the remote connection that there is a signal or sync problem with the E1. AIS is only valid in framed mode E1, not in Unframed E1. The setting here of AIS enabled (on) or not (off) and is for testing with AIS. When enabled, the E1 will transmit the AIS and it should be confirmed at the remote device (AIS indication lit). After testing, please turn AIS back off.

- Example 1: When STU-R E1 RX line is dropped, STU-R sends the status to STU-C via EOC or command, and then STU-C will send AIS (Alarm Indication Signal) to DTE while AIS function is enabled.

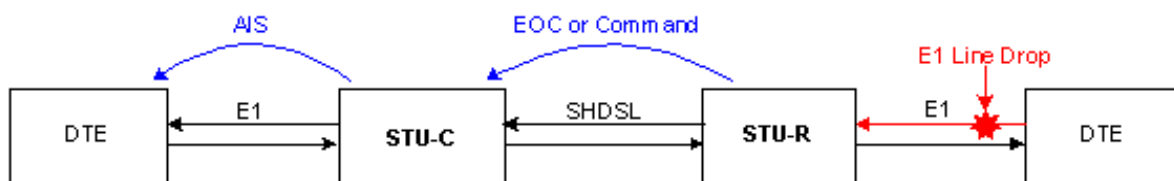

- Example 2: When SHDSL connection drops, STU-R and STU-C both send AIS (Alarm Indication Signal) to DTE in the same time while AIS function is enabled.

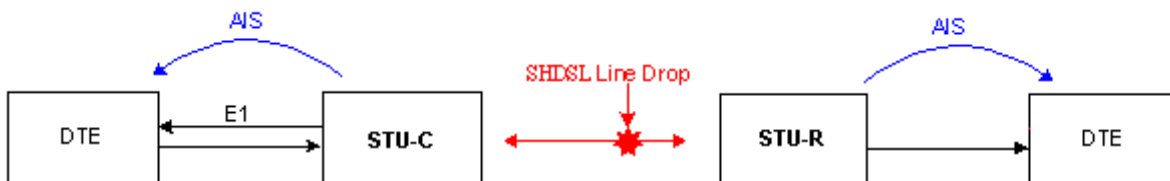

Setup E1 Parameter, Build Out

```
CH A                               SHDSL.BIS NTU
-----
Channel          Configure E1 Channel
Code             Configure E1 code
Ais              Configure E1 AIS
>> Build_outs   Configure E1 build outs

-----

Command:Build_outs <CR>
Message: Please input the following information.

Change E1 Build Outs (TAB Select) <120 Ohm>: 120 Ohm_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The SHDSL.Bis NTU can support both unbalanced E1 at 75 ohms (BNC) and balanced E1 at 120 ohms (RJ-48C). The settings for impedance are made here under the build out menu setting.

5.4.4 Configure Serial parameters

When using the Serial interface, select the Serial item and press [ENTER] or [RIGHT]. The serial settings include the data rate, clocking and handshaking lines setup.

Setup Serial Parameter, Interface

```
CH A                               SHDSL.BIS NTU
-----
>> Interface      Configure Serial Interface
Data rate         Configure Serial Data Rate (N*64)
Clock             Configure Serial clock
Data              Configure Serial data
Rts               Configure Serial rts
Cts               Configure Serial cts
Dsr               Configure Serial dsr
Dcd               Configure Serial dcd
Delay             Configure Serial delay

-----

Command:Interface <CR>
Message: Please input the following information.

Change Serial Interface (TAB Select) <V35>: V35

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

There are two interfaces: V.35 and X.21.

Setup Serial Parameter, Data Rate - Rate type

```
CH A                               SHDSL.BIS  NTU
-----
>> Interface      Configure Serial Interface
  Data rate      Configure Serial Data Rate (N*64)
  Clock          Configure Serial clock
  Data           Configure Serial data
  Rts            Configure Serial rts
  Cts            Configure Serial cts
  Dsr            Configure Serial dsr
  Dcd            Configure Serial dcd
  Delay          Configure Serial delay

-----
Command:Data rate <CR>
Message: Please input the following information.

rate Type (TAB Select) <N64>: N64_

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

There is Nx64K mode and T1 mode. When other side as T1 interface and unframed mode connect to this side as Serial interface, we must set Serial rate mode as T1 mode.

Setup Serial Parameter, Data Rate

```
CH A                               SHDSL.BIS  NTU
-----
>> Interface      Configure Serial Interface
  Data rate      Configure Serial Data Rate (N*64)
  Clock          Configure Serial clock
  Data           Configure Serial data
  Rts            Configure Serial rts
  Cts            Configure Serial cts
  Dsr            Configure Serial dsr
  Dcd            Configure Serial dcd
  Delay          Configure Serial delay

-----
Command:Data rate <CR>
Message: Please input the following information.

Change Serial Nx64 (TAB Select) <32>: 32_

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

For 2-wires with Annex A and B, the rate can be adjusted in increments of 64kbps from 64kbps to 2304kbps (N=1~36).

Setup Serial Parameter, Clock Polarity

```

CH A                               SHDSL.BIS  NTU
-----
Interface      Configure Serial Interface
Data rate     Configure Serial Data Rate (N*64)
>> Clock      Configure Serial clock
Data          Configure Serial data
Rts           Configure Serial rts
Cts           Configure Serial cts
Dsr           Configure Serial dsr
Dcd           Configure Serial dcd
Delay         Configure Serial delay

-----
Command:Clock <CR>
Message: Please input the following information.

Change Serial Clock (TAB Select) <normal>: normal_

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

The data port clock polarity may be adjusted to solve some rare clocking issues. The default setting is 'Normal' clock polarity, where data is sent on the negative transition of the clock, while the option exists to set inverse clock polarity where data is sent on the positive clock transition.

Setup Serial Parameter, Data Polarity

```

CH A                               SHDSL.BIS  NTU
-----
Interface      Configure Serial Interface
Data rate     Configure Serial Data Rate (N*64)
Clock         Configure Serial clock
>> Data       Configure Serial data
Rts           Configure Serial rts
Cts           Configure Serial cts
Dsr           Configure Serial dsr
Dcd           Configure Serial dcd
Delay         Configure Serial delay

-----
Command:Data <CR>
Message: Please input the following information.

Change Serial Data (TAB Select) <normal>: normal

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

The data polarity may be adjusted to solve some data transfer issues. The default setting is 'Normal' data polarity, where data is sent on the negative transition, while the option exists to set inverse data polarity where data is sent on the positive transition.

Setup Serial Parameter, RTS

```

CH A                               SHDSL.BIS  NTU
-----
Interface      Configure Serial Interface
Data rate      Configure Serial Data Rate (N*64)
Clock          Configure Serial clock
Data           Configure Serial data
>> Rts         Configure Serial rts
Cts            Configure Serial cts
Dsr            Configure Serial dsr
Dcd            Configure Serial dcd
Delay          Configure Serial delay

-----
Command:Rts <CR>
Message: Please input the following information.

Change Serial RTS (TAB Select) <on>: on_

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

The behavior of the RTS (Request To Send) signal may be set in one of two ways. When set 'on', the RTS signal is always forced on (active low), when set 'from DTE' the RTS signal will follow the DTE's condition. The default setting for RTS is on.

Setup Serial Parameter, CTS

```

CH A                               SHDSL.BIS  NTU
-----
Interface      Configure Serial Interface
Data rate      Configure Serial Data Rate (N*64)
Clock          Configure Serial clock
Data           Configure Serial data
Rts            Configure Serial rts
>> Cts         Configure Serial cts
Dsr            Configure Serial dsr
Dcd            Configure Serial dcd
Delay          Configure Serial delay

-----
Command:Cts <CR>
Message: Please input the following information.

Change Serial CTS (TAB Select) <from_rts>: from_rts_

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

The behavior of the CTS (Clear To Send) signal may be set in one of three ways. When set 'on', the CTS signal is always forced on (active low), when set 'off' the signal is always forced off, or CTS will follow RTS (Request To Send) condition of 'on' for RTS on 'off' for RTS off. The default setting for CTS is to follow RTS.

Setup Serial Parameter, DSR

```
CH A                               SHDSL.BIS  NTU
-----
Interface      Configure Serial Interface
Data rate      Configure Serial Data Rate (N*64)
Clock          Configure Serial clock
Data           Configure Serial data
Rts            Configure Serial rts
Cts            Configure Serial cts
>> Dsr         Configure Serial dsr
Dcd            Configure Serial dcd
Delay          Configure Serial delay

-----
Command:Dsr <CR>
Message: Please input the following information.

Change Serial DSR (TAB Select) <on>: on

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The behavior of the DSR (Data Set Ready) signal may be set in one of three ways. When set 'on', the DSR signal is always forced on (active low), when set 'off' the signal is always forced off or DSR will follow DTR (Data Terminal Ready) condition of 'on' for DTR on or 'off' for DTR off. The default setting for DSR is on.

Setup Serial Parameter, DCD

```
CH A                               SHDSL.BIS  NTU
-----
Interface      Configure Serial Interface
Data rate      Configure Serial Data Rate (N*64)
Clock          Configure Serial clock
Data           Configure Serial data
Rts            Configure Serial rts
Cts            Configure Serial cts
Dsr            Configure Serial dsr
>> Dcd         Configure Serial dcd
Delay          Configure Serial delay

-----
Command:Dcd <CR>
Message: Please input the following information.

Change Serial DCD (TAB Select) <from_dsl>: from_dsl

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The behavior of the DCD (Data Carrier Detect) signal may be set in one of three ways. When set 'on', the DCD signal is always forced on (active low), when set 'off' the signal is always forced off, or DCD will follow the DSL condition of 'on' for DSL link or 'off' for no link. The default setting for DCD is to follow the DSL link status.

Setup Serial Parameter, Delay

```
CH A                               SHDSL.BIS NTU
-----
Interface      Configure Serial Interface
Data rate      Configure Serial Data Rate (N*64)
Clock          Configure Serial clock
Data           Configure Serial data
Rts            Configure Serial rts
Cts            Configure Serial cts
Dsr            Configure Serial dsr
Dcd            Configure Serial dcd
>> Delay      Configure Serial delay

-----

Command:Delay <CR>
Message: Please input the following information.

Change Serial Delay <3> (0~3):

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The delay setting is used to cause a delay for CTS to follow RTS. The delay setting may be set 0, 1, 2 or 3 milliseconds. The default setting is 3 milliseconds.

It works only for the setting: *CTS follow RTS* and *RTS follow from DTE*.

5.4.5 Remote configuration

You can set the “Enable/Disable function” to let the remote side configure parameters to this device remotely.

```
CH A                               SHDSL.BIS NTU
-----
Interface      Configure NTU Interface
Shdsl          Configure SHDSL Parameters
Ethernet       Configure Ethernet Parameters
>> Rmtcfg      Enable/Disable Remote Config
Default        Restore NTU's Default Setting

-----

Command:Rmtcfg <CR>
Message: Please input the following information.

Rmtcfg (TAB Select) <Enable>: Enable_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

5.4.6 Restore factory default

The G.SHDSL.Bis NTU can restore all settings to the original factory settings simply by going to the setting menu, selecting the Default item, and then press ENTER. The system will ask for a y(es) or n(o) confirmation followed by an ENTER.

```

CH A                               SHDSL.BIS NTU
-----
Interface      Configure NTU Interface
Shdsl          Configure SHDSL Parameters
Ethernet       Configure Ethernet Parameters
Rmtcfg         Enable/Disable Remote Config
>> Default    Restore NTU's Default Setting

-----

Command:Default <CR>
Message: Please input the following information.

Are you sure? (y/n): y

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

The default values are as the following:

Interface	Setup Parameter	Default value
SHDSL	setup Interface	E1 <i>For Multi-interface model only</i>
	setup Shdsl Mode	STU-R
	setup Shdsl Annex	Annex-G
	setup Shdsl Psd	SYM
	setup Shdsl Startup Margin	0
	setup Shdsl Pair Mode	1 Pair <i>For 2 pairs (4-wires) model only</i>
E1	setup E1 Channel	Full
	setup Pass Through	Off
	setup E1 Slot Number	32
	setup E1 First Slot	1
	setup E1 code	HDB3
	setup E1 AIS	Off
	setup E1 Build Outs	120 Ohm
Serial	setup Serial Interface	V35
	setup Serial Data Rate Type	Nx64K
	setup Serial Data Rate	32
	setup Serial Clock	Normal
	setup Serial Data	Normal
	setup Serial Rts	on
	setup Serial Cts	from_rts
	setup Serial Dsr	on
	setup Serial Dcd	from_dsl
	setup Serial Delay	3

5.5 Reboot

In main menu, move the cursor to **reboot** and press [ENTER]. The device will reboot after confirming.

```
SHDSL.BIS NTU
-----
  setup          Configure system
  status         Show running system status
  show          View system configuration
>> reboot       Reset and boot system
  diag          Diagnostic utility
  upgrade       Console software upgrade
  exit          Quit system

-----

Command:reboot <CR>
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

```
SHDSL.BIS NTU
-----
  setup          Configure system
  status         Show running system status
  show          View system configuration
>> reboot       Reset and boot system
  diag          Diagnostic utility
  upgrade       Console software upgrade
  exit          Quit system

-----

Command:reboot <CR>
Message: Please input the following information.

Do you want to reboot? (y/n): y
00800000 Ram Ok

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

After the reboot operation has finished, RAM test will start again.

5.6 View the system status

You can use the status command to view the status of SHDSL, E1 and Serial as well as statistic and clear the statistic log. Select **status** and press [ENTER].

```
SHDSL.BIS NTU
-----
  setup          Configure system
>> status       Show running system status
  show           View system configuration
  write          Update flash configuration
  reboot         Reset and boot system
  diag           Diagnostic utility
  upgrade        Console software upgrade
  exit           Quit system
-----
Command:status <more...> _
Message:
-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

5.6.1 View the SHDSL status

Select **SHDSL** command to show the status of SHDSL.

```
SHDSL.BIS NTU
-----
>> Shdsl        Show SHDSL.BIS Status
  Interface      Show Interface Status
  Loc_statistics Show Local Statistics
  Rmt_statistics Show Remote Statistics
  clear          Clear Channel Statistics
-----
Command:Shdsl <CR>
Message:
-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The SHDSL status will display a real-time status of the DSL on local side and remote side if connected. The monitoring window displays the DSL line parameters, such as SNR margin and attenuation. The lower half of the window displays the loopback and BER test status. While in this display mode the terminal window will not timeout.

To exit the window, press CTRL-C to quit.

```
SHDSL.BIS NTU
-----
<Shdsl Status>
Channel          :          LocA          RmtA
STU Type        : STU-C-INTCLK          STU-R
DSL Type        : SHDSL.BIS            SHDSL.BIS
Line Rate(Kbps) :          2304          2304
SNR Margin (dB) :          26.0          26.0
Attenuation(dB) :          2.0           3.0

Loopback State  :          Disable        Disable
Bert Test State :          Disable        Disable
Bert Sync       :          Not Sync       Not Sync
Bert Error Count :          0              0

Refresh counter:4, Press 'Ctrl+C' to quit...

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

5.6.2 View the Interface status

Select **Interface** command to show the status of Interface

```
SHDSL.BIS NTU
-----
Shdsl          Show SHDSL Status
>> Interface   Show Interface Status
Current Perf   Show Current Performamce
Loc_statistics Show Local Statistics
Rmt_statistics Show Remote Statistics
clear          Clear Channel Statistics

-----
Command:Interface <CR> _
Message:

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

Show interface status, E1 interface only

```
----- SHDSL.BIS NTU -----
Channel          :          LocA          RmtA
STU Type         :          STU-R
Interface        :          E1
E1 DataRate(Kbps) :          1984
E1 Sync          :          Down
E1 AIS Alarm     :          On

Serial DataRate(Kbps):
Serial DCD       :
Serial DSR       :
Serial CTS       :
Serial RTS       :
Serial DTR       :
Refresh counter:33, Press 'Ctrl+C' to quit...
-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The interface status will display a real-time status of the interface on local side and remote side if connected. The monitoring window displays the STU type, interface mode, status on E1 and Serial. While in this display mode the terminal window will not timeout. To exit the window, press CTRL-C to quit.

The table of SHDSL line rate vs. data rate:

SHDSL Line rate	Data Rate (kbps)		
	Number of time slot for E1	Nx64K for Serial	Co-directional
2304(n=36)	Can't use	36	
2240(n=35)	Can't use	35	
2176(n=34)	Can't use	34	
2112(n=33)	Can't use	33	
2048(n=32)	32(unframed)	32	
1984(n=31)	31	31	
1920(n=30)	30	30	
1856(n=29)	29	29	
1792(n=28)	28	28	
.....	
.....	
.....	
.....	
384(n=6)	6	6	
320(n=5)	5	5	
256(n=4)	4	4	
192(n=3)	3	3	
192(n=3)*	2	2	
192(n=3)*	1	1	

Due to SHDSL.bis working line rate starts up from 192kbps(n=3), all setting on all interfaces with apply 64kbps(n=1) and 128kbps(n=2) are actually using on 192kbps DSL line rate.

The above table is for using as Annex F and G. When using Annex A and B, no N values more than 36.

5.6.3 View the Statistics

Select **Loc_statistics** command to show the statistics information in 15 minutes or 24 hours via [TAB] to choose.

```
SHDSL.BIS NTU
-----
Shdsl          Show SHDSL.BIS Status
Interface      Show Interface Status
>> Loc_statistics Show Local Statistics
Rmt_statistics Show Remote Statistics
clear          Clear Channel Statistics

-----

Command:Loc_statistics <CR>
Message: Please input the following information.

Shdsl Channel Statistics (TAB Select) <15m>: 15m_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The statistics display window will display performance monitor data for the selected interval (15 minutes or 24 hours). The display will show the recorded results for ES (errored seconds), SES (severely errored seconds), UAS (unavailable seconds), and LOSW (loss of sync word). While in this display mode the terminal window will not timeout. The 15-minute display window will display all the performance information for each 15-minute interval in the current 24-hour period. There are a total of 96 intervals. Press the ENTER key to display the next page of intervals. To exit the window, press CTRL-C and then ENTER.

The performance monitor is capable of storing and retrieving performance information for each 24-hour interval, up to 7 days.

For E1 Interface model, there are SHDSL and E1 item.

View the performance monitor data for the selected interval 15 minutes:

SHDSL . BIS NTU							
Local	SHDSL				E1		
	ES	SES	UAS	LOSW	ES	SES	UAS
15 Minute	0	0	0	0	0	0	2
Current	0	0	0	0	0	0	0
Quarter 1	0	0	0	0	0	0	0
Quarter 2	0	0	0	0	0	0	0
Quarter 3	0	0	0	0	0	0	0
Quarter 4	0	0	0	0	0	0	0
Quarter 5	0	0	0	0	0	0	0
Quarter 6	0	0	0	0	0	0	0
Quarter 7	0	0	0	0	0	0	0
Quarter 8	0	0	0	0	0	0	0
Quarter 9	0	0	0	0	0	0	0
Quarter 10	0	0	0	0	0	0	0
Quarter 11	0	0	0	0	0	0	0
Quarter 12	0	0	0	0	0	0	0
Quarter 13	0	0	0	0	0	0	0
Quarter 14	0	0	0	0	0	0	0
More <CR>							

 <I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

View the performance monitor data for the selected interval 7days:

SHDSL . BIS NTU							
Local	SHDSL				E1		
	ES	SES	UAS	LOSW	ES	SES	UAS
24 Hour	0	0	0	0	0	0	53
Current	0	0	0	0	0	0	0
Day 1	0	0	0	0	0	0	0
Day 2	0	0	0	0	0	0	0
Day 3	0	0	0	0	0	0	0
Day 4	0	0	0	0	0	0	0
Day 5	0	0	0	0	0	0	0
Day 6	0	0	0	0	0	0	0
Day 7	0	0	0	0	0	0	0

 Press any key to Return Menu Window..._

 <I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

For Serial Interface model, there is only the SHDSL item.

View the performance monitor data for the selected interval 15 minutes:

SHDSL .BIS NTU				
Local	SHDSL			
15 Minute	ES	SES	UAS	LOSW
Current	0	0	0	0
Quarter 1	0	0	0	0
Quarter 2	0	0	0	0
Quarter 3	0	0	0	0
Quarter 4	0	0	0	0
Quarter 5	0	0	0	0
Quarter 6	0	0	0	0
Quarter 7	0	0	0	0
Quarter 8	0	0	0	0
Quarter 9	0	0	0	0
Quarter 10	0	0	0	0
Quarter 11	0	0	0	0
Quarter 12	0	0	0	0
Quarter 13	0	0	0	0
Quarter 14	0	0	0	0
More <CR>				

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

View the performance monitor data for the selected interval 7 days:

SHDSL .BIS NTU				
Local	SHDSL			
24 Hour	ES	SES	UAS	LOSW
Current	0	0	0	0
Day 1	0	0	0	0
Day 2	0	0	0	0
Day 3	0	0	0	0
Day 4	0	0	0	0
Day 5	0	0	0	0
Day 6	0	0	0	0
Day 7	0	0	0	0

Press any key to Return Menu Window..._

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

When clear the statistic log file, select **clear** and press [ENTER].

```
SHDSL.BIS NTU
-----
Shdsl          Show SHDSL.BIS Status
Interface      Show Interface Status
Loc_statistics Show Local Statistics
Rmt_statistics Show Remote Statistics
>> clear       Clear Channel Statistics

-----

Command:clear <CR> _
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

If you want to show the remote side's statistics, please use the Rmt-statistics function as the following.

```
SHDSL.BIS NTU
-----
Shdsl          Show SHDSL.BIS Status
Interface      Show Interface Status
Loc_statistics Show Local Statistics
>> Rmt_statistics Show Remote Statistics
clear          Clear Channel Statistics

-----

Command:Loc_statistics <CR>
Message: Please input the following information.
Shdsl Channel Statistics (TAB Select) <15m>: 15m

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

The following are commonly used acronyms:

ES	Number of errored seconds in which one or more CRC (Cyclic Redundancy Check) error events occurred during the current interval. This value is updated every second.
UAS	Number of unavailable seconds in which a failed signal occurred during the current interval. This value is updated every second.
SES	Number of severely errored seconds in which 832 or more CRC error events occurred during the current interval. This value is updated every second.
LOSW	Number of seconds with loss of sync word during the current interval. This value is updated every second.

5.7 View System Configuration

By using show command, you can view the system configuration. Select **show** and press [ENTER] or [RIGHT].

```

SHDSL.BIS NTU
-----
  setup          Configure system
  status         Show running system status
>> show         View system configuration
  reboot        Reset and boot system
  diag          Diagnostic utility
  upgrade       Console software upgrade
  exit          Quit system
-----


Command: show <more...> _
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

There are three types on viewing system configuration:

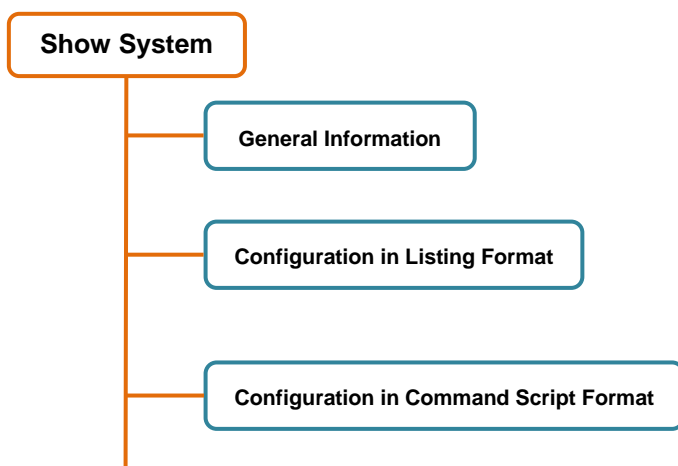

5.7.1 Show system Information

To show system information, please select **system** and press [ENTER] or [RIGHT]. The screen will prompt the system information.

```
SHDSL.BIS NTU
-----
>> System      Show General Information
   Config      Show Configuration
   Script      Show Configuration in Command Script

-----
Command: System <CR> _
Message:

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

Our cursor is already on the System command, so press ENTER and the following screen will display the general system information.

```
5099N-4W/E1
-----
<System Info Window>
          Local Side          Remote Side
          =====          =====
Model      : 5099N-4W/E1      5099B-4W/E1
Sw Version : 2.00             1.16
FPGA Version: 1.02           1.34
CPU        : Winbond W90N740  Winbond W90N740
RAM        : 8MB              8MB
FLASH      : 2MB              2MB
Dsp Version : 1.1-2.0.0__001  1.1-1.8.1__001
SerialNo    : :20181011000    :20181210000
System MCSV : 1581-0000-FFFFFFF 14B9-0062-FFFFFFF
Kernel MCSV : 159A-0000-2002C255 14D2-0062-116274FD
FPGA MCSV   : 159A-0000-1022C247 14D2-0062-134273D7

System Live Time : 0 Day/ 23Hour/ 43Min /21 Secs█
-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

Most of the information on this screen is either self-explanatory or it is simply irrelevant for the end user. However, two items, the Kernel (Software) and FPGA (Field Programmable Gate Array) version will give the software and hardware versions respectively of NTU. These are important to know in case new firmware becomes available in the future to add extra functions of fixing unknown bugs from the original manufactured equipment.

5.7.2 Show system with listing format

To show the system configuration, please select **Config** and press [ENTER] or [RIGHT]. The screen will prompt the all configuration data.

For E1 interface mode:

```
SHDSL.BIS NTU
-----
Showing System Configuration...
setup Interface      :      E1
setup Type           :      STU-R
setup Shdsl Annex   :      Annex-G
setup Shdsl Psd     :      SYM
setup Shdsl Margin  :      0
setup Shdsl Pair Mode :      1 Pair
setup E1 Channel    :      PCM30
setup E1 Pass Through :      Off
setup E1 Slot Number :      30
setup E1 First Slot :      1
setup E1 Code       :      HDB3
setup E1 AIS        :      Off
setup E1 Build Outs :      120 Ohm

Press any key to Return Menu Window..._
```

For Serial interface mode:

```
SHDSL.BIS NTU
-----
Showing System Configuration...
setup Interface      :      Serial
setup Type           :      STU-R
setup Shdsl Annex   :      Annex-G
setup Shdsl Psd     :      SYM
setup Shdsl Margin  :      0
setup Serial Interface :      V35
setup Serial Data Rate :      32
setup Serial Clock   :      normal
setup Serial Rts     :      on
setup Serial Cts     :      from_rts
setup Serial Dsr     :      on
setup Serial Dcd     :      from_dsl
setup Serial Delay   :      3
Press any key to Return Menu Window...
```

5.7.3 Show system with script format

To show the system script file, please select Script and press [ENTER] or [RIGHT]. The screen will prompt the configuration in script type.

```
SHDSL.BIS NTU
-----
System      Show General Information
Config     Show Configuration
>> Script   Show Configuration in Command Script

-----

Command:Script <CR>
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

For E1 interface mode:

```
SHDSL.BIS NTU
-----
<Script Window>
setup mode STU-R
setup Shdsl Interface E1
setup Shdsl Annex Annex-G
setup Shdsl Psd SYM
setup Shdsl Margin 0
setup E1 Channel PCM31C 31
setup E1 code HDB3
setup E1 ais Off
setup E1 build_outs 120 Ohm
Press any key to Return Menu Window...
```

For Serial interface mode:

```
-----  
SHDSL.BIS NTU  
-----  
<Script Window>  
setup mode STU-R  
setup Shdsl Interface Serial  
setup Shdsl Annex Annex-G  
setup Shdsl Psd SYM  
setup Shdsl Margin 0  
setup Serial Interface V35  
setup Serial Data Rate 32  
setup Serial Clock normal  
setup Serial Rts on  
setup Serial Cts from_rts  
setup Serial Dsr on  
setup Serial Dcd from_dsl  
setup Serial Delay 3  
Press any key to Return Menu Window..._
```

5.8 Upgrade

This section will introduce how to upgrade the kernel and FPGA code of G.SHDSL.Bis NTU. Select **upgrade** in main menu and press [ENTER] or [RIGHT].

Please notice that when you use Remote Upgrade feature. It means you can use that feature to update firmware to remote side. It will be described below.

During an upgrade and re-flash, the normal transmissions will be halted, so the upgrade should be done when the system is taken offline or done during a time of extremely low impact to the line of customer.

The upgrade procedures use the Xmodem protocol via the serial console port of rear panel.

The following shows the upgrade feature:

```
SHDSL.BIS NTU
-----
setup          Configure system
status         Show running system status
show           View system configuration
write          Update flash configuration
reboot         Reset and boot system
diag           Diagnostic utility
>> upgrade     Console software upgrade
exit           Quit system

-----

Command:upgrade <more...>
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

Before upgrading the NTU, you must have the main software or FPGA code in your computer.

If you want to upgrade the kernel code: select **Kernel** and press [ENTER] or [RIGHT].

```
SHDSL.BIS NTU
-----
>> Kernel          Upgrade main software
   Fpga            Upgrade FPGA code
   Rmt Kernel      Upgrade the remote's main software
   Rmt FPGA        Upgrade the remote's FPGA code

-----

Command:Kernel <CR> _
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

Click Send file in terminal access program, hyper terminal, to send the file. Make sure the sending protocol is **Xmodem**. Select the source file in shown window and then press OK.

When it is upgrading, you can see the following:

```
SHDSL.BIS NTU
-----

Starting XModem Upload...CCCCCCCCCCCCCCCCCC_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

If you want to upgrade the FPGA code: Select FPGA and press [ENTER] or [RIGHT].


```
SHDSL.BIS NTU
-----
Kernel          Upgrade main software
>> Fpga         Upgrade FPGA code
Rmt Kernel      Upgrade the remote's main software
Rmt FPGA       Upgrade the remote's FPGA code

-----

Command:Fpga <CR> _
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

When it is upgrading, you can see the following:

```
SHDSL.BIS NTU
-----

Starting XModem Upload...CCC_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

Below showed are remote upgrade features:

```
SHDSL.BIS NTU
-----
Kernel          Upgrade main software
Fpga            Upgrade FPGA code
>> Rmt Kernel   Upgrade the remote's main software
Rmt FPGA       Upgrade the remote's FPGA code

-----

Command:Rmt Kernel <CR> _
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

When it is upgrading, you can see as following:

```
SHDSL.BIS NTU
-----

Starting XModem Upload...CCC_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

Before upgrading the NTU, you must have the Kernel code and FPGA code in your computer.

WARNING: Do not allow any interruption of power during the erase and re-write operation or the Flash will be left in an unknown state and the device will no longer be able to function. The device must then be returned to the factory for repair.

5.9 Diagnostic

The diagnostic facility allows you to test the different aspects of your G.SHDSL.Bis NTU to determine if it is working properly. Select diag and press [ENTER] or [RIGHT].

```
SHDSL.BIS NTU
-----
setup          Configure system
status         Show running system status
show           View system configuration
reboot         Reset and boot system
>> diag        Diagnostic utility
upgrade        Console software upgrade
exit           Quit system

-----

Command:diag <more...>
Message:

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

Loopback can test whether if the NTU is working properly with the connected device.

Press [ENTER] or [RIGHT] to setup the loopback.

```
SHDSL.BIS NTU
-----
>> Loopback    Execute Loopback
BerTest        Execute Local Ber Test

-----

Command:Loopback <CR>
Message: Please input the following information.

Change Loopback (TAB Select) <Disable>: Local Digital_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

For E1 Interface model as CO side, there are have: Local Digital, local, remote line, remote payload, farend line and farend payload.

For Serial Interface model as CO side, there are: Local Digital, local, remote line, remote payload, farend line, farend payload and V.54.

For E1 Interface model as CPE side, there are: Local Digital, remote line, remote payload, farend line and farend payload.

For Serial Interface model as CPE side, there are: Local Digital, remote line, remote payload, farend line, farend payload and V.54.

If the device has been connected or under handshake, there will not be farend line, farend payload and V.54.

Stand-alone NTU, no connection with other NTU:

E1 interface CO side	Serial interface CO side
Local Digital	Local Digital
Local	Local
Remote line	Remote line
Remote payload	Remote payload

E1 interface CPE side	Serial interface CPE side
Local Digital	Local Digital
Remote line	Remote line
Remote payload	Remote payload

After connection both CO side and CPE side:

E1 interface CO side	Serial interface CO side
Local Digital	Local Digital
Local	Local
Remote line	Remote line
Remote payload	Remote payload
Farend line	Farend line
Farend payload	Farend payload
	V.54

E1 interface CPE side	Serial interface CPE side
Local Digital	Local Digital
Remote line	Remote line
Remote payload	Remote payload
Farend line	Farend line
Farend payload	Farend payload
	V.54

About **V.54**:

An ITU standard (1976) for various loopback tests which can be incorporated into modems for testing the telephone circuit and isolating transmission problems. Operating modes include local and remote digital loopback and local and remote analog loopback.

The SHDSL.bis NTU supports Bit Error Rate Testing (BERT). To configure the BERT, move the cursor to **BerTest** and press [ENTER] or [RIGHT].

```

SHDSL.BIS NTU
-----
Loopback          Execute Loopback
>> BerTest       Execute Local Ber Test

-----

Command:BerTest <CR>
Message: Please input the following information.

BerTest Type (TAB Select) <2047>: 2047_

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

The BER Test screen is as following:

```

SHDSL.BIS NTU
-----
Monitoring Window...BER Test

Test Pattern      :      2047
Time Elapsed     :          8
Pattern Sync     :      Sync
Bit Error Count  :          0

Refresh counter:5, Press 'Ctrl+C' to quit...

-----

<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom

```

The G.SHDSL Bis NTU includes an internal Bit Error Rate Tester (BERT) for complete testing of local and remote modem and the link quality without any need for an external test equipment. This built-in Bit Error Rate Test generator can generate a standard 2047 ($2^{11}-1$) test pattern.

Test Pattern: 2047	Use the standard 2047 ($2^{11}-1$) test pattern
Time Elapsed	Shows the time elapsed count
Pattern Framing	Shows the linking is sync or no sync
Bit Error Count	Shows the bit error counter
Refresh counter	Page refresh counter

You can press CTRL-C to quit this page anytime.

About 2047 ($2^{11}-1$) test pattern: This is the pseudorandom sequence is based on an eleven (11) bit shift register, a pseudorandom pattern with a maximum of 10 sequential zeros and 11 sequential ones.

5.10 Exit

For exiting the system without saving any configuration, you can use exit command to exit. Select exit and press [ENTER] or [RIGHT]. Answer y(es) to confirm.

```
SHDSL.BIS NTU
-----
  setup          Configure system
  status         Show running system status
  show           View system configuration
  reboot        Reset and boot system
  upgrade        Console software upgrade
>> exit         Quit system

-----
Command:exit <CR>
Message: Please input the following information.

Do you want to disconnect? (y/n):

-----
<I/K> Move up/down, <J/L> Exit/Enter, <U/O> Move top/bottom
```

After press [ENTER], the system will be disconnected.

```
Connection closed...
Press Space key to enter console mode configuration!
```

When the system has been disconnected, user can see the close screen. You can press Space key to restart.

```
User: admin
Password: *****_
```

The new login screen will be shown again, you can type username and password again to enter.

6 Appendix

6.1 Abbreviation

AIS	Alarm Indication Signal
AMI	Alternate mark inversion
ASYM	Asymmetric
ATM	Asynchronous Transfer Mode
B8ZS	Bipolar with 8 zero substitution
BER	Bit error rate
BERT	Bit Error Rate Tester
BNC	Bayonet Nut Coupling Bayonet Neill-Concelman Barrel Nut Connector Bayonet Nipple Connector Bayonet Navy Connector Baby N Connector
bps	Bits per second
CAS	Channel Associated Signaling
CEPT	European Conference of Postal and Telecommunications Administrations.
CERR	CRC Errors
CO	Central Office
CPE	Customer Premises Equipment
CPU	Central processing unit
CRC	Cyclic redundancy check
CRC4	Cyclic redundancy check 4 bit
CRS	Carrier Sense
CSU	Channel service unit
CTS	Clear to send
DCD	Data carrier detect
DCE	Data communication equipment
DSL	Digital subscriber loop
DSR	Data set ready
DSLAM	DSL Access Multiplexer
DTE	Data terminal equipment
DTR	Data terminal ready
E BIT GEN	Remote End Block Error Bit generation
EOC	Embedded operations channel
ES	Number of Error second (Errors/Second)
ESF	Extended super frame
ETSI	European Telecommunications Standardization Institute

FAS	Frame alignment signal
FCS	Frame Check Sequence
HDB3	High-Density Bipolar of order 3
HDLC	High-Level Data Link Control
HEC	Header error check
I/F	Interface
ITU	International Telecommunication Union
ITU-T	ITU-Telecommunication Standardization Sector
LBO	Line Build Out
LIU	Line Interface Unit
LOC	Loss of Connection
LOF	Loss of frame
LOS	Loss of signal
LOSW	Loss of synchronization word
LTU	Line Termination Unit
MAS	Multi-frame Alignment Sequence (CAS Format)
MFAS	Multi-frame Alignment Sequence (CRC4 Format)
MHz	MegaHertz
NI	Network Interface
NRZ	Non-Return to Zero
NTU	Network Termination Unit
PABX	Private Automatic Branch Exchange
PAM	Pulse Amplitude Modulation
PLL	Phase-locked loop
POTS	Plain Old Telephone Service
PRBS	Pseudo-Random Bit Sequence
PSD	Power spectral density
QRSS	Quasi-Random Signal Source
RAI	Remote alarm indication
RESYNC	Resynchronization
RJ-45	Registered Jack-45
RTS	Request to send
RX	Receiver
SES	Number of Severely error seconds (more than 832 CRC errors / second. Approximately equivalent to a bit error rate of 1×10^{-3})
SDLC	Synchronous data Link Control
SF	Super Frame
SHDSL	Symmetric High-Bitrate Digital Subscriber Loop
SLC	Subscriber Loop Carrier
SMF	Sub-Multi frame
SNA	System Network Architecture


SNR MARGIN	Signal to noise ration margin
STU	SHDSL Terminal Unit
STU-C	SHDSL Terminal Unit - Central office side
STU-R	SHDSL Terminal Unit - Remote side
STU-C-INTCLK	STU-C internal clock
STU-R-EXTCLK	STU-R external clock
SYM	Symmetric
SYNC	Synchronization
TC-PAM	Trellis Coded Pulse Amplitude Modulation
TDM	Time Division Multiplexing
TPS-TC	Transmission Protocol Specific TC layer
TX	Transmitter
Tx Power	Transmission power
UAS	Unavailable second
UI	User interface
WAN	Wide Area Network
xDSL	“Any” DSL , (ADSL , HDSL ,SHDSL or VDSL etc)

6.2 Serial Interface Pin Assignments

The table below displays Serial Interface Pin Assignments for the DCE Mode

.Function	Abbrev.	Direction	RS-530 DB-25(F)	V.35 M.34(F)	X.21 DB- 15(F)
Frame Ground	FG	N/A	1	A	1
Transmit Data	TD	Input	2	P	2
Receive Data	RD	Output	3	R	4
Request to Send	RTS	Input	4	C	3
Clear to Send	CTS	Output	5	D	
Data Set Ready	DSR	Output	6	E	
Signal Ground	SG	N/A	7	B	8
Data Carrier Detect	DCD	Output	8	F	5
Secondary Receiver Clock	(S)RC	Output	9	X	13
Secondary Data Carrier Detect	(S)DCD	Output	10		12
Secondary External Transmitter Clock	(S)ETC	Input	11	W	7
Secondary Transmitter Clock	(S)TC	Output	12	AA	
Secondary Clear to Send	(S)CTS	Output	13		
Secondary Transmit Data	(S)TD	Input	14	S	9
Transmitter Clock	TC	Output	15	Y	
Secondary Receive Data	(S)RD	Output	16	T	11
Receiver Clock	RC	Output	17	V	6
Local Loopback			18		
Secondary Request to Send	(S)RTS	Input	19		10
Data Terminal Ready	DTR	Input	20	H	
Remote Loopback			21		
Secondary Data Set Ready	(S)DSR	Output	22		
Secondary Data Terminal Ready	(S)DTR	Input	23		
External Transmitter Clock	ETC	Input	24	U	14
Test Indicator			25		

The front view of DB-25(F) Serial interface connector on rear panel:

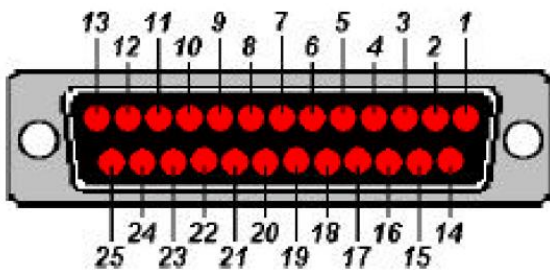

DB-25(F) Connector

6.3 V.35 DB25(M) to M.34(F) adaptor Cable

If the DTE (Data Terminal Equipment) connector is using 34-pin Winchester type, we must use the cable adaptor from DB-25 to Winchester (M.34).


The pin out of cable on DB-25(male) Connector to M.34(female) Connector:

DB-25 Pin	Signal	M.34 Pin	Description
2	TD	P	Transmit Data
14	TD	S	Transmit Data
3	RD	R	Receive Data
16	RD	T	Receive Data
4	RTS	C	Ready To Send
5	CTS	D	Clear To Send
6	DSR	E	Data Set Ready
20	DTR	H	Data Terminal Ready
24	XTC	U	DTE Transmit Clock
11	XTC	W	DTE Transmit Clock
15	TC	Y	Transmit Clock
12	TC	AA	Transmit Clock
17	RC	V	Receive Clock
9	RC	X	Receive Clock
1	FGND	A	Protective Ground
7	GND	B	Signal Ground
8	DCD	F	Data Carrier Detect


The front view of DB-25(M) connector and V.35(F) connector on this cable:

V.35 is a partially balanced, partially single-ended interface specification. The data leads and clock leads are balanced; the handshake leads are single-ended.

TD, RD, TC, RC and XTC are differential signals conforming to RS-422/V.11. Remaining control and handshake signals (RTS, CTS, DSR and DTR) are conformed to RS-232 as unbalanced.

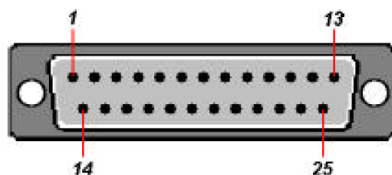

DB-25(M) connector

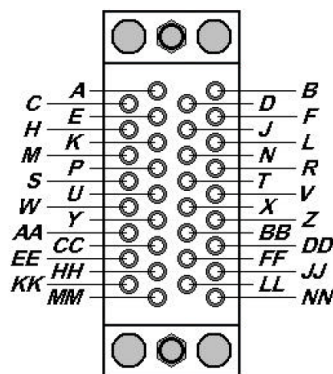

M.34(F) connector

V.35 interface (34-pin Winchester type) contains the following signals:

Pin	Signal	Abbr.	DTE	DCE
A	Chassis Ground	FGND	---	---
B	Signal Ground	GND	---	---
C	Request To Send	RTS	Out	In
D	Clear To Send	CTS	In	Out
E	Data Set Ready	DSR	In	Out
F	Data Carrier Detect	DCD	In	Out
H	Data Terminal Ready	DTR	Out	In
J	Unassigned			
K	Unassigned			
L	Unassigned			
M	Unassigned			
N	Unassigned			
P	Send Data A	SD(A)	Out	In
R	Receive Data A	RD(A)	In	Out
S	Send Data B	SD(B)	Out	In
T	Receive Data B	RD(B)	In	Out
U	Terminal Timing A	SCTE(A)	Out	In
V	Receive Timing A	SCR(A)	In	Out
W	Terminal Timing B	SCTE(B)	Out	In
X	Receive Timing B	SCR(B)	In	Out
Y	Send Timing A	SCT(A)	In	Out
Z	Unassigned			
AA	Send Timing B	SCT(B)	In	Out
BB	Unassigned			
CC	Unassigned			
DD	Unassigned			
EE	Unassigned			
FF	Unassigned			
HH	Unassigned			
JJ	Unassigned			
KK	Unassigned			
LL	Unassigned			
MM	Unassigned			
NN	Unassigned			

6.4 X.21 DB25(M) to DB15(F) adaptor Cable


For X.21 application, we must use the DB-25 to DB-15 adaptor cable for connects to a X.21 DTE DB-15 male cable.

The pin out of cable on DB-25(male) Connector to DB-15(Female) (X.21) Connector

DB-25 Pin	Signal	DB-15 (X.21) Pin	Description
1	FGND	1	Protective Ground
7	GND	8	Signal Ground
2	T	2	Transmit Data
14	T	9	Transmit Data
3	R	4	Receive Data
16	R	11	Receive Data
4	C	3	Request To Send
19	C	10	Request To Send
8	I	5	Data Carrier Detect
10	I	12	Data Carrier Detect
17	S	6	Receive Clock
9	S	13	Receive Clock

All signals are balanced. Meaning there is always a pair (+/-) for each signal, like used in RS422. The X.21 signals are the same as RS422, so please refer to RS422 for the exact details.

The front view of DB-25(M) connector and DB-15(F) connector on this cable:

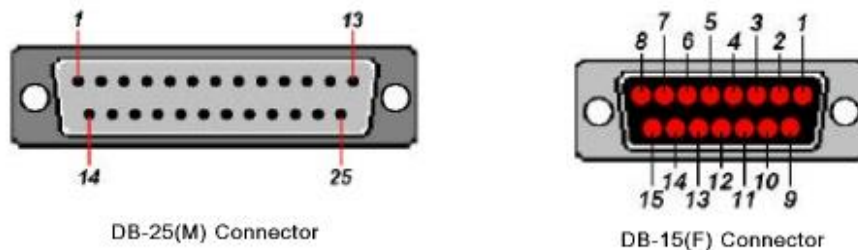

The pin out of DB-15 connector on X.25 adaptor cable:


Pin	Signal	Abbr.	DTE	DCE
1	Shield	--	--	--
2	Transmit (A)	TA	Out	In
3	Control (A)	CA	Out	In
4	Receive (A)	RA	In	Out
5	Indication (A)	IA	In	Out
6	Signal Timing (A)	SA	In	Out
7	Unassigned			
8	Ground	--	--	--
9	Transmit (B)	TB	Out	In
10	Control (B)	CB	Out	In
11	Receive (B)	RB	In	Out
12	Indication (B)	IB	In	Out
13	Signal Timing (B)	SB	In	Out
14	Unassigned			
15	Unassigned			

Functional Description:


The Signal Element Timing (clock) (S) is provided by the DCE. This means that the NTU is output the correct clocking and that X.21 is a synchronous interface. Hardware handshaking is done by the Control (C) and Indication (I) lines. The Control is used by the DTE and the Indication is the DCE one.

6.5 Console Cable


The front view of RJ-45 console cable socket on rear panel:

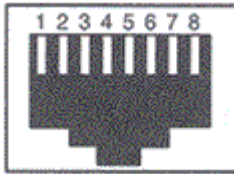

The wire connection of console cable DB-9(Female) to RJ-45:

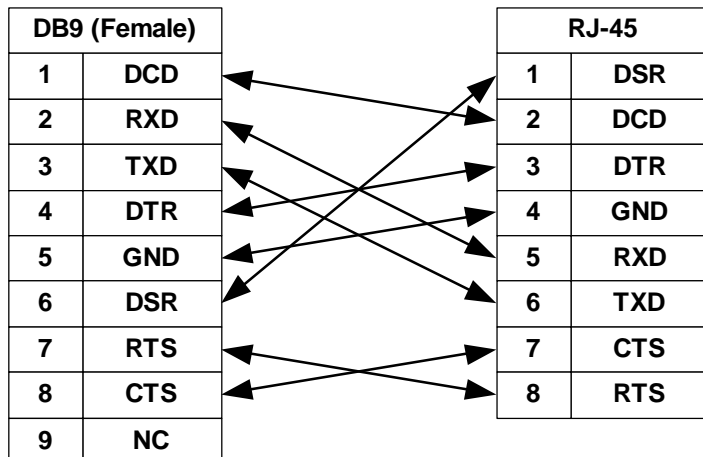

The signal direction of console cable:

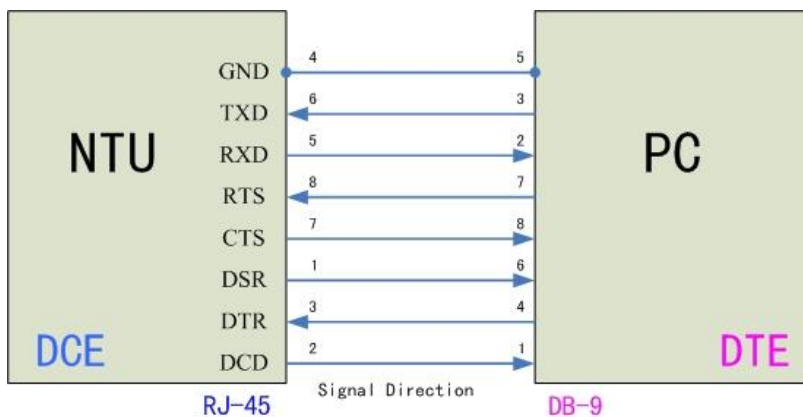


The pin assignment of RJ-45 modular jack on the console cable:

Pin Number	Abbrev.	Description	Figure
1	DSR	DCE ready	
2	DCD	Received Line Signal Detector	
3	DTR	DTE ready	
4	GND	Signal Ground	
5	RXD	Received Data	
6	TXD	Transmitted Data	
7	CTS	Clear to Send	
8	RTS	Request to Send	

6.6 E1 Balanced Cable

The front view of RJ-48C E1 balance cable socket on rear panel:

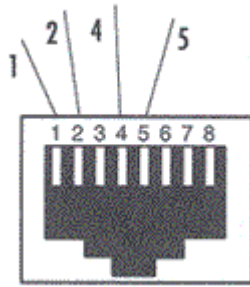

The pin out of RJ-48C plug on the G.703 120Ω E1 balanced cable:

Pin Number	Description	Figure
1	E1 interface receive pair-ring	<p>Top View</p> <p>Front View</p>
2	E1 interface receive pair-tip	
3	No connection	
4	E1 interface transmit pair-ring	
5	E1 interface transmit pair-tip	
6	No connection	
7	No connection	
8	No connection	

The pin out of cable on DB-15(female) Connector to RJ-48C Connector:

DB15(Female) Pin Number	RJ-48C Pin number	Description
11	4	Transmit Ring
5	3	Rx Shield
9	1	Receive Ring
6	6	TX Shield
3	5	Transmit Tip
1	2	Receive Tip

6.7 E1 Unbalanced Cable

Connections to the E1 BNC ports are made using a 75-ohm coaxial cable with a bayonet-style twist-lock BNC connector.

We do not provide the cable. It is widely available from other sources.

The front view of BNC sockets on rear panel:



The internal wiring between BNC sockets and RJ-48C:


Signal Name	BNC Connecters	RJ-48C Connector
Transmit Tip	Center pin of Tx Connector	5
Transmit Ring	Shield of Tx Connector	4
Receive Tip	Center pin of Rx Connector	2
Receive Ring	Shield of Rx Connector	1

6.8 Ethernet Cable

The Ethernet cables should be 4 pair unshielded cable (UTP) or shielded (STP) of type CAT5 (or higher). Both crossed and normal wiring styles are supported by the auto-crossover feature of the NTU.

We do not provide the cable. It is widely available from other sources.

The front view of RJ-45 Ethernet cable socket on rear panel:

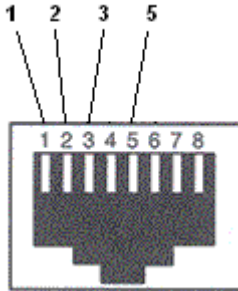


The pin out of RJ-45 Ethernet Connector:

Pin number	Signal Name
1	Transmit Data +
2	Transmit Data -
3	Receive Date +
4	Not used
5	Not used
6	Receive Date -
7	Not used
8	Not used


6.9 DSL Cable

The front view of DSL cable socket on rear panel:

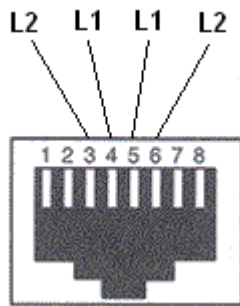

The pin out of RJ-45 modular jack on DSL cable:

Pin Number	Description	Figure
1	No connection	<p>Top View</p> <p>Front View</p>
2	No connection	
3	LOOP 2 Input/Output	
4	LOOP 1 Input/Output	
5	LOOP 1 Input/Output	
6	LOOP 2 Input/Output	
7	No connection	
8	No connection	

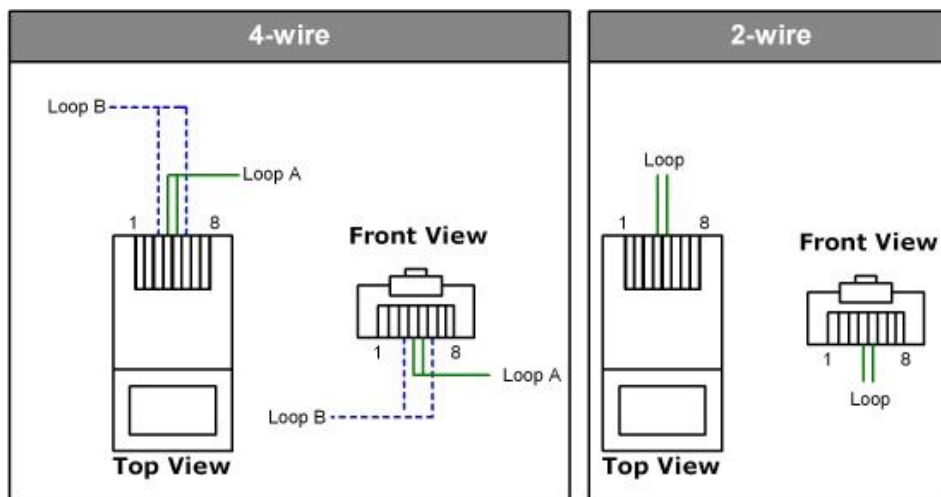


2-wires (1 Pair) Model	DSL loop Pin 4,5
-----------------------------------	---------------------

4-wires (2 Pair) Model	DSL loop A Pin 4,5	DSL loop B Pin 3,6
-----------------------------------	-----------------------	-----------------------

6.10 Power Cord

The front view of IEC-320 C6 type AC Inlet on rear panel:

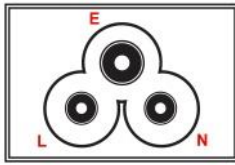


The pin out of AC Inlet connector:

Pin number	Description
E	Earth conductor
L	Live, hot or active conductor
N	Neutral or identified conductor

The socket of the power cord is using IEC-320 C5 type. This 3-conductor colloquially called “Mickey Mouse” or “Clover Leaf”.


The front view of C5 line socket of the power cord:

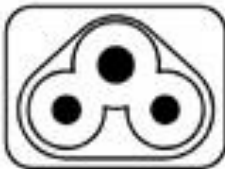


6.11 Illustration of Loopback connection device (E1)

RJ-48C Pin number	Description
4	Transmit Ring
3	Rx Shield
1	Receive Ring
6	TX Shield
5	Transmit Tip
2	Receive Tip

Make the short circuit/wiring with a RJ-45 module jack of the following:

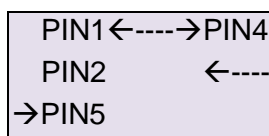

The top view of RJ-45 module jack on short circuit/wiring:

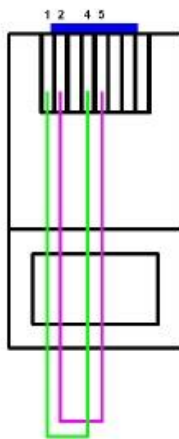

6.12 Illustration of Loopback connection device (Serial)

DB-25(M) Pin number	Signal	Description
2	TD(A)	Transmit Data
14	TD(B)	Transmit Data
3	RD(A)	Receive Data
16	RD(B)	Receive Data
4	RTS	Ready To Send
5	CTS	Clear To Send
6	DSR	Data Set Ready
20	DTR	Data Terminal Ready
24	XTC	DTE Transmit Clock
11	XTC	DTE Transmit Clock
15	TC(A)	Transmit Clock
12	TC(B)	Transmit Clock
17	RC(A)	Receive Clock
9	RC(B)	Receive Clock
1	FGND	Protective Ground
7	GND	Signal Ground
8	DCD	Data Carrier Detect

Make the short circuit/wiring with a DB-25(male) connector of the following:

PIN2 ←----→PIN3
PIN14←---→PIN16
PIN4 ←----→PIN5
PIN6 ←---→PIN20

The back side view of DB-15(male) connector on short circuit/wiring:

