

Outdoor Dual SIM LTE Cellular Router Quick Installation Guide

Version: 1.10

Physical Appearance

Dimension (W x H x D): 170 x 225 x 89 mm




STEP 3: Split the rubber plug components. Fix①and②with the bottom cover.



STEP 4: Put the Ethernet cable through the hole of the bottom cover and make a new RJ45 connector.

NOTE: Ethernet cable is not included in the package.

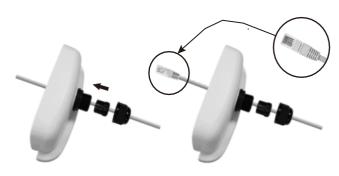

STEP 5: Insect the RJ45 connector into the Ethernet port.




STEP 6: Put the bottom cover back and screw them tightly. Lock the rubber plug.



STEP 7: Put the device on a pole in the right height and direction. Fix the router with the pole mounting kit.



Hardware Interfaces

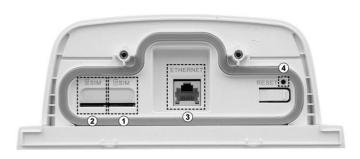

| # | Item | Description | |
|---|----------|---|--|
| 1 | 1 SIM | Micro SIM Card slot 1. It's the default. | |
| 2 | 2 SIM | Micro SIM Card slot 2 | |
| 3 | ETHERNET | 10/100/1000Mbps Ethernet Port with PoE | |
| 4 | RESET | Reboot: Press less than 5 seconds Restore to factory default: Press for at least 5 seconds | |

Hardware Installation Procedures

STEP 1: Unscrew 2 screws and remove the bottom cover.




STEP 2: Insert a Micro SIM into SIM holder slot $\boxed{1}$ and the second SIM into Slot $\boxed{2}$. Beware of the micro SIM orientation.





STEP 8: Connect the Ethernet cable into the PoE Injector.

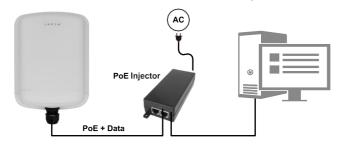

STEP 9: Power on the PoE Injector.

STEP 10: Connect a PC to the PoE Injector for configuration.

LED Indicators

| LED | | ON | OFF | Blinking | | |
|-------------------------------------|------|---|---------------------------|--|--|--|
| System: GREEN | J | System Ready | Х | System in Booting | | |
| LAN: GREEN | 무무 | Х | Х | Ethernet Data Transmitting | | |
| Internet: GREEN | | Internet is connected | Internet is not connected | х | | |
| SIM: GREEN | • | SIM is detected | No SIM | Slow: SIM Detecting Fast: SIM Error | | |
| Signal: RED, ORANGE, GREEN | ııll | Signal Strength: Low(RED) / Medium (ORANGE) / Good (GREEN) OFF: LTE is not connected. | | | | |

Ethernet Connector

The Ethernet connector follows EIA-568B wiring pattern.

Pinouts for 10/100Mbps and 1000Mbps data.

| Pin | Color | 10/100Mbps Data | 1000Mbps Data |
|-----|--------------|-----------------|---------------|
| 1 | White/Orange | Tx + | Tx Rx A + |
| 2 | Orange | Tx - | Tx Rx A - |
| 3 | White/Green | Rx + | Tx Rx B + |
| 4 | Blue | Х | Tx Rx B - |
| 5 | White/Blue | х | Tx Rx C + |
| 6 | Green | Rx - | Tx Rx C - |
| 7 | White/Brown | х | Tx Rx D + |
| 8 | Brown | Х | Tx Rx D - |

Pinouts for 10/100Mbps and 1000Mbps PoE.

| Pin | Color | 10/100Mbps Power | 1000Mbps Power |
|-----|--------------|------------------|----------------|
| 1 | White/Orange | V + | V + |
| 2 | Orange | V + | V + |
| 3 | White/Green | V - | V - |
| 4 | Blue | х | х |
| 5 | White/Blue | х | Х |
| 6 | Green | V - | V - |
| 7 | White/Brown | Х | х |
| 8 | Brown | х | Х |

Web Access

After default reset, the IP address of the device is 192.168.1.1

Username: admin
Password: 2wsx#EDC

NOTE

Please scan below QR Code to download online resources.
 Download Link: https://www.proscend.com/en/product/M366.html



M366