

M351-5G
Industrial IoT 5G NR
Cellular Router

User Manual

Version 1.00

Table of Contents

1	Introduction	1
1.1	Features.....	1
1.2	Dimensions	1
1.3	Specifications	2
2	Hardware Installation	3
2.1	Install the SIM Card	3
2.2	LED Indicators.....	3
2.3	Reset Button	4
2.4	Connecting I/O Ports	4
2.5	LED Indicators of Ethernet Port.....	4
2.6	RS-232 and RS-485 pinouts	5
2.7	DIP Switch.....	5
2.8	Connecting the Power Supply	6
2.9	Antenna Installation	6
2.10	DIN-rail Mounting	6
2.11	Wall Mounting.....	7
3	Configuration via Web Browser	8
3.1	Access the Web Configurator.....	8
3.2	Navigate the Web Configurator.....	9
4	Web Menu Item > Status	11
5	Web Menu Item > System	13
5.1	Time and Date.....	13
5.2	Logging.....	15
5.3	Alarm	17
5.4	COM Ports	20
5.5	Ethernet	22
5.6	Modbus	22

5.7	Client List	23
6	Web Menu Item > WAN.....	24
6.1	Connection Table	24
6.2	Ethernet	25
6.3	IPv6 DNS.....	26
6.4	Health Check	27
7	Configuration > Cellular.....	29
7.1	SIM Config	29
7.2	SIM Usage	32
7.3	SMS.....	33
7.4	Serving Cell	34
7.5	DNS.....	35
8	Web Menu Item > LAN.....	36
8.1	IPv4.....	36
9	Web Menu Item > IPv6.....	38
9.1	IPv6 Config	38
10	Web Menu Item > IP Routing	39
10.1	Static Route.....	39
10.2	Policy Route	41
11	Web Menu Item > VPN.....	42
11.1	OpenVPN	42
11.2	IPSec	49
11.3	GRE	58
11.4	PPTP Server.....	60
11.5	L2TP	61
12	Web Menu Item > Firewall	63
12.1	Basic Rules	63
12.2	Port Forwarding.....	64
12.3	DMZ.....	65

12.4	Management IP	65
12.5	ACL	66
12.6	IP Filter	67
12.7	MAC Filter.....	70
12.8	URL Filter	71
12.9	NAT	72
12.10	IP Passthrough	72
12.11	IPS.....	73
13	Web Menu Item > Service	75
13.1	SNMP	75
13.2	Dynamic DNS.....	78
13.3	MQTT	79
13.4	UPnP	80
13.5	SMTP.....	80
13.6	IP Alias.....	81
13.7	QoS	82
14	Web Menu Item > Management	85
14.1	Identification.....	85
14.2	Administration.....	87
14.3	Contacts / On Duty	88
14.4	SSH	89
14.5	Web	90
14.6	Telnet	90
14.7	Firmware	91
14.8	Configuration	91
14.9	Load Factory.....	91
14.10	Restart.....	92
14.11	Schedule Reboot	92
14.12	Fail2Ban.....	93

14.13 O’smart..... 94

15 Web Menu Item > Diagnosis 95

15.1 Ping..... 95

15.2 Traceroute 95

16 Troubleshooting Guide 97

16.1 Troubleshooting Information..... 97

1 Introduction


Proscend M351-5G Industrial IoT 5G NR Cellular Router transforms the Industrial IoT connectivity to the 5G era. The M351-5G features a compact industrial design, lower power consumption, extended operating temperature, flexible power and cable installation, optimum cost performance, RS-232/RS-485, and DI/DO, plus the 5G natures of greater transmission speed and low latency, suits the best of service in various smart city applications.

The M351-5G comes with 4 Gigabit LAN ports, 1 Gigabit WAN port, and dual SIM support to enable critical industrial applications and reliable IoT connectivity for optimal performance and network redundancy. For massive rollout, M351-5G works with O'Smart, the Proscend IoT Management System, to empower administrators to remotely monitor, supervise, and configure the M351-5G Cellular Router anywhere, anytime.

1.1 Features

- Support multiple band connectivity with 5G NR / FDD LTE / TDD LTE.
- Built-in dual Micro SIM slots, serial ports (RS-232, RS-485), DI/DO interfaces, USB port.
- Detachable antenna design for using a wide variety of external antennas.
- Industrial rated from -30 to +70°C for use in harsh environments.
- Support massive remote management by O'smart the IoT Management System

1.2 Dimensions

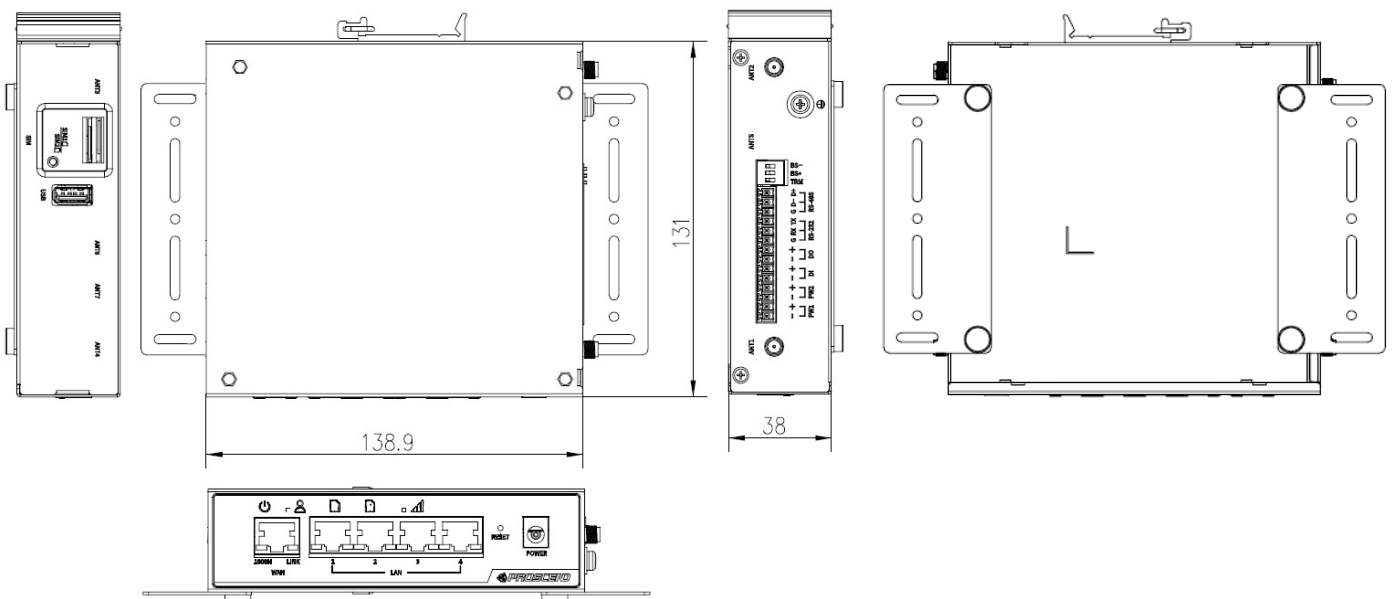

1.3 Specifications

<p>Cellular Interface</p> <ul style="list-style-type: none">■ 5G: NR FDD/TDD■ 4G: LTE FDD/TDD■ 3G: WCDMA <p>Hardware interface</p> <ul style="list-style-type: none">■ 1 x 1000Base-T WAN port compliant with 802.3ab■ 4 x 1000Base-T LAN ports compliant with 802.3ab■ 2 x Micro SIM slots■ 1 x USB2.0 slot■ 1 x Reset Button■ 1 x RS-232 (TX/RX/GND)■ 1 x RS-485 (D+/D-/GND, Non-Isolated)■ 1 x DI (Non-Isolated), 1 x DO (Non-Isolated)■ 2x SMA connectors for 5G Antenna <p>Physical Characteristics</p> <ul style="list-style-type: none">■ Enclosure : Metal Case■ Dimensions (W x H x D) : 138.9 x 38 x 131 mm■ Weight : 550 g■ Installation : Wall mounting, DIN-rail mounting, Desktop. <p>LED Display</p> <ul style="list-style-type: none">■ 1 x Power status■ 1 x System operation (user-defined indicator)■ 2 x SIM card presence■ 1 x Cellular signal strength	<p>Power Supply</p> <ul style="list-style-type: none">■ Terminal block power Input: 12 ~26 VDC■ DC Jack Power Input: 12 VDC, 2A■ Power Consumption: 20 watts (Max) <p>Environment</p> <ul style="list-style-type: none">■ Operating Temperature -30 ~ +70°C■ Storage Temperature -40 ~ +85°C■ Ambient Relative Humidity 10 ~ 95% (non-condensing)■ Humidity 0 ~ 95% (non-condensing) <p>Software</p> <ul style="list-style-type: none">■ Network Protocols: IPv4, IPv6, IPv4/IPv6 dual stack, DHCP server and client, Static Routing, Policy Route, Static IP, SNTP, DNS Proxy, Modbus TCP to Modbus RTU, DDNS, QoS, UPnP■ Routing/Firewall: NAT, Virtual Server, DMZ, MAC Filter, URL Filter, IP Filter, IPS■ VPN: IPSec (3DES, AES128, AES192, AES256, MD5, SHA-1, SHA256), GRE, PPTP, L2TP■ Management: Web GUI with HTTPS/HTTP, Dual Image, Syslog, SNMP, SSH v2, SMS Action, O'smart■ Cellular: Dual APN, IP Passthrough■ Alarm: SMS, VPN/WAN Disconnect, SNMP Trap, E-mail <p>Standards and Certifications</p> <ul style="list-style-type: none">■ NCC & BSMI CNS15936 & CNS15598-1
--	---

2 Hardware Installation

This chapter introduces how to install and connect the hardware.


2.1 Install the SIM Card

STEP 1: Before inserting or removing the SIM cards, ensure that the power has been turned off, or the power connector has been removed from the M351-5G Cellular Router.

STEP 2: Using a screwdriver to remove the metal protective cover first, insert the SIM cards into the card slots. The cut-off edge of the SIM1 card (SIM 2) is to the left (right).

STEP 3: Push the SIM cards and lightly press them to lock into the slot.

STEP 4: Remove the SIM cards, lightly press them and they will pop out of the slot.

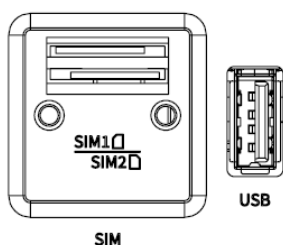






NOTE:

- Please use the industrial SIM cards operating from -40°C to +105°C to ensure proper cellular router operation.
- The USB port for the future reserve.

2.2 LED Indicators

The following table explains the LED indicators on the front panel.

LED	Off	On	Slow	Fast	Heartbeat
SYS 	Power down	Power up	N/A	N/A	N/A
FN 	Not working	Internet connected	N/A	N/A	N/A
SIM1 	Not working	Connected	Connecting	Error	Reading
SIM2 	Not working	Connected	Connecting	Error	Reading
Signal 	No signal	High signal	Medium signal	Low signal	N/A


2.3 Reset Button



Function	Operation
Reset	Press the button for 1 second.
Reset to default setting	Press the button for more than 5 seconds.

2.4 Connecting I/O Ports

There are four terminals on the terminal block, two for digital input and two for digital output.

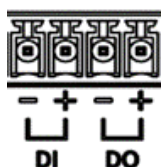


Pin	Description
DI +	Digital Input
DI -	
DO +	Digital Output
DO -	

DI: Low (+0 to +3V) / High (+8 to +40V)

DO: Open Collect (maximum 30V/300mA)


2.5 LED Indicators of Ethernet Port

There are two LED indicators for each of four LAN ports and one WAN port.

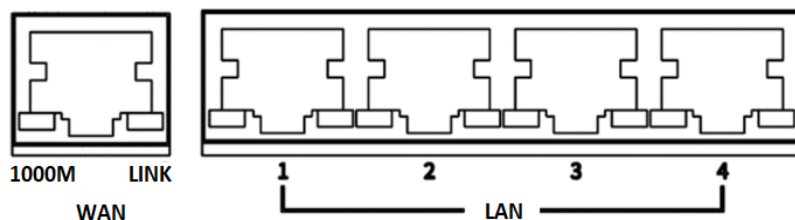

LED	Blinking	On	Off
1000M	N/A	1000Mbps	10/100Mbps
LINK	Data Transmitting	LINK UP	LINK DOWN

2.6 RS-232 and RS-485 pinouts

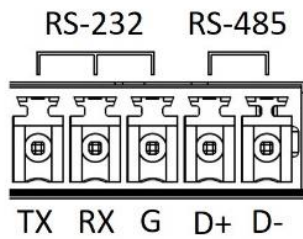


NOTE: RS-232 and RS-485 share the common ground pin “G”.

RS-232


Pin	Signal	Direction
TX	Transmit Data	Output
RX	Receive Data	Input
G	Signal Ground	-

RS-485

Pin	Description
D +	Serial Port, Data+ (A) wire
D -	Serial Port, Data- (B) wire
G	Signal Ground

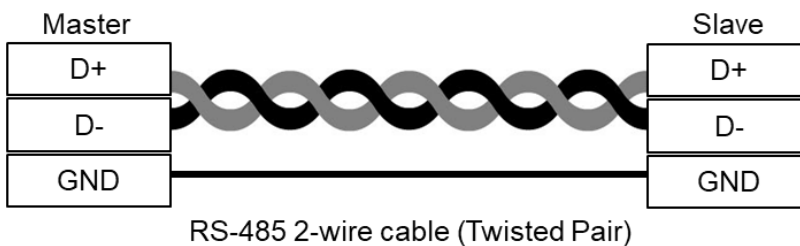

2.7 DIP Switch

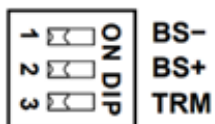


DIP Switch	Mode	ON	OFF
1	BS-	Enabled (D-) 1K ohm Pull Low	Disabled (D-) Pull Low
2	BS+	Enabled (D+) 1K ohm Pull High	Disabled (D+) Pull High
3	TRM	Enabled 120-ohm Termination between (D+) and (D-)	Disabled Termination

NOTE:


- (D+), (D-) stands for RS-485 pinouts.
- BS-, BS+ must be in the same ON/OFF position.

2.8 Connecting the Power Supply

Powering the M351-5G Cellular Router is by either a terminal block or a DC jack.

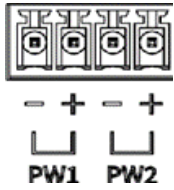

+, - pins of the terminal block (PW1, PW2) on the right panel. The power input voltage range is 12~26 VDC.




One DC Jack is on the front panel.

The power input voltage is 12 VDC, 2A.

2.9 Antenna Installation


Two SMA connectors placed on the right panel are for connecting to external 5G antennas.

ANT1 and ANT2: for 5G/4G Transmit and Receive.

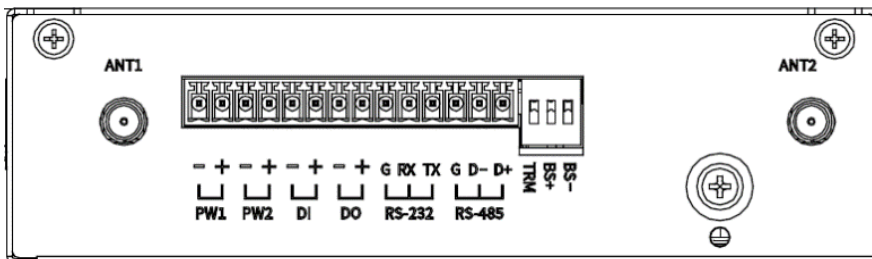

2.10 DIN-rail Mounting

STEP 1: Use the screws to install the DIN-rail kit to attach at the rear side of the device.

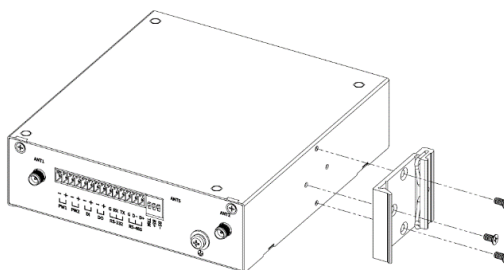


NOTE:

- Three screw types are flat head M3 x 5 mm.

STEP 2: Hook the unit onto the DIN rail.

STEP 3: Push the bottom of the unit towards the DIN rail until it locks in place.

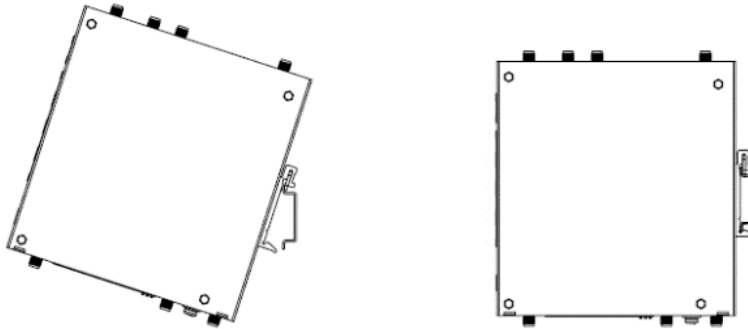


2.11 Wall Mounting

STEP 1: Use two screws to install each bracket at the bottom of the device.

NOTE:

- Each screw type is flat head M3 x 4 mm.

STEP 2: Use the screws to attach the bracket of the device for wall mounting.

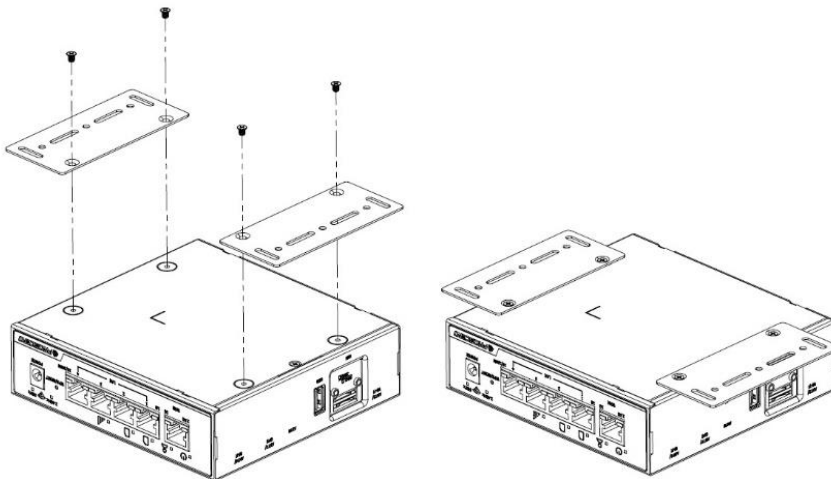

NOTE:

- These screws are not included in the package. The head of each screw is less than 7 mm in diameter, the shaft is less than 3 mm in diameter, and the length is less than 10 mm in diameter.

3 Configuration via Web Browser

3.1 Access the Web Configurator


The web configuration is an HTML-based management interface for quick and easy set up of the cellular router. Monitoring of the status, configuration and administration of the router can be done via the Web interface.

After properly connecting, the hardware of cellular router as previously explained. Launch your web browser and enter <https://192.168.1.1> as URL.

The default IP address and sub net-mask of the cellular router are 192.168.1.1 and 255.255.255.0. Because the cellular router acts as DHCP server in your network, the cellular router will automatically assign IP address for PC or NB in the network.


Title Bar Panel > Selecting Language

You can choose the different language display of web GUI.



Logging in the Router


In this section, please fill in the default User Name **root** and the default Password **2wsx#EDC** and then click **Login**.

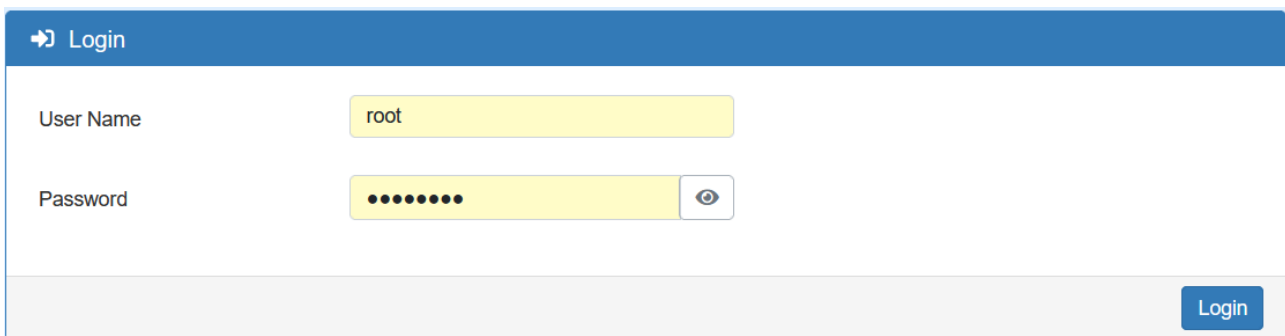A screenshot of the login page of the cellular router web interface. The page has a blue header bar with a white arrow icon and the word 'Login'. Below the header, there are two input fields: 'User Name' with the text 'root' entered, and 'Password' with a series of dots entered. To the right of the password field is an eye icon. At the bottom right of the form is a blue button labeled 'Login'.

3.2 Navigate the Web Configurator

The main screen is divided into three parts as below.

A -Title Bar, **B** -Navigation Panel and **C** -Main Window.

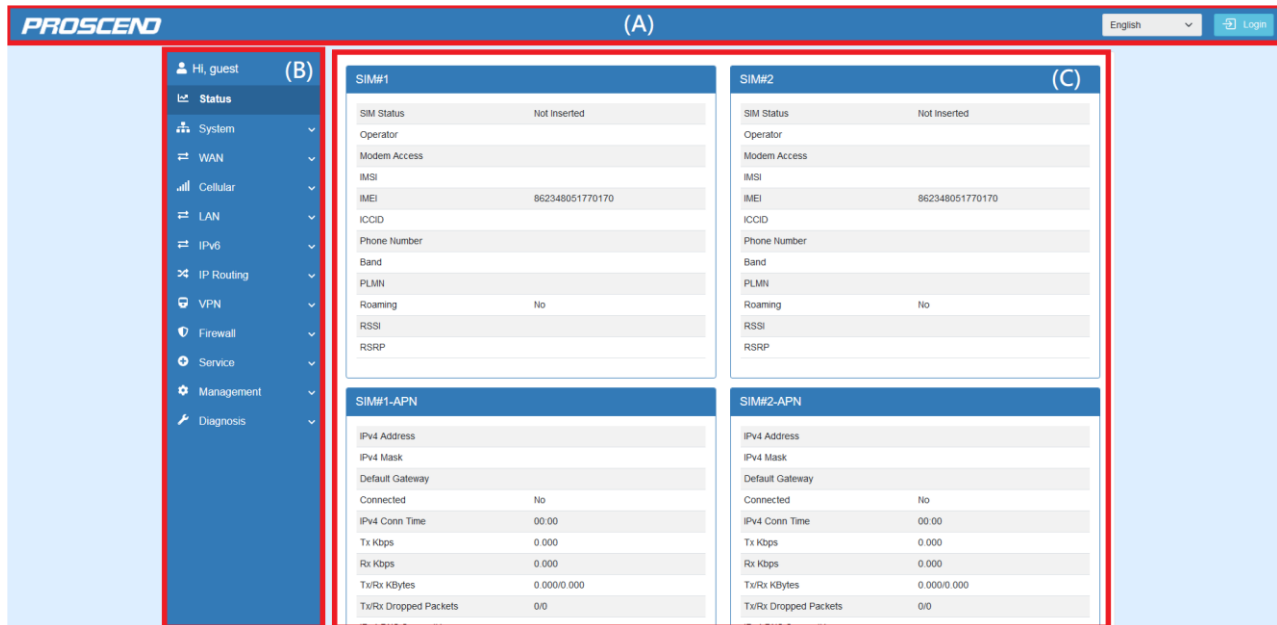

(1) **A** : Title Bar

The title bar provides some useful instructions that appear the situation of router.



Title Bar	
Item	Description
Language	Choose your language from the drop-down list on the upper right corner of the title bar.
Login / Logout	Click to login or logout the web GUI.

(2) **B** : Navigation Panel-Main Menu and Sub Menu

The menu items are divided into main and sub menu to configure the settings and get the status of connectivity on the navigation panel.

Navigation Panel	
Main Menu	Sub Menu
Status	Device overall status
System	Time and Date, Logging, Alarm, Dying Gasp, COM Ports, Ethernet, Modbus, Client List

WAN	Connection Table, Ethernet, IPv6 DNS, Health Check
Cellular	Config, GPS, SIM Config, SIM Usage, SMS, Serving Cell, DNS
LAN	IPv4
IPv6	IPv6 Config
IP Routing	Static Route, Policy Route
VPN	OpenVPN, IPSec, GRE, PPTP Server, L2TP
Firewall	Basic Rules, Port Forwarding, DMZ, Management IP, ACL, IP Filter, MAC Filter, URL Filter, NAT, IPS
Service	SNMP, Dynamic DNS, MQTT, UPnP, SMTP, IP Alias, QoS
Management	Identification, Administration, Contacts / On Duty, SSH, Web, Telnet, Firmware, Configuration, Load Factory, Restart, Schedule Reboot, Fail2Ban, O'smart
Diagnosis	Ping, Traceroute

4 Web Menu Item > Status

This page shows the overall status of the device.

Status > SIM#1 and SIM#2	
Item	Description
SIM Status	The status of SIM.
Operator	The name of the operator.
Modem Access	The access type between the LTE module and base station.
IMSI	The IMSI number of the SIM card.
IMEI	The IMEI number of the SIM card.
ICCID	The ICCID number of the SIM card.
Phone Number	The phone number of the SIM card.
Band	The currently connected band.
PLMN	The Public LAN Mobile Network ID.
Roaming	The status of Roaming.
RSSI	RSSI is measured over the entire bandwidth.
RSRP	RSRP is the received power of 1 RE average of power levels received across all Reference Signal symbols within the considered measurement frequency bandwidth

Status > SIM#1-APN1/APN2 and SIM#2-APN1/APN2	
Item	Description
IPv4 Address	The IPv4 address that assigned by the operator.
IPv4 Mask	The IPv4 mask that assigned by the operator.
Default Gateway	The default gateway that assigned by the operator.
Connected	The status of connection. "Yes" means Connected; "No" means Disconnected.
IPv4 Conn Time	The connection time of IPv4 network.
Tx Kbps	The uplink speed is in Kbps.
Rx Kbps	The downlink speed is in Kbps.
Tx/Rx KBytes	The accumulated TX/RX in KBytes.
Tx/Rx Dropped Packets	The dropped packets of Tx/Rx.
IPv4 DNS Server #1/#2/#3	The DNS server address that assigned by the operator.


Status > LAN Ethernet	
Item	Description
IPv4 Address	The IPv4 address of the M351 device.
IPv4 Mask	The IPv4 mask of the M351 device.
IPv6 Address	The IPv6 address of the M351 device.
IPv6 Prefix	The IPv6 Prefix of the M351 device.
IPv6 DNS Server #1/#2/#3	The IPv6 DNS server address.
IPv6 Conn Time	The connection time of IPv6 network.
Tx Kbps	The speed of uplink in Kbps.
Rx Kbps	The speed of downlink in Kbps.
Tx/Rx KBytes	The accumulated TX/RX in KBytes.
Tx/Rx Dropped Packets	The dropped packets of Tx/Rx .

Status > WAN Ethernet	
Item	Description
IPv4 Address	The IPv4 address of the M351 device.
IPv4 Mask	The IPv4 mask of the M351 device.
IPv4 Gateway	The default gateway that assigned by operator.
IPv4 DNS Server #1/#2/#3	The IPv4 DNS server address.
Tx Kbps	The speed of uplink in Kbps.
Rx Kbps	The speed of downlink in Kbps.
Tx/Rx KBytes	The accumulated TX/RX in KBytes.
Tx/Rx Dropped Packets	The dropped packets of Tx/Rx .

Status > Connected VPN Connections	
Item	Description
OpenVPN	Total connected number of OpenVPN.
IPSec	Total connected number of IPSec.
GRE	Total connected number of GRE.
PPTP Server	Total connected number of PPTP Server.
L2TP	Total connected number of L2TP.

5 Web Menu Item > System

This system section allows you to configure the following items, including Time and Date, Logging, Alarm, Ethernet Ports, and Client List.

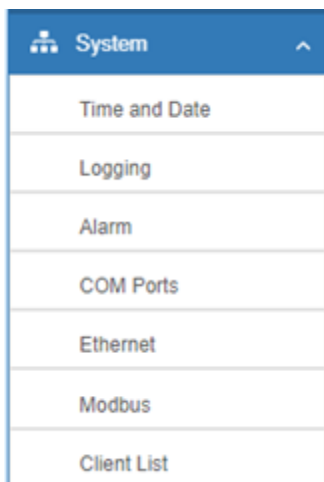

5.1 Time and Date

This section allows you to set up the time and date of router and NTP server. There are two modes at **Time and Date Setup**, including **Get from Local System** and **Get from Time Server**. The default mode is **Get from Time Server**.

For **Time Zone Setup**, the **Daylight Savings Time** allows the device to forward/backward the amount of time from **Ahead of standard time** setting automatically when the time is at the **Daylight Savings** duration that you have set up before.

The Time server feature allows user to set a time server for LAN side client to get the time through NTP/SNTP protocol.

Time Server

Server Mode ☒ Off ☐ On

Server Port

System > Time and Date > Time Server	
Item	Description
Server mode	Turn on/off the time server.
Server port	The UDP port listened by time server.

System > Time and Date > Time Zone Setup	
Item	Description
Daylight Saving	Turn on / off the Daylight Savings feature. Select from Off or On. The default is Off.
Ahead of standard time	The forward / backward minutes when enter/leave Daylight Savings duration. Default is 60 mins.
Start Date/Start Time	<p>Time to enter Daylight Savings duration.</p> <p>The Month range is 1~12; 1 - Jan. 2 - Feb. 3 - Mar. 4 - Apr. 5 - May 6 - Jun. 7 - Jul. 8 - Aug. 9 - Sep. 10 - Oct. 11 - Nov. 12 - Dec.</p> <p>The Week range is 1~5; 1 - first week in month. 2 - second week in month 3 - third week in month 4 - fourth week in month 5 - fifth week in month</p> <p>The Day range is 0~6; 0 - Sunday (The start day of a week) 1 - Monday 2 - Tuesday 3 - Wednesday 4 - Thursday 5 - Friday 6 - Saturday</p> <p>The Hour range is 0~23; The Min range is 0~59;</p>
End Date/End Time	<p>Time to leave Daylight Savings duration.</p> <p>Same with Start Date/Start Time.</p>

5.2 Logging

This section allows cellular router to record the data and display the status of data.

Logging

Mode ☐ Disable ☒ Enable

Remote Log ☒ Disable ☐ Enable

Log Server Address

Log Server Port (1 ~ 65535)

Local Log Size Kilo Bytes

[Reset](#) [Apply](#)

Log

FILTER [Download Logs](#) [Clear](#) [Refresh](#)

Page

#	Date	Level	Group	Module	Message
---	------	-------	-------	--------	---------

5.2.1 Logging > Logging

- (1) Logging section provides you to control all logging records.
- (2) Users need to select **Apply** to confirm your settings.

System > Logging > Logging	
Item	Description
Mode	Turn on / off the logging configuration. Select from Disable or Enable. The default is Enable.
Remote Log	The logging messages send to remote log or not. Select from Disable or Enable. The default is Disable.
Log Server Address	When you choose “Enable” on Remote Log, you should input IP address to save and receive all logging data. (Note: This server should have installed Log software.)
Log Server Port	The port number of Log Server.
Local Log Size	Define the maximum file size of log.

5.2.2 Logging > Log

This section displays all status of router.

- (1) You can choose Filter function to quickly search for your data.
- (2) When you click **Clear**, all of the data that displays on the page will be cleared totally without any backup.
- (3) When you click **Refresh**, the system will update and display the latest data from your cellular router.
- (4) When you click **Download Logs**, the system will download the latest data from your cellular router.

The screenshot shows the 'Log' interface. At the top, there is a blue header with a router icon and the word 'Log'. Below the header, there is a 'FILTER' section with a text input field containing the word 'filter'. To the right of the input field are three buttons: 'Download Logs' (with a download icon), 'Clear', and 'Refresh'. Below the filter section, there is a 'Page' section with navigation buttons: '<|', '<', a text input field containing '1', '>', and '>|'. At the bottom, there is a table header with the following columns: '#', 'Date', 'Level', 'Group', 'Module', and 'Message'.

System > Logging > Log	
Item	Description
Filter	Filter the required data quickly.
Date	Show the date of log for each logging data.
Level	Show the date of log for each logging Level.
Group	Show the group of software functions.
Module	Show the module of group of software functions.
Message	Show the messages for each logging data.

5.3 Alarm

This section allows you to configure the alarm.

Alarm

Alarm Configuration | Alarm Current Status

Mode: ☒ Disable ☐ Enable

Alarm input: ☒ SMS ☒ VPN disconnect ☒ WAN disconnect
☐ LAN disconnect ☒ Reboot ☒ DI

Alarm output: ☒ SMS ☒ E-mail ☒ SNMP trap
☒ DO

SMS/E-mail:
Max 80 characters for pure English; otherwise 20 characters
for SMS/Email only accept [trusted and on duty members](#)

DI Trigger: ☒ High ☐ Low

DO behavior: ☒ Always ☐ Pulse

Reset Apply

Note:

If you select **SMS** in Alarm input/output, you need to add the trust phone number into [Contracts/On Duty].

If you select **SNMP trap** in Alarm output, you need to set up SNMP trap configuration from Service SNMP.

If you select **E-Mail** in Alarm output, you need to set up SMTP configuration from Service SMTP.

System > Alarm	
Item	Description
Mode	Turn on/off the Alarm configuration. Select from Disable or Enable. The default is Disable.
Alarm Input	<ul style="list-style-type: none"> ● SMS: It means on duty team members on [Contacts / On Duty] can send SMS to the phone number of using SIM card to trigger alarm. ● VPN disconnect: All tunnels get disconnected then trigger alarm. ● WAN disconnect: All WAN connections get disconnected then trigger alarm. ● LAN disconnect: All LAN connections get disconnected then trigger alarm. ● Reboot: Reboot then trigger alarm. ● DI: When device gets DI input then trigger alarm.
Alarm Output	Select from SMS, E-mail, SNMP trap and DO as alarm output.
SMS / E-mail	Write your messages and the messages limit 80 pure English characters or 20 characters for other languages to deliver.
DI Trigger	Set High or Low to trigger DI.
Do behavior	Set DO output behavior, always ON or pulse.

5.3.1 Alarm > Group > Create the Group

- Click **trusted and on duty members** to add trusted user who can send SMS message or receive the mail from device.

SMS/E-mail

Max 80 characters for pure English; otherwise 20 characters

Hint: for SMS/E-mail only accept **trusted and on duty members**

Contacts / On Duty

Groups & Duty Schedule
New

#	Group	SUN	MON	TUE	WED	THU	FRI	SAT	Modify
---	-------	-----	-----	-----	-----	-----	-----	-----	--------

Contacts
New

#	Name	Phone	E-mail	Modify
---	------	-------	--------	--------

Reset
Apply

Firstly, we need to create the group and assign the duty day.

The settings below mean the user who only takes effect from Monday to Friday every week in-group "Office 1".

Group & Duty Schedule - Add

Group

Office 1

Day

☐ SUN
☒ MON
☒ TUE

☒ WED
☒ THU
☒ FRI

☐ SAT

OK

5.3.2 Alarm > Contacts > Add User

Once the group created, we need to create the new user and assign to the group we created. Device only accepts the phone number that specify here.

User - Edit #1

Name

worker

Phone

+885912345678

E-mail

test@test.com

Groups

☒ Office 1

OK

After submitting your setting, the interface returns to Group window setting. Now you can see your naming group and the user's information that you have added.

Contacts / On Duty

Groups & Duty Schedule

New

#	Group	SUN	MON	TUE	WED	THU	FRI	SAT	Modify
1	Office 1		✓	✓	✓	✓	✓		

Contacts

New

#	Name	Phone	E-mail	Modify
1	worker	+885912345678	test@test.com	

Reset

Apply

5.4 COM Ports

This section allows user to configure the COM port settings and remotely manage the device through the virtual COM setting. For the remote management, the managed device should connect to the cellular router by serial interface.

- The default is Disable. You can click edit button to configure your settings.

COM Ports

#	Mode	Host Address	Protocol	Port	Edit
1	Disable		TCP	0	
2	Disable		TCP	0	

Apply

- Set up the configuration and Virtual COM. After configuring, click

Save

 to confirm your settings.

Edit COM Ports#1
✕

Baud Rate

115200

▼

Data

8 bit

▼

Parity

none

▼

Stop

1 bit

▼

Flow Control

none

▼

Virtual COM

Mode

Disable

▼

Protocol

TCP

▼

Redirect Port

0

OK

(3) The interface shows the setting information and click Apply to configure.

System > COM Ports	
Item	Description
Edit Configuration	
Baud Rate	Select from the current Baud Rate.
Data	Select from 7 bit or 8 bit.
Parity	Select from the information of Parity.
Stop	Select from 1 bit or 2 bit.
Flow Control	Select from none, Xon/Xoff or hardware.
Virtual COM	
Mode	Select from Disable, Server or Client.
Protocol	Select from TCP or UDP.
Redirect Port	<ul style="list-style-type: none"> Server Mode: This network package of cellular router is on this port. Client Mode: The network package of remote device is on the remote host.

5.5 Ethernet

This section allows you to configure the Ethernet switch port.

Ethernet

Ethernet Ports Status

LAN	Status
LAN	Off
LAN 1	Off
LAN 2	Off
LAN 3	1000M Full
LAN 4	Off

Ethernet Ports Configurations

LAN	<input checked="" type="radio"/> Auto <input type="radio"/> 100M Full <input type="radio"/> 100M Half <input type="radio"/> 10M Full <input type="radio"/> 10M Half <input type="radio"/> Disable
LAN 1	<input checked="" type="radio"/> Auto <input type="radio"/> 100M Full <input type="radio"/> 100M Half <input type="radio"/> 10M Full <input type="radio"/> 10M Half <input type="radio"/> Disable
LAN 2	<input checked="" type="radio"/> Auto <input type="radio"/> 100M Full <input type="radio"/> 100M Half <input type="radio"/> 10M Full <input type="radio"/> 10M Half <input type="radio"/> Disable
LAN 3	<input checked="" type="radio"/> Auto <input type="radio"/> 100M Full <input type="radio"/> 100M Half <input type="radio"/> 10M Full <input type="radio"/> 10M Half <input type="radio"/> Disable
LAN 4	<input checked="" type="radio"/> Auto <input type="radio"/> 100M Full <input type="radio"/> 100M Half <input type="radio"/> 10M Full <input type="radio"/> 10M Half <input type="radio"/> Disable

Reset **Apply**

System > Ethernet	
Item	Description
Ethernet Ports Status	Show the connectivity status of LAN and WAN.
Ethernet Ports Configurations	Select from Auto, 100M Full, 100M Half, 10M Full, 10M Half and Disable.

5.6 Modbus

Modbus

Mode ☐ Disable ☒ Enable

Port 1 ~ 65535

Reset **Apply**

This section allows you to configure the Modbus.

System > Modbus	
Item	Description
Mode	Select from Disable or Enable.
Port	The listening port of Modbus TCP.

5.7 Client List

This section allows you to understand how many devices have been connected and their status from the router. There are two types, one is **DHCP Client** and the other is **Online**. The default is both types to show all status when the router is on DHCP Client and Online.

For **DHCP Client** type, the information shows IP address, MAC address, Hostname and the expiry time of IP (Start/End).

Client List					
List Type <input checked="" type="checkbox"/> DHCP Client <input type="checkbox"/> Online					
#	IP Address	MAC Address	Hostname	Start	End
1	192.168.1.2	20:cf:30:69:b9:ac	ASUS-K42-NB	2017/12/04 10:20:47	2017/12/04 15:20:47


For **Online** type, the information shows IP address and MAC address when the client is online.

Client List					
List Type <input type="checkbox"/> DHCP Client <input checked="" type="checkbox"/> Online					
#	IP Address	MAC Address	Hostname	Start	End
1	192.168.1.2	b8:ae:ed:be:02:75			

System > Client List	
Item	Description
List Type	<ul style="list-style-type: none"> • DHCP Client: List all clients' information when it is via DHCP. • Online: List the information when it is online.

6 Web Menu Item > WAN

This section allows you to configure WAN, including Connection Table, IPv6 DNS, Health Check.

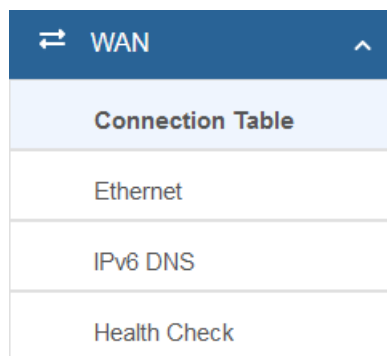

6.1 Connection Table

This section allows to configure the priority for Ethernet WAN and each APN of SIM slot.

A screenshot of the 'Connection Table' configuration page. The page has a blue header with a double-headed arrow icon and the text 'Connection Table'. Below the header are several configuration fields: 'Profile' (a dropdown menu with '1' selected), 'Name' (a text box with 'AUTO'), and 'Failover mode' (radio buttons for 'Auto' and 'Active/Standby', with 'Auto' selected). Below these fields is a paragraph of text explaining failover logic: 'Failover : 1) Health pass entry first, then Link up entry. 2) Entry with Lowest priority value first when multiple entries are on the same state Health pass(or Link up). The entry is excluded from failover when its Management checkbox is checked.' Below the text is a table with 5 columns: '#', 'Priority', 'Interface', 'Protocol', and 'Modify'. The table contains 3 rows of data. To the right of the table is a 'New' button. At the bottom right of the page are 'Reset' and 'Apply' buttons.

#	Priority	Interface	Protocol	Modify
1	1	WAN Ethernet	DHCPv4	
2	2	SIM#1-APN1	DHCPv4	
3	4	SIM#2-APN1	DHCPv4	

WAN > Connection Table	
Item	Description
Profile	Profile number. There are 3 profiles allow to set in advance.
Name	Name for profile
Failover mode	Interface priority for fail over operation. Only the highest priority interface is working. The other one is standby interface.

6.2 Ethernet

This section provides three options to obtain the IP of Ethernet WAN. The options include DHCP Client, PPPoE Client and Static IPv4. The default is DHCP Client.

The screenshot shows the 'Ethernet' configuration page. At the top, there are three tabs: 'DHCP Client' (selected), 'PPPoE Client', and 'Static IPv4'. Below the tabs is the 'Remote Server' section. It contains three rows for 'IPv4 DNS Server #1', 'IPv4 DNS Server #2', and 'IPv4 DNS Server #3'. Each row has a dropdown menu set to 'From ISP' and an adjacent empty text input field. At the bottom right of the section are 'Refresh' and 'Apply' buttons.

WAN > Ethernet	
Item	Description
WAN Ethernet	<ul style="list-style-type: none">● DHCP Client: DHCP server-assigned IP address, netmask, gateway, and DNS.● PPPoE Client: Your ISP will provide you with a username and password. This option is typically used for DSL services.● Static IPv4: User-defined IP address, netmask, and gateway address.

When selecting “DHCP Client”, you can set up DNS Server Configuration.

For IPv4 DNS Server, it provides three options to set up and each option has provided with “From ISP”, “User Defined” and “None” to configure.

This screenshot is similar to the previous one, but the dropdown menu for 'IPv4 DNS Server #1' is open, showing three options: 'From ISP' (selected), 'User Defined', and 'None'. The other two DNS server rows remain unchanged. The 'Refresh' and 'Apply' buttons are still at the bottom right.

WAN > Ethernet > DHCP Client	
Item	Description
IPv4 DNS Server #1	<ul style="list-style-type: none">● Each setting DNS Server has three options, including From ISP, User Defined and None.● When you select From ISP, the IPv4 DNS server IP will be assigned by ISP.● When you select User Defined, user inputs the IPv4 DNS server IP manually.
IPv4 DNS Server #2	
IPv4 DNS Server #3	

When you select PPPoE Client, the interface shows the item of configuration to fill in your User Name and Password. Service name is an option setting.

Ethernet

DHCP Client
PPPoE Client
Static IPv4

PPPoE Client Configuration

Username

test

Password

.....

Service Name

Refresh
Apply

When you select Static IPv4, the interface shows the information of configuration, including IP Address, IP Mask and Gateway Address.

Ethernet

DHCP Client
PPPoE Client
Static IPv4

Static IPv4 Configuration

IP Address

0.0.0.0

IP Mask

255.255.255.0

Gateway Address

0.0.0.0

DNS Server Configuration

IPv4 DNS Server #1

IPv4 DNS Server #2

IPv4 DNS Server #3

Refresh
Apply

WAN > Ethernet > Static IPv4	
Item	Description
Static IPv4 Configuration	
IP Address	Fill in the IP Address.
IP Mask	Fill in the IP Mask.
Gateway Address	Fill in Gateway Address.
DNS Server Configuration	
IPv4 DNS Server #1~3	User can enter the IPv4 DNS server IP manually.

6.3 IPv6 DNS

This section allows you to set up IPv6 DNS Server Configuration.

For IPv6 DNS Server, it provides three options to set up and each option has provided with “From ISP”, “User Defined” and “None” to configure.

IPv6 DNS

IPv6 DNS Server #1

From ISP

IPv6 DNS Server #2

From ISP

IPv6 DNS Server #3

From ISP

Reset
Apply

WAN > IPv6 DNS	
Item	Description
IPv6 DNS Server #1	Each setting DNS Server has three options, including From ISP, User Defined and None. When you select From ISP, the IPv6 DNS server IP will assign by ISP. When you select User Defined, the IPv6 DNS server IP is enter by user self.
IPv6 DNS Server #2	
IPv6 DNS Server #3	

6.4 Health Check

This section allows user to configure the WAN healthy check for failover function between different APN of SIM slot and Ethernet WAN.

Health Check

Mode

☐ Disable
☒ Enable

Method

☒ Ping
☐ DNS Lookup

Use the first two DNS from ISP

☒ Disable
☐ Enable

IPv4 Host 1

8.8.8.8

(Must)

IPv4 Host 2

(Option)

Cellular Keep Alive

☐ Disable
☒ Enable

#	Interface	Interval	Timeout	Up	Down	Modify
1	WAN Ethernet	10	0	5	5	
2	SIM#1-APN1	10	0	5	5	
3	SIM#2-APN1	10	0	5	5	
4	SIM#1-APN2	10	0	5	5	
5	SIM#2-APN2	10	0	5	5	


Reset
Apply

WAN > Health Check

Item	Description
Health Check Mode	<ul style="list-style-type: none"> • Select from Disable or Enable. The default is Enable. • When Disable is chosen, the connection will NOT be treated as down of IP routing error.
Method	<p>This setting specifies the health check method for the WAN connection. This Value can be PING, DNS Lookup. The default is Ping.</p> <p>DNS Lookup: Connections will be considered as up if DNS responses are received from any one of the health check DNS servers, regardless of a positive or negative result.</p>
Use the first two DNS from ISP	<ul style="list-style-type: none"> • If this setting is checked, the first two DNS from ISP will be DNS lookup targets for checking a connection health. • If this setting is not checked, Host 1 must be filled, while a value for Host 2 is optional.
IPv4 Host 1	Input the address of IPv4 Host 1.
IPv4 Host 2	Input the address of IPv4 Host 2. This field is optional.
Cellular Keep Alive	keep cellular connections always up with ping check

7 Configuration > Cellular

This section allows you to configure the LTE Config, APN, APN1/2 Usage, SMS, Serving Cell, and DNS.

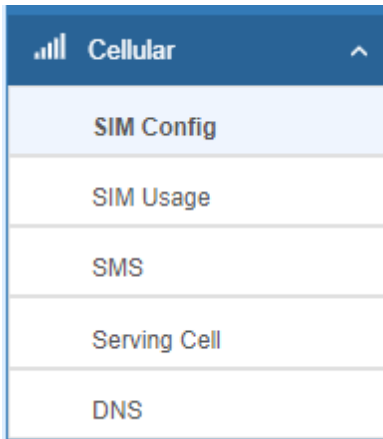





7.1 SIM Config





This section allows user to setup configuration for the SIM card.

A screenshot of the 'SIM Config' settings page in a mobile application. The page has a blue header with a signal strength icon and the text 'SIM Config'. Below the header, the 'Current SIM Card' is listed as 'SIM#2'. A green information icon is followed by the text: 'The SIM card will not switchable when it is disconnected by the user.' There are two radio buttons for 'Disable Roaming': 'No' and 'Yes' (which is selected). Below this is a 'Connection Retry Number' field with the value '3' and a note '(1 ~ 100) * 60 seconds'. There are two tabs: 'SIM#1 Configurations' and 'SIM#2 Configurations' (which is active). Under the 'SIM#2 Configurations' tab, there are several settings: 'Net Mode' is set to 'NR5G SA Only' in a dropdown menu; 'Status' is 'Not Inserted'; 'SIM Card Lock Setting' has an 'Enable' checkbox that is unchecked; 'SIM PIN' and 'Confirm SIM PIN' are both masked with four dots and have eye icons to toggle visibility; 'Change SIM PIN' has a 'Change' button; and 'Unblock SIM card' has an 'Unblock' button.


APN1

APN	<input type="text"/>
Username	<input type="text"/>
Password	<input type="password"/> 
Password	<input type="password"/> 
Auth	NONE 
Protocol	IPv4 
MTU	<input type="text" value="1500"/> min: 700; max: 1500

APN2

APN	<input type="text"/>
Username	<input type="text"/>
Password	<input type="password"/> 
Password	<input type="password"/> 
Auth	NONE 
Protocol	IPv4 
MTU	<input type="text" value="1500"/> min: 700; max: 1500

Data Limitation

Already Used Data (MB)	0			
Mode	<input checked="" type="radio"/> Disable	<input type="radio"/> Enable		
Max Data Limitation (MB)	<input type="text" value="0"/>			
Monthly Reset	Date: <input type="text" value="31"/> 	Hours: <input type="text" value="23"/>	Minutes: <input type="text" value="0"/>	Seconds: <input type="text" value="0"/>
Now Time	Date: 8	Hours: 10	Minutes: 47	Seconds: 58

[Reset](#) [Apply](#)

Cellular > SIM Config	
Item	Description
Current SIM Card	<p>It shows the current used SIM card.</p> <ul style="list-style-type: none"> Disconnect: When getting connection, the Disconnect button appear. After manually click Disconnect, the system would not automatically get connection until next reboot. Connect: After manually disconnect, it will show Connect button. Click to

	get connection or reboot the device to make it automatically connect.
Disable Roaming	<ul style="list-style-type: none"> ● No: Enable the roaming function. ● Yes: Disable the roaming function.
Connection Retry Number	The number of attempts to connect to the network. The interval between each attempt is 60 seconds.
SIM#1 & SIM#2 Configurations	
Net Mode	<ul style="list-style-type: none"> ● Auto : Automatically connect the possible band. ● 3G Only: Connect to 3G network only. ● 4G Only: Connect to 4G network only. ● LTE & NR5G NSA: Connect to LTE & NR5G NSA ● NR5G NSA Only: Connect to NR5G NSA Only
Status	Display the status of SIM Card.
SIM Card Lock Setting	<ul style="list-style-type: none"> ● Enable to display SIM PIN setting. ● Disable to hide SIM PIN setting.
SIM PIN	A password personal identification number (PIN) for ordinary use to protect your SIM card.
Confirm SIM PIN	Double confirm SIM PIN password.
Change SIM PIN	If you want to change SIM PIN code, you can click Change button and type old SIM PIN code and new SIM PIN code. Please aware not to exceed the retry number (PIN remaining number and PUN remaining number).
Unblock SIM card	If user input the wrong SIM PIN more than 3 times, the user needs another password personal unblocking code (PUK) for PIN unlocking. Please check your operator for forgotten PUK number.
APN1 / APN2	
APN	The Access Point Name (APN) is the name of the setting that set up a connection to the gateway between your carrier's cellular network and the public Internet. Leaving it empty will search internally database automatically by SIM card for connection.
Username	Username for authentication. The username can be input by user or the system will search from internal database if the APN setting is empty.
Password	Password for authentication. The password can be input by user or the system will search from internal database if the APN setting is empty.
Confirm Password	Double confirm password.
Auth	Select the authentication method (None/PAP/CHAP).
Protocol	If IPv6 is not selected, then only pure IPv4 connection.
MTU	It allows user to adjust the MTU size to fit into their existing network environment.
Data Limitation	

Already Used Data (MB)	Display current used Data since last reset.
Mode	Turn on/off the Data Limitation to disable or enable.
Max Data Limitation (MB)	Configure maximum Data Limitation.
Monthly Reset	Set up the reset time during the month.
Now Time	Show the current time of system.

7.2 SIM Usage

This section shows the status of **current SIM card**, **operator**, **APN** and the charts for **Real Time**, **Hourly**, **Daily**, **Weekly**, and **Monthly**.



7.3 SMS

This section provides two settings, one is **SMS Action**, and the other is **View SMS**.

- (1) When enabling **SMS Action**, it allows trust phone numbers which in [Contacts/On Duty] list by sending key words SMS to trigger device setting/action/query status.

SMS

SMS Action

SIM SMS

Mode

☒ Disable

☐ Enable

Actions and Keywords Setup


#	Actions	Keyword	
1	Reboot <input checked="" type="checkbox"/> -- Add -	##SMS REBOOT##	<input checked="" type="checkbox"/>
2	Reconnect Cellular <input checked="" type="checkbox"/> -- Add -	##MOBILE RECONNECT##	<input checked="" type="checkbox"/>
3	Disable OpenVPN <input checked="" type="checkbox"/> -- Add -	##OPENVPN DISABLE##	<input checked="" type="checkbox"/>
4	Enable OpenVPN <input checked="" type="checkbox"/> -- Add -	##OPENVPN ENABLE##	<input checked="" type="checkbox"/>
5	Disable IPsec <input checked="" type="checkbox"/> -- Add -	##IPSEC DISABLE##	<input checked="" type="checkbox"/>
6	Enable IPsec <input checked="" type="checkbox"/> -- Add -	##IPSEC ENABLE##	<input checked="" type="checkbox"/>
7	Query Mobile Status <input checked="" type="checkbox"/> -- Add -	##MOBILE STATUS##	<input checked="" type="checkbox"/>
8	Disable Alarm <input checked="" type="checkbox"/> -- Add -	##DISABLE ALARM##	<input checked="" type="checkbox"/>
9	Enable Alarm <input checked="" type="checkbox"/> -- Add -	##ENABLE ALARM##	<input checked="" type="checkbox"/>
10	Disable DO Alarm <input checked="" type="checkbox"/> -- Add -	##DISABLE DO ALARM##	<input checked="" type="checkbox"/>
11	Enable DO Alarm <input checked="" type="checkbox"/> -- Add -	##ENABLE DO ALARM##	<input checked="" type="checkbox"/>
12	Disable SMS Alarm <input checked="" type="checkbox"/> -- Add -	##DISABLE SMS ALARM##	<input checked="" type="checkbox"/>
13	Enable SMS Alarm <input checked="" type="checkbox"/> -- Add -	##ENABLE SMS ALARM##	<input checked="" type="checkbox"/>
14	Disable SNMP Alarm <input checked="" type="checkbox"/> -- Add -	##DISABLE SNMP ALARM##	<input checked="" type="checkbox"/>
15	Enable SNMP Alarm <input checked="" type="checkbox"/> -- Add -	##ENABLE SNMP ALARM##	<input checked="" type="checkbox"/>
16	Disable Email Alarm <input checked="" type="checkbox"/> -- Add -	##DISABLE EMAIL ALARM##	<input checked="" type="checkbox"/>
17	Enable Email Alarm <input checked="" type="checkbox"/> -- Add -	##ENABLE EMAIL ALARM##	<input checked="" type="checkbox"/>
18	DO On <input checked="" type="checkbox"/> -- Add -	##DO ON##	<input checked="" type="checkbox"/>
19	DO Off <input checked="" type="checkbox"/> -- Add -	##DO OFF##	<input checked="" type="checkbox"/>
20	DO Pulse <input checked="" type="checkbox"/> -- Add -	##DO PULSE##	<input checked="" type="checkbox"/>
21	Restore DO Alarm <input checked="" type="checkbox"/> -- Add -	##RESTORE DO ALARM##	<input checked="" type="checkbox"/>

Add

Only accept SMS from [trusted and on duty members](#)

Reset

Apply

- (2) **SIM#1 and SIM#2 SMS** allows you to review the information of SMS that you have received, including the state, phone, date and time. You can click  button to view the whole message, click **Refresh** button to reload the messages, or click **Clear** button to remove all read messages.

SMS

SMS Action

SIM SMS

#	State	Phone	Date	Time	Message	View
---	-------	-------	------	------	---------	------

Clear

Refresh

7.4 Serving Cell

This section displays the information of Serving Cell, including the following items.

Serving Cell

None

Refresh

Carrier Aggregation Info

Attr.

EARFCN

Bandwidth

Band

Cell State

PCI ID

RSRP

RSRQ


RSSI

SINR

Refresh

7.5 DNS

This section allows you to set specific DNS server setting.

 DNS

SIM#1-APN DNS Server Configuration

IPv4 DNS Server #1

From ISP

▼

IPv4 DNS Server #2

From ISP

▼

IPv4 DNS Server #3

From ISP

▼

Cellular > DNS	
Item	Description
IPv4 DNS Server #1	There are three options, including From ISP, User Defined and None.
IPv4 DNS Server #2	When you select From ISP, the IPv4 DNS server IP will assign from ISP.
IPv4 DNS Server #3	When you select User Defined, the IPv4 DNS server IP is enter by user self.

8 Web Menu Item > LAN

This section allows you to configure LAN IPv4, LAN IPv6, VLAN and Subnet.



8.1 IPv4

Set up your IP Address and IP Mask. Also, fill in the information of DHCP Server Configuration.

LAN IPv4

IPv4

IP Address

192.168.1.1

IP Mask

255.255.255.0

DHCP Server Configuration

DHCP Server

☐ Off ☒ On

IP Address Pool

From

192.168.1.2

To

192.168.1.254

Gateway

192.168.1.1

Lease Time

300

Minutes

Static IP Addresses

New

#	Mode	MAC	IP	Modify
---	------	-----	----	--------

Reset

Apply

LAN > IPv4	
Item	Description
LAN IPv4	<p>IP Address:192.168.1.1</p> <p>IP Mask:255.255.255.0</p> <p>Both of them are default, you can change them according to your local IP Address and IP Mask.</p>
DHCP Server Configuration	<p>Turn on/off DHCP Server Configuration.</p> <p>Enable to make router can lease IP address to DHCP clients, which connect to LAN.</p>
IP Address Pool	Define the beginning and the end of the pool of IP addresses, which will lease to DHCP clients.
Gateway	Define the gateway IP address that will assign to DHCP clients.
Lease Time	Define the lease time for DHCP clients.
Static IP Addresses	<p>DHCP server support static IP address assignment.</p> <p>The static IP address can add by clicking the New button.</p> <p>Each static IP consist of mode (on/off), MAC and IP address.</p> <p>Mode: Turn on/off the static IP address.</p> <p>MAC: The MAC address of target host or PC.</p> <p>IP: The desired IP address for target host or PC.</p>

9 Web Menu Item > IPv6

This section allows you to configure the LAN IPv6.




9.1 IPv6 Config

Select your type of IPv6, which shows **Delegate Prefix from WAN** or **Static**, and then set up DHCP Server Configuration.

LAN > IPv6	
Item	Description
Type(TBD)	<ul style="list-style-type: none">• Delegate Prefix from WAN Select this option to obtain an IPv6 network prefix automatically from the service provider or an uplink router.• Static Select this option to configure a fixed IPv6 address for the cellular router's LAN IPv6 address.
Static Address(TBD)	You need to input the static address when you select the static type.
DHCP Server Configuration	
Address Assign	<p>Select how you obtain an IPv6 address.</p> <ul style="list-style-type: none">• Stateful: The cellular router uses IPv6 stateful auto configuration. The LAN IPv6 clients can obtain IPv6 addresses through DHCPv6.• Stateless: The cellular router uses IPv6 stateless auto configuration. RADVD (Router Advertisement Daemon) is enable to have the cellular router send IPv6 prefix information in router advertisements periodically and in response to router solicitations.

10 Web Menu Item > IP Routing

This section allows you to configure the Static Route and Policy Route.

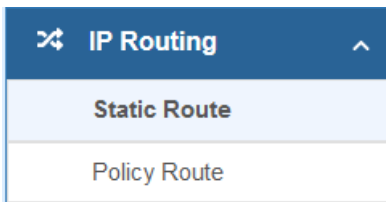

10.1 Static Route

This section allows you to configure the Static Route. A static route is a pre-determined path that network information must follow to reach a specific host or network.

A screenshot of the 'Static Route' configuration page. At the top, there's a header 'Static Route' with a double arrow icon. Below it, there's a 'Mode' section with two radio buttons: 'Off' and 'On', where 'On' is selected. There are two tabs: 'Settings' and 'Status'. Below the tabs is a table with columns: 'Mode', 'Name', 'Destination', 'Gateway', 'Interface', 'Cost', and 'Modify'. A 'New' button is located to the right of the table. At the bottom right, there are 'Reset' and 'Apply' buttons.

Click the **New** button to add the static route.

A screenshot of the 'Static Route - Add' dialog box. It has a title bar 'Static Route - Add' with a close button (X). The dialog contains the same 'Mode' section as the main page, with 'Off' selected. Below it are input fields for 'Name', 'Destination', 'Gateway', 'Interface', and 'Cost'. The 'Destination' and 'Gateway' fields have red borders and a red 'required' label below them. The 'Interface' field is a dropdown menu with '<empty>' selected. The 'Cost' field has '0' entered. At the bottom right, there is an 'OK' button.

IP Routing > Static Route	
Item	Description
Mode	The setting is to enable or disable the static route for full network.
Settings	
Mode	The setting is for the specific network. Select Off or On.
Name	Set up each name for your running host or network.
Destination	Fill in the destination of a specific subnet or IP from network.
Gateway	Fill in the gateway address of your router.
Interface	Select the interface from LAN or Ethernet.
Cost	Cost is a policy for router to commit router, to determine the optimal route. Enter one number greater than or equal to 0.

Note:

- The destination field is required to fill in. The format of destination is IPv4 or IPv6.
- The address of gateway or the type of interface can chose one or both to fill in the field.

The status tab shows the information from the settings of static route.

Static Route

Mode
☒ Off
☐ On

Settings
Status

#	Destination	Gateway	Interface	Protocol	Cost
1	default	10.9.170.81	SIM#2-APN		
2	10.9.170.80/30		SIM#2-APN	kernel	209
3	10.9.170.81		SIM#2-APN		
4	192.168.1.0/24		LAN	kernel	
5	fe80::/64		eth0	kernel	256
6	fe80::/64		LAN	kernel	256
7	fe80::/64		eth1	kernel	256
8	fe80::/64		SIM#2-APN	kernel	256

Reset
Apply

10.2 Policy Route

This section allows user to setup the policy route and check the status of policy route settings. Policy routing works on the activated interfaces only, but disabled on deactivated interfaces automatically.

Policy Route

Settings

Status

Mode

☒ Disable
 ☐ Enable

New

#	Mode	Name	Source	Destination	Gateway	Interface	Modify

Reset

Apply

Add Policy Route - Add

Mode

☐ Disable
 ☒ Enable

Name

required

Source(IP/MASK)

required

ex: 192.168.1.20/32

Destination(IP/MASK)

required

ex: 10.10.1.20/32

Then

Gateway

Outgoing Interface


SIM#1-APN

OK

IP Routing > Policy Route	
Item	Description
Mode	Enable or disable the policy route function.
Settings	
Mode	Enable or disable the selected policy route entry.
Name	Set up each name for your running host or network.
Source(IP/MASK)	Fill in the source of a specific IP/MASK from network.
Destination(IP/MASK)	Fill in the destination of a specific IP/MASK from network.
Gateway	Fill in the gateway address of your router.
Outgoing Interface	Select the outgoing interface.


11 Web Menu Item > VPN

This section allows you to configure OpenVPN, IPsec, GRE, PPTP Server, and L2TP.

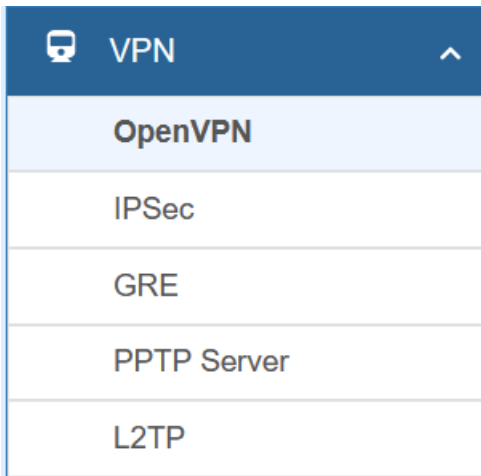


11.1 OpenVPN

This section allows you to set up the connection of OpenVPN. The default mode is Disable. From **Log** tab, the interface will show the status of connection to make you follow the situation whenever it is successful or fail connection.

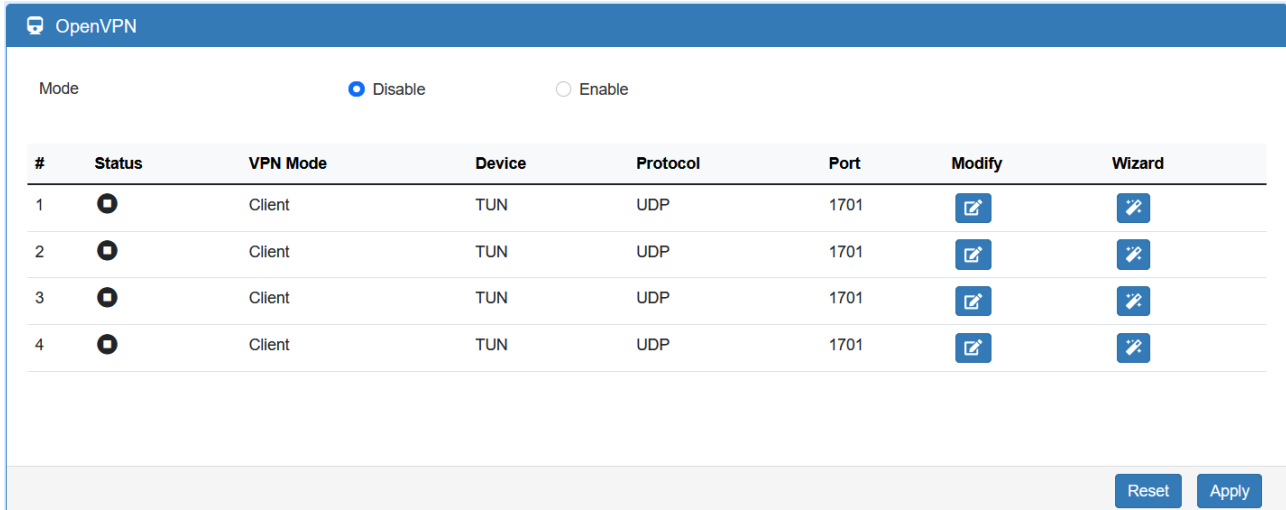

11.1.1.1 OpenVPN Common Setting

- (1) Click  button to edit OpenVPN Connection.
- (2) From **Setting** tab, you can set up the connection of OpenVPN.

OpenVPN Connection - Edit #1 ✕


Mode	<input checked="" type="radio"/> Disable	<input type="radio"/> Enable	
VPN Mode	<input type="radio"/> Server	<input checked="" type="radio"/> Client	<input type="radio"/> Custom
VPN Type	<input checked="" type="radio"/> Roadwarrior	<input type="radio"/> Bridging	LAN/VLAN#1 ▼
Status	<input checked="" type="radio"/> Idle		
TLS Mode	<input checked="" type="radio"/> Disable	<input type="radio"/> Enable	
Cipher	BF-CBC ▼		
IPv6 Mode	<input checked="" type="radio"/> Disable	<input type="radio"/> Enable	
Device	<input checked="" type="radio"/> TUN	<input type="radio"/> TAP	
Protocol	<input checked="" type="radio"/> UDP	<input type="radio"/> TCP	
Port	1701		
VPN Compression	<input checked="" type="radio"/> Disable	<input type="radio"/> Enable	
Authentication	Certificate ▼		

(3)

VPN > OpenVPN > Setting	
Item	Description
Mode	Turn on/off OpenVPN to select Disable or Enable.
VPN Mode	Server: Tick to enable OpenVPN server tunnel. Client: Tick to enable OpenVPN client tunnel. The default is Client. Custom: This option allows user to use the .ovpn configuration file to set up VPN tunnel quickly with third-party server or use the OpenVPN advanced options to be compatible with other servers.
VPN Type	Roadwarrior (default) Bridging: Bridging the VPN tunnel and LAN/VLAN
Status	Display the status of OpenVPN.
TLS Mode	Select from Disable or Enable for data security. The default is Disable.
Cipher	The OpenVPN format of data transmission.
IPv6 Mode	Select from Disable or Enable. The default is Disable.
Device	Select from TUN or TAP. The default is TUN.
Protocol	Select from UDP or TCP Client that depends on the application. The default is UDP.
Port	Enter the listening port of remote side OpenVPN server.
VPN Compression	Select Disable or Enable to compress the data stream. The default is Disable.
Authentication	Select from two different kinds of authentication ways: Certificate or pkcs#12 Certificate. The pkcs#12 option is only available on the VPN client mode.

11.1.2 OpenVPN Client Setting

Select option “**Client**” from VPN Mode, and this section allows you configure the **OpenVPN client** and authentication files.

The files can import by clicking  and the file should download from OpenVPN server.

Client

Server Address

Route Client Networks ☒ Off ☐ On

Local Network

Network

Netmask

NAT

1:1 NAT ☒ Off ☐ On

Client - Security

Root CA

Cert

Key

P12

OK

VPN > OpenVPN > Client VPN Mode	
Item	Description
Client	
Server Address	Fill in WAN IP of OpenVPN server.
Route Client Networks	This setting needs to match the server side. When enabled, the cellular router will auto apply the properly routing rules.
Local Network	
Network	The local network exported by OpenVPN. When keeping this option blank, the OpenVPN will export the LAN network automatically.
Netmask	The local netmask exported by OpenVPN. When keeping this option blank, the OpenVPN will export the LAN netmask automatically.
NAT	
1:1 NAT	Tick to enable NAT Traversal for OpenVPN. This item must be enabled when the router under NAT environment. When two routers' LAN Subnet are same and create OpenVPN tunnels, this function should turn on.
Client-Security	
Root CA	The Certificate Authority file of OpenVPN server, which can download

	from OpenVPN server.
Cert	The certification file is for OpenVPN client, which can download from OpenVPN server.
Key	The private key file is for OpenVPN client, which can download from OpenVPN server.
P12	The PKCS#12 file is for OpenVPN client, which can download from OpenVPN server.

11.1.3 OpenVPN Server Setting

Select option “**Server**” from VPN Mode, and this section allows you to configure the **server settings of VPN Mode**.

NAT

1:1 NAT
☒ Off
☐ On

Server - Server Security

Root CA
Create

Cert, Key
Create

Server - User Security

.ovpn Server Address
blank: auto detect the WAN IP address

User 1
☐ Valid
Create

User 2
☐ Valid
Create

User 3
☐ Valid
Create

User 4
☐ Valid
Create

User 5
☐ Valid
Create

User 6
☐ Valid
Create

User 7
☐ Valid
Create

User 8
☐ Valid
Create

OK

VPN > OpenVPN > Server VPN Mode	
Item	Description
Server	
VPN Network	The network ID for OpenVPN virtual network.
VPN Netmask	The netmask for OpenVPN virtual network.
Roadwarrior: Route Client Networks	The OpenVPN server will route the client traffic or not. User should fill in the client IP and netmask when this option is enable.
Local Network	
Network	The local network exported by OpenVPN. When keeping this option blank, the OpenVPN will export the LAN network automatically.
Netmask	The local netmask exported by OpenVPN. When keeping this option blank, the OpenVPN will export the LAN netmask automatically.
NAT	
1:1 NAT	Tick to enable NAT Traversal for OpenVPN. This item must be enabled when router under NAT environment. The default is Off.
Server- Server Security	
Root CA	Create Root CA key.
Cert, Key and DH	Create Cert, Key and DH key.
Server- User Security	
User 1 - User 8	According to your requirement, you can create different kinds of user security key from User 1 to User 8.

11.1.4 Set up OpenVPN Custom

This section helps you use the .ovpn configuration file to set up OpenVPN tunnel quickly with third-party server or use the OpenVPN advance options to be compatible with other servers.

OpenVPN Connection - Edit #1 ×

Mode

☒ Disable
 ☐ Enable

VPN Mode

☐ Server
 ☐ Client
 ☒ Custom

Custom Config

Username

Password

Status

☒ Idle

OK

VPN > OpenVPN > Custom VPN Mode	
Item	Description
Mode	Enable or disable the selected OpenVPN connection.
VPN Mode	Select the custom mode.
Custom Config	Import OpenVPN configuration with “.ovpn” file.
Username	Fill in the username if the imported file has already set up the username.
Password	Fill in the password if the imported file has already set up the password.
Status	Display the connection status of OpenVPN, such as IP address and the connected time.

11.2 IPsec

This section allows you to set up IPsec Tunnel. The setting has four tags, Connections, Authentication IDs, X.509 Certificates, and CA Certificates.

For the IPsec connection which be authenticated by **pre-shared key**, it only need to setup the **Connections** and **Authentication IDs**. For the IPsec connection which be authenticated by **RSA or TLS**, the settings must cover the four parts.

Mode ☒ Disable ☐ Enable

Type ☒ Policy-based ☐ Route-based

VPN > IPsec > General setting	
Item	Description
Mode	Select from Disable or Enable. The default is Disable.
Type	Select from Policy-based or Route-based. The default is Policy-based. Policy-based: transmit traffic that meet the IPsec phase 2 local/remote subnet. Route-based: transmit traffic that match routing table.

11.2.1 IPsec > Connections

This section provides the information of the IPsec connections. Each connection will show the **State**, **IKE information** and **Tunnel information**. In the default setting, the list of connections is empty. You can create the new connection by clicking **New** button.

IPSec

Mode

☐ Disable ☒ Enable

Type

☒ Policy-based ☐ Route-based

Connections

Authentication IDs

X.509 Certificates

CA Certificates

Advance

- : IPsec SA active and link up
- : Only IPsec SA active
- : Connecting
- : IPsec SA inactive
- : Disabled

New

#	Name	State	IKE information	Tunnel information	Modify
---	------	-------	-----------------	--------------------	--------

Reset

Apply

(1) IPsec Phase 1 Setting

Connection - Add

Phase 1

Mode
☒ Disable
☐ Enable

Name

Protocol
IKEv2

Auth Type
PSK

Encryption
AES128

Hash
SHA1

DH Group
5 (1536 bit)

Lifetime
3 hours

Local Host

Local ID
<empty> (allow any)

Remote Host

Remote ID
<empty> (allow any)

VPN > IPsec > Connections > Phrase 1 setting	
Item	Description
Mode	Enable or disable the selected IPsec connection.
Name	Short name or description.
Protocol	Select from IKEv1 or IKEv2. The default is IKEv1.
Auth Type	Select from PSK (default), RSA, EAP-TLS. (Note: The EAP-TLS is for IKEv2 only.)
Encryption	The encryption algorithm. Select from AES128 (default), AES192, AES256 or 3DES.
Hash	The integrity algorithm. Select from MD5, SHA1 (default) or SHA256.
DH Group	The Diffie Hellman Group. Select from 1(768 bit), 2(1024 bit), 5(1536 bit) (default), 14(2048 bit), 15(3072 bit), 16(4096 bit), 17(6144 bit) or 18(8192 bit).
Lifetime	The length of the keying channel of a connection. Select from 30 minutes, 1 hour, 2 hours, 3 hours, 6 hours, 12 hours or 24 hours.
Local Host	The IP address of the router's public network interface. If this value is blank, the connection will automatically detect the correct IP

	address.
Local ID	The identification for authentication on local peer. Select from the created authentication IDs or empty.
Remote Host	The IP address of the peer gateway's public network interface. If this value is blank, the connection will act the server role to wait the incoming request.
Remote ID	The identification for authentication on remote peer. Select from the created authentication IDs or empty.

(2) IPsec Phase 2 Setting

Phase 2

Protocol	ESP
Encryption	AES128
Hash	SHA1
DH Group	5 (1536 bit)
Lifetime	3 hours
Local Subnet	
Remote Subnet	
Service	any

VPN > IPsec > Connections > Phase 2 setting	
Item	Description
Protocol	ESP supported only.
Encryption	The encryption algorithm. Select from AES128 (default), AES192, AES256 or 3DES.
Hash	The integrity algorithm. Select from MD5, SHA1 (default) or SHA256.
DH Group	The Diffie Hellman Group. Select from 1(768 bit), 2(1024 bit), 5(1536 bit) (default), 14(2048 bit), 15(3072 bit), 16(4096 bit), 17(6144 bit) or 18(8192 bit).
Lifetime	The length of a particular instance of a connection. Select from 30 minutes, 1 hour, 2 hours, 3 hours, 6 hours, 12 hours or 24 hours.
Local Subnet	The private subnet behind the router. The available formats are A.B.C.D, A.B.C.D/M, A.B::C.D or A.B::C.D/M If this value is blank, the connection will set it as the "Local Host" of Phase 1 setting.

	<i>Note:</i> This option only work on Policy-based IPsec VPN type.
Remote Subnet	<p>The private subnet behind the peer gateway.</p> <p>The available formats are A.B.C.D, A.B.C.D/M, A.B::C.D or A.B::C.D/M</p> <p>If this value is blank, the connection will set it as the “Remote Host” of Phase 1 setting.</p> <p><i>Note:</i> This option only work on Policy-based IPsec VPN type.</p>
Service	<p>Restrict the VPN traffic to the particular protocol only.</p> <p>Select from the Any, TCP, UDP or L2TP.</p>

(3) IPsec Advance Setting

Advance

DPD interval (s)

30

DPD retry

5

Force NAT-T (Only for IKEv2)

Off

OK

VPN > IPsec > Connections > Advance Setting	
Item	Description
DPD interval	<p>The period time interval to detect dead peers.</p> <p>The default is 30 seconds.</p>
DPD retry	<p>The max number of retry of dead peer detection.</p> <p>The default is 5 times.</p>
Force NAT-T (Only for IKEv2)	Enable or disable the NAT-T for selected IPsec connection.

11.2.2 IPsec > Authentication IDs

This section provides the authentication ID set to authenticate the IPsec connections.

In the default setting, the list of authentication ID is empty. You can create the new authentication ID by clicking the **New** button.

The screenshot displays the IPsec configuration interface. At the top, there are radio buttons for 'Mode' (Disable selected, Enable unselected) and 'Type' (Policy-based selected, Route-based unselected). Below these are tabs for 'Connections', 'Authentication IDs', 'X.509 Certificates', 'CA Certificates', and 'Advance'. The 'Authentication IDs' tab is active, showing a table with columns: #, ID, Type, Pre-shared Key / X.509 Certificate, and Modify. A 'New' button is in the top right. Below the table are 'Reset' and 'Apply' buttons. A modal window titled 'Authentication IDs - Add' is open, containing fields for 'ID', 'Type' (a dropdown menu currently showing 'PSK'), and 'Pre-shared Key / X.509 Certificate' (with a toggle icon). An 'OK' button is at the bottom right of the modal.

VPN > IPsec > Authentication IDs	
Item	Description
ID	The identification for authentication. It works with PSK type only.
Type	Select from PSK or RSA. The default is PSK. PSK: Use the pre-shared key to authenticate the connection. RSA: Use the certificate to authenticate the connection.
Pre-shared Key / X.509 Certificate	The X.509 certificate for authentication. The certificate is generate or import by X.509 Certificates section.

According to the above options, there are some combinations to authenticate the IPsec connection.

VPN > IPsec > Authentication IDs				
#	ID	Type	Pre-shared Key / X.509 Certificate	Comment
1		PSK	password	The default password for the PSK connections.
2	remote.ipsec	PSK	2wsx#EDC	The password only for the PSK connection with remote.IPsec ID. Normally, this case is use to authenticate peer gateway.
3	local.ipsec	PSK		The identification for the connection. Normally, this case is use to announce the ID of the router.
4	test	RSA	created X.509	The ID field will be omitted, and use the common name (CN) of X.509 as the ID field.

11.2.3 IPsec > X.509 Certificates

This section provides the certificates setting which is use by IPsec authentication ID.

Each certificate will show the **State** and **Subject** information.

IPSec

Mode

☒ Disable
☐ Enable

Type

☒ Policy-based
☐ Route-based

Connections

Authentication IDs

X.509 Certificates

CA Certificates

Advance

- ✔ : Generated
- ✖ : Cert or Key is missed
- ⏳ : Generating
- ⌚ : Waiting Apply

- ℹ : Get Information
- 📄 : Download File

New

#	State	Subject	Cert	Key	Modify
1					

Reset

Apply

X.509 Certificates - Edit #1
✕

Cert

Key

Country Name (C)

State (ST)

Location, e.g. city (L)

Organization Name (O)

Organization Unit Name (OU)

Common Name (CN)

E-mail

⚙️ Generate Certificate

OK

11.2.4 IPsec > CA Certificates

This section provides the CA certificates setting which could check whether the X.509 certificate is valid or not.

There is one self-signed CA (generated by the router), and it supports the user import the self-signed CAs to the router. The self-signed CA will help the router to verify the self-signed X.509 certificate, which is import in X.509 Certificates section.

Each CA certificate will show the **State** and **Subject** information and provide the controlling buttons to let user could download or edit the certificate / key files.

IPSec

Mode
☒ Disable ☐ Enable

Type
☒ Policy-based ☐ Route-based

Connections
Authentication IDs
X.509 Certificates
CA Certificates
Advance

- : Generated
- : Generating
- : Waiting Apply

- : Get Information
- : Download File

#	State	Subject	Cert	Modify
Self-signed CA				

Add CA certificate


#	State	Subject	Cert	Modify

Reset
Apply

Certificate Generation

There are two kinds of certificate generated by router, one is self-signed CA, the other is X.509.

To generate the self-signed CA certificate:

1. Navigate to [CA Certificates](#) tab.
2. Click the  edit button to navigate the **Certificate Setting** page.
3. Fill up the information of the CA certificate.
4. Click the **Generate Certificate** button and **OK**.
5. Click the **Apply** button to apply the changes.

To generate the X.509 certificate:

1. Make sure the self-signed CA certificate generated.
2. Navigate to [X.509 Certificates](#) tab.
3. Add the new X.509 certificate by **New** button. (If it's not existed.)
4. Click the Edit button to navigate the **Certificate Setting** page.
5. Fill up the information of the X.509 certificate.
6. Click the **Generate Certificate** button and **OK**.
7. Click the **Apply** button to apply the changes.

Certificate Setting

CA Certificates - Edit

Country Name (C)

State (ST)


Location, e.g. city (L)

Organization Name (O)

Organization Unit Name (OU)

Common Name (CN)

E-mail

 Generate Certificate

OK

VPN > IPsec > CA Certificates	
Item	Description
Country Name	The 2-letter country code. e.g. US This option is required for certificate generation.
State	The state name. e.g. Some-State
Location	The location name. e.g. city-name
Organization Name	The organization name. e.g. company-name This option is required for certificate generation.
Organization Unit Name	The organization unit name.
Common Name	The host name associated with the certificate. e.g. example.com This option is required for certificate generation.
E-mail	The maintainer's E-mail.

Certificate Importing


Same as the **Certificate Generation**, the router supports the CA and X.509 certificate importing.

To import the CA certificate:

1. Navigate to [CA Certificates](#) tab.
2. Click the [Add CA certificate](#) button.
3. Select the CA certificate file from browser window.
4. When the file be selected and everything all right, the newly CA certificate will show the CA certificate list with **Imported** state.

To import the X.509 certificate:

1. Navigate to [X.509 Certificates](#) tab.
2. Click the [+ Add X.509](#) button. The list will pop up the blank X.509 entry.
3. Click the [Cert Import](#) button.
4. Select the X.509 certificate file from browser window.
5. When the file be selected and everything all right, the state should be **Cert or Key is missed**.
6. Click the **Key Import** button.
7. Select the X.509 key file from browser window.
8. When the state shown **Imported**, the importing procedure is completed.

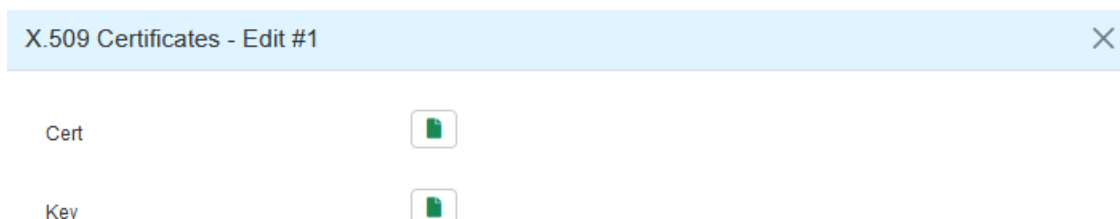


11.3 GRE


This section allows you to set **GRE configuration**. The default mode is off.

Generic Routing Encapsulation (GRE) is one of the available tunneling mechanisms which uses IP as the transport protocol and can be used for carrying many different passenger protocols. The tunnels behave as virtual point-to-point links that have two endpoints identified by the tunnel source and tunnel destination addresses at each endpoint.



- GRE Tunnel interface comes up as soon as it is configured.
- Local endpoint does not bring the interface down if the remote endpoint is unreachable.
- No way to determine problems in the intervening network.
- Keepalives are used to solve this issue.

The GRE Tunnel Keepalive feature provides the capability of configuring keepalive packets to be sent over IP-encapsulated GRE tunnels. You can specify the rate at which keepalives will be sent and the number of times that a device will continue to send keepalive packets without a response before the interface becomes inactive. GRE keepalive packets may be sent from both sides of a tunnel or from just one side.

There are two entries for user to configure, please press Edit  button.

 GRE

Mode ☒ Off ☐ On

#	Mode	Local Address	Remote Address	Tunnel Device Address	Interface Status	Modify
1	off				--	
2	off				--	

Reset Apply

Setup the GRE connection by clicking Edit button.

GRE Entry - Edit #1

Mode

☒ Off ☐ On

Device

SIM#1-APN

▼

bind the tunnel to the device

Local Address

Remote Address

Tunnel Device Address

Tunnel Device Address Prefix

24

Use Tunnel Key

☒ Off ☐ On

Tunnel Key Number

1234

OK

VPN > GRE	
Item	Description
Mode	Enable or disable the selected GRE connection.
Device	Select the interface that GRE should be applied
Local Address	Set local address of the GRE tunnel.
Remote Address	Set remote address of the GRE tunnel.
Tunnel Device Address	Set IP address of this GRE tunnel device.
Tunnel Device Address Prefix	Set Prefix of the Tunnel Device Address.
Use Tunnel Key	Whether to use the key for identifying an individual traffic flow within a tunnel.
Tunnel Key Number	The number of the tunnel key; default is '1234'.

11.4 PPTP Server

This section provides 2 sub configurations, including General Configuration and Clients Configuration.

(1) General Configuration

PPTP Server

General Clients

Mode ☒ Off ☐ On

Auth ☒ PAP ☐ CHAP ☐ MS-CHAP ☐ MS-CHAPv2

Server Address 192.168.10.1

Client Address Range 192.168.10.2 ~ 10

Reset Apply

VPN > PPTP Server > General	
Item	Description
Mode	Enable or disable the PPTP Server function.
Auth	Select the authentication type.
Server Address	This IP address is use as tunnel IP at server site.
Client Address Range	A list of IP addresses to assign to remote PPTP clients.

(2) Clients Configuration

PPTP Server

General Clients

New

#	Mode	Username	Modify
1	on	test	

Reset Apply

PPTPD Client - Add
✕

Mode

☐ Off
 ☒ On

Username

ⓘ

required

Password

👁

OK

VPN > PPTP Server > Clients	
Item	Description
Mode	Enable or disable the selected account.
Username	The username of this client.
Password	The password of this client.

11.5 L2TP

This section allows you to set up L2TP and provides three modes for configuration, including Off, Server, and Client Mode.

(1) General Mode: The default mode is Off as shown as below.

🔒
L2TP

Mode

☒ Off
 ☐ Server
 ☐ Client

Reset

Apply

(2) Server Mode:

🔒
L2TP

Mode

☐ Off
 ☒ Server
 ☐ Client

Auth

☒ PAP
 ☐ CHAP
 ☐ MS-CHAP
 ☐ MS-CHAPv2

Local IP

Remote begin IP

Remote end IP

User List

New

#	Username	Modify

Reset

Apply

M351-5G User Manual

61

User List - Add

Username

ⓘ

Password

👁

required

OK

VPN> L2TP > Server Mode	
Item	Description
Mode	Select from Off or On to set the client setting.
Auth	The authentication method for L2TP connection. Available options: PAP, CHAP, MS-CHAP, MS-CHAPv2
Local IP	The virtual IP for L2TP server.
Remote begin IP	The begin address of L2TP client's IP pool.
Remote end IP	The end address of L2TP client's IP pool.
New	Create a new user account for connecting with server.
Username	The username for L2TP client.
Password	The password for L2TP client.

12 Web Menu Item > Firewall

This section allows you to configure Basic Rules, Port Forwarding, DMZ, IP Filter, MAC Filter, URL Filter, NAT and IPS.



12.1 Basic Rules

This section allows you to set the Basic Rules configuration.

Basic Rules

WAN Ping Blocking

☐ IPv4

☐ IPv6

Reset

Apply

Firewall > Basic Rules	
Item	Description
WAN Ping Blocking	Check IPv4 or IPv6 for blocking

















12.2 Port Forwarding

This section allows you to set up **Port Forwarding** and click  edit button to configure.

Port Forwarding

Mode

☒ Disable ☐ Enable

#	Mode	Description	Protocol	Modify
1	Disable	ssh	TCP	
2	Disable		TCP	
3	Disable		TCP	
4	Disable		TCP	
5	Disable		TCP	
6	Disable		TCP	
7	Disable		TCP	
8	Disable		TCP	
9	Disable		TCP	
10	Disable		TCP	
11	Disable		TCP	
12	Disable		TCP	
13	Disable		TCP	
14	Disable		TCP	
15	Disable		TCP	
16	Disable		TCP	

Reset

Apply

Port Forwarding Entry - Edit #1

Mode

☒ Disable ☐ Enable

Description

ssh

Protocol

☒ TCP ☐ UDP ☐ All

Source Port Begin

22

Source Port End

22

Destination IP

0.0.0.0

Destination Port Begin

22

Destination Port End

22

OK

Firewall > Port Forwarding	
Item	Description
Mode	Enable or disable the selected port forwarding entry.
Description	Describe the name of Port Forwarding.
Protocol	Select from UDP or TCP Client, which depends on the application.
Source Port Begin	Fill in the beginning of source port.
Source Port End	Fill in the end of source port.
Destination IP	Fill in the current private destination IP.
Destination Port Begin	Fill in the beginning of private destination port.
Destination Port End	Fill in the end of private destination port.

12.3 DMZ

This section allows you to set the DMZ configuration.

DMZ

Mode

☒ Disable
 ☐ Enable

Host IP Address

0.0.0.0

Reset

Apply

Firewall > DMZ	
Item	Description
Mode	Enable or disable the DMZ function.
Host IP Address	Fill in your Host IP Address.

12.4 Management IP

This section allows user to setup a management IP that is able to access the device from LAN or WAN side. This IP has higher management permissions than firewall settings.

Management IP Address

Management IP Address

0.0.0.0

Reset

Apply

Firewall > Management IP	
Item	Description
Management IP Address	Fill in your management IP Address.

12.5 ACL

This section allows managing access to the router's own services.

Service Port

Config

Status

Mode

☐ Off
☒ On

New

#	Action	Direction	Protocol	Port	Modify

Reset

Apply

Entries - Add

Action

None

Direction

WAN Input

Protocol

ALL

Source IP

0.0.0.0

Example:

- 192.168.0.123
- 192.168.1.0/24
- 192.168.1.0/255.255.255.0
- 192.168.1.1-192.168.1.123
- 2607:fd0:1002:51::4
- 2607:fd0:1002:51::0/64
- 2607:fd0:1002:51::4-2607:fd0:1002:51::aaaa

Dest. Port

0


Example:

- 1234
- 1234-5678

OK

Firewall > Service Port	
Item	Description
Mode	Enable or disable the service port function.
Action	Select the action for selected entry.
Direction	Select the direction of traffic for selected entry.
Protocol	Select the protocol type.
Source IP	Enter the source IP, 0.0.0.0 means any.
Destination Port	Enter the service port number.

12.6 IP Filter

This section allows you to configure IP Filter. After clicking  button, you can edit your IP protocol, source/port and destination/port. The default is **Disable** mode and **Black** list.

IP Filter



Warning: All existing connections will be dropped after applying.

Mode
☒ Disable
☐ Enable

List
☒ Black
☐ White

(Warnig: White List will block device services, enable them in 'Service Port'.)


Black List

#	Mode	Protocol	Source / Port	Destination / Port	Modify
1	Disable	All	0.0.0.0 --	0.0.0.0 --	
2	Disable	All	0.0.0.0 --	0.0.0.0 --	

Black List: When Black List selected, all specified IP address/port are blocked.

White List: When White List selected, all specified IP address/port are accepted.

Edit Black/White List

- Click  button to edit Black/White list.
- The default is **Disable** mode as the following interface (Black/White).

IP Filter(Black List) - Edit #1

×

Mode

☒ Disable
☐ Enable

Protocol

☒ All
☐ ICMP
☐ TCP
☐ UDP

Source IP

Example:

- 192.168.0.123
- 192.168.1.0/24
- 192.168.1.0/255.255.255.0
- 192.168.1.1-192.168.1.123
- 2607:f0d0:1002:51::4
- 2607:f0d0:1002:51::0/64
- 2607:f0d0:1002:51::4-2607:f0d0:1002:51::aaaa

Source Port

Example:

- 1234
- 1234:5678:

Destination IP

Destination Port

OK

Firewall > IP Filter	
Item	Description
Mode	Select from Disable or Enable. The default is Disable.
Protocol	Select from All, ICMP, TCP or UDP.
Source IP	Fill in your source IP address.
Source Port	Fill in your source port.
Destination IP	Fill in your destination IP address.
Destination Port	Fill in your destination port.


- (3) When selecting Enable Mode, the protocol is TCP. The source IP has IPv4 and IPv6 setting formats.
- (4) For Source IP, there are three types to input your source IP that depends on your requirement, including single IP, IP with Mask or giving a range of IP. The following table provides some examples.

Firewall > Edit IP Filter > Source IP			
IP Format	Single IP	IP with Mask	Ranged IP
IPv4	192.168.0.123	192.168.1.0/24 192.168.1.0/255.255.255.	192.168.1.1-192.168.1.123
IPv6	2607:f0d0:1002:51::4	2607:f0d0:1002:51::0/64	2607:f0d0:1002:51::4- 2607:f0d0:1002:51::aaaa
Note: Setting up a range of IP, please use – hyphen symbol to mark your ranged IP.			

- (5) For Source Port, there are two types to input your source port that depends on your requirement, including single port (e.g.1234) or giving a range of ports (e.g.1234:5678).

Note: Setting up a range of source ports, please use: colon symbol to mark your ranged ports.

12.7 MAC Filter

This section allows you to set up MAC Filter. After clicking  button, you can edit your MAC address.


MAC Filter

Mode







☒ Disable ☐ Enable

List

☒ Black ☐ White

 Warning: All existing connections will be dropped after apply

Black List

#	Mode	MAC Address	Modify
1	Disable		
2	Disable		
3	Disable		
4	Disable		
5	Disable		
6	Disable		

MAC Filter(Black List) - Edit #1

Mode ☒ Disable ☐ Enable

MAC Address


OK

Service > MAC Filter

Item	Description
Mode	Select from Disable or Enable. The default is Disable.
MAC Address	Fill in your MAC address.

Note: Setting up MAC address, please use ":" colon symbol (e.g. xx : xx : xx : xx) or "-" hyphen symbol to mark (e.g. xx - xx - xx - xx).

12.8 URL Filter

This section allows you to set up URL Filter. After clicking  button, you can edit the type of filter and information.


URL Filter

Mode







☒ Disable ☐ Enable

List

☒ Black ☐ White

 Warning: All existing connections will be dropped after apply

Black List

#	Mode	Filter	Key/Full	Modify
1	Disable	Key		
2	Disable	Key		
3	Disable	Key		
4	Disable	Key		
5	Disable	Key		
6	Disable	Key		

URL Filter(Black List) - Edit #1

Mode ☒ Disable ☐ Enable

Filter ☒ Key ☐ Full

Key/Full

OK

Note: Please not include “https://” or “http://” for the URL address in the **Full** Filter.


Firewall > URL Filter	
Item	Description
Mode	Select from Disable or Enable. The default is Disable.
Filter	Select from Key or Full. The default is Key.
Key / Full	Fill in your Key / Full information.

12.9 NAT

This section allows you to set NAT configuration.

When NAT mode is **Enable**, the router will replace the source private IP address by its Internet public address for outgoing packets, and replace the destination Internet public address by private IP address for incoming packets.

When NAT mode is **Disable**, the router will send the source LAN private IP address for outgoing packets and allow to receive the destination LAN private IP address for incoming packets.

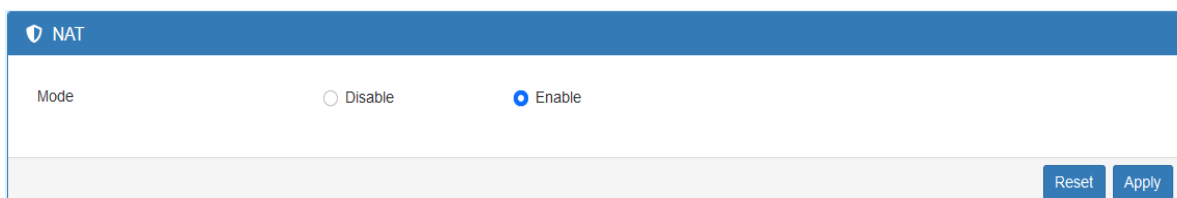

NAT

Mode ☐ Disable ☒ Enable

Reset Apply


12.10 IP Passthrough

Most common in ISP-provided consumer devices is half bridge mode

In this mode, the device handles authentication (the login/password of your Internet contract) and encapsulation, and it will duplicate the WAN IP address from the ISP to the downstream device.

IP Passthrough, makes the router/modem pass the IP assigned from the ISP to the attached downstream device.

It can be using DHCP to pass the IP address(and DNS server) that has been assigned to a PPP interface by an ISP, to another device running a DHCP client.

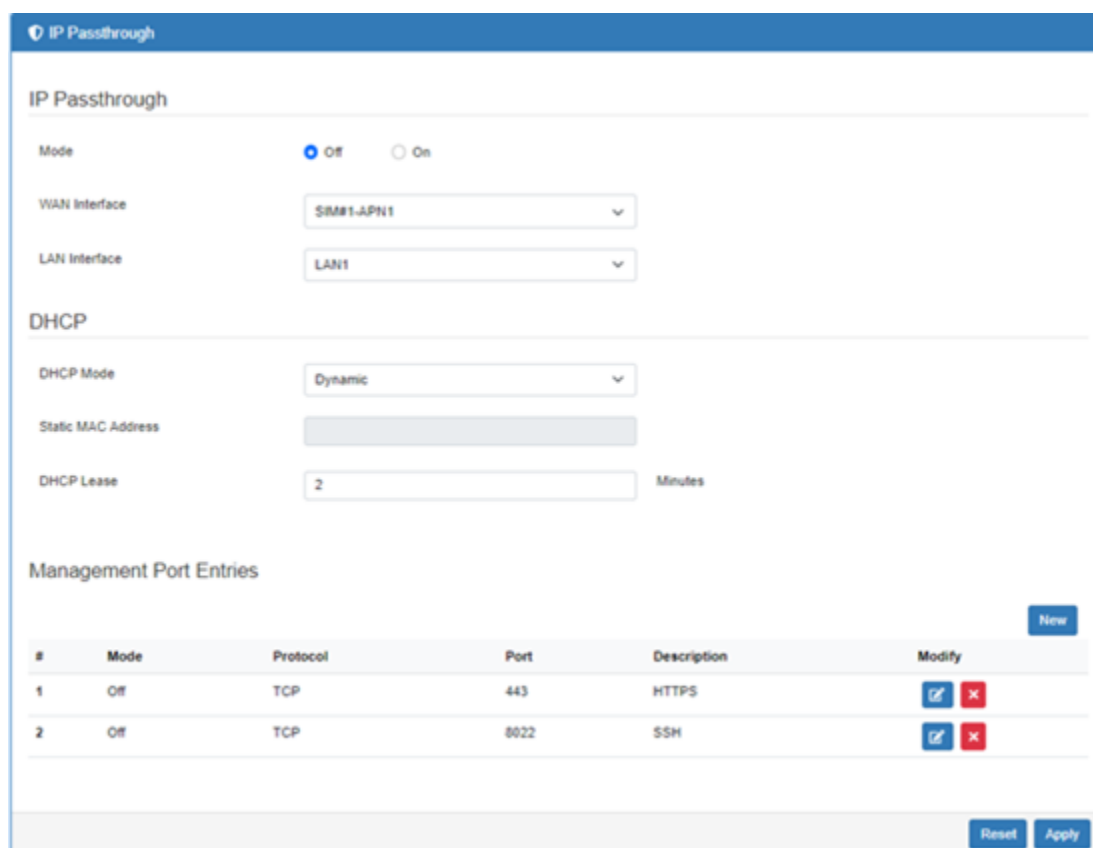

IP Passthrough

Mode ☒ Off ☐ On

WAN Interface SIM81-APN1

LAN Interface LAN1

DHCP

DHCP Mode Dynamic

Static MAC Address

DHCP Lease 2 Minutes

Management Port Entries

#	Mode	Protocol	Port	Description	Modify
1	Off	TCP	443	HTTPS	Edit Delete
2	Off	TCP	8022	SSH	Edit Delete

Reset Apply

Firewall > IP Passthrough	
Item	Description
IP Passthrough	
Mode	Select from Disable or Enable. The default is Disable.
WAN Interface	WAN interface ID, each one represent the related interface
LAN Interface	LAN interface ID, each one represent the related interface
DHCP	
DHCP Mode	Select the Service Static or Dynamic DNS.
Static MAC Address	Fill in your Static MAC address.
DHCP Lease	Time in minutes that will be assigned to a lease for DHCP client's address.
Management Port Entries	
Mode	Select from off or on. The default is off.
Protocol	Select from UDP or TCP Client which depends on the application. The default is UDP.
Port	Enter the listening port of remote side.
Description	Fill in the name of HTTPS or SSH
Modify	Modify Management Port Entries

12.11 IPS

This section allows you to set IPS configuration. IPS prevents the system from being attacked by the Internet.

The system allows user to limit the max incoming connection number from WAN per source IP address to prevent system resource exhausted. Also, the system allows to limit the max incoming connection retry number during a specific time period from WAN per source IP address to prevent too many unexpected connections retry event from causing system busy.

IPS(Intrusion Prevention System)

Mode

☒ Off
 ☐ On

Per IP Address

☐ Total allow incoming connection number

☐ Max incoming connection retry number

 during

 seconds

Reset

Apply

Firewall > IPS	
Item	Description
Mode	Turn on / off IPS function (default: Off)
Total allow incoming connection number	Select the checkbox to enable or disable the function. The default number is 10.
Max incoming connection retry number	Select the checkbox to enable or disable the function. The default number is 20.
Duration time	The default time is 120 seconds.

13 Web Menu Item > Service

This section allows you to configure SNMP, Dynamic DNS, VRRP, SMTP, IP Alias, and QoS.

The screenshot shows a web interface menu titled "Service" with a plus icon and an upward arrow. Below the title, there is a list of service options: SNMP, Dynamic DNS, MQTT, UPnP, SMTP, IP Alias, and QoS. Each option is displayed in a separate row with a light gray background and a thin border.

13.1 SNMP

This section allows user to configure the SNMP function.

13.1.1 Community

The screenshot shows the "SNMP" configuration page. At the top, there is a "Mode" section with two radio buttons: "Disable" (selected) and "Enable". Below this, there are three tabs: "Community" (selected), "SNMP v3 User Configuration", and "SNMP trap configuration". The main area contains a table with four columns: "#", "Mode", "Name", and "Access". There are three rows in the table. Row 1: #1, Mode: Enable, Name: public, Access: Read-Only. Row 2: #2, Mode: Disable, Name: private, Access: Read-Write. Row 3: #3, Mode: Disable, Name: (empty), Access: Read-Only. At the bottom right, there are "Reset" and "Apply" buttons.

#	Mode	Name	Access
1	Enable	public	Read-Only
2	Disable	private	Read-Write
3	Disable		Read-Only

Service > SNMP > Community	
Item	Description
Mode	Select from Disable or Enable to configure SNMP.
Community	Configure community setting with three options, including # 1, # 2 and #3.
Mode	Select from Disable or Enable.
Name	Name each community.
Access	Select from Read-Only or Read-Write.

13.1.2 SNMP v3 User Configuration

SNMP

Mode

☒ Disable ☐ Enable

Community

SNMP v3 User Configuration

SNMP trap configuration

#	Mode	Name	Access
1	Disable		Read-Only
2	Disable		Read-Only
3	Disable		Read-Only

Authentication

#	Mode	Auth Password	Auth Protocol	Privacy Password	Privacy Protocol
1	Auth		MD5		DES
2	Auth		MD5		DES
3	Auth		MD5		DES

Reset

Apply

For SNMP v3 User Configuration, you need to register authentication and allow a receiver that confirm the packet was not modified in transit. There are three options to set up SNMP v3 Configuration.

Service > SNMP > SNMP v3 User configuration	
Item	Description
Mode	Select from Disable or Enable to configure SNMP. The default is Disable.
Name	Fill in your name.
Auth Mode	Select from Authentication or Privacy.
Authentication Password	Fill in your authentication password.
Authentication Protocol	Select from MD5 or SHA.
Privacy Password	Fill in your privacy password.
Privacy Protocol	Select from DES or AES.
Access	Select from Read-Only or Read-Write.

13.1.3 SNMP trap configuration

This section allows you to set up the SNMP trap configuration when you select the **SNMP trap** function from Alarm output of system for your router. With SNMP trap setting, you can know the status of remote device.

SNMP

Mode

☒ Disable
☐ Enable

Community

SNMP v3 User Configuration

SNMP trap configuration

#	Mode	Community Name	Destination
1	Disable	public	
2	Disable	private	

Reset

Apply

Alarm

Alarm Configuration

Alarm Current Status

Mode

☒ Disable
☐ Enable

Alarm input

☒ SMS
☒ VPN disconnect
☒ WAN disconnect

☐ LAN disconnect
☒ Reboot

Alarm output

☒ SMS
☒ E-mail
☒ SNMP trap

☒ TR069

SMS/E-mail

for SMS/E-mail only accept [trusted and on duty members](#)

Reset

Apply

Service > SNMP > SNMP trap configuration	
Item	Description
Mode	Select from Disable or Enable. The default is Disable.
Community Name	Fill in your community name.
Destination	The destination (domain name/IP) of remote SNMP trap server.

13.2 Dynamic DNS

This section allows you to set up Dynamic DNS.

Dynamic DNS

Mode

☒ Disable ☐ Enable

Service Provider

dynv6.com

Host Name

Token ID

Update Period Time (Sec)

2592000

IP Address Selection

☒ Internet IP ☐ WAN IP

Reset

Apply

Service > Dynamic DNS	
Item	Description
Mode	Turn on/off this function to select Disable or Enable. The default is Disable.
Service Provider	Select the Service Provider of Dynamic DNS.
Host Name	Fill in your registered Host Name from Service Provider.
Token ID	Fill in your Token ID from Service Provider.
Host Secret ID	Fill in your Secret ID from Service Provider.
Username	Fill in your registered username from Service Provider.
Password	Fill in your registered password from Service Provider.
Update Period Time (Sec)	Fill in "0" to mean 30 days.
IP Address Selection	Select either Internet IP or WAN IP.

13.3 MQTT

This section allows user to configure the MQTT. It allows the MQTT client to send the message within specific topic or channel. By default, the router does not allow anonymous to read/write the MQTT topic or channel. Thus, you need to create the account with username and password for MQTT client on the web UI.

MQTT

Mode

☒ Disable ☐ Enable

Port

1883

Manage Users

New

#	Username	Modify
---	----------	--------

ACLs

New

#	User	Topic	Subscribe	Publish	Modify
---	------	-------	-----------	---------	--------


Reset

Apply

Service > MQTT	
Item	Description
Mode	Select from Disable or Enable. The default is Disable.
Port	Fill in the port number of MQTT application.
Manage Users	Enter the priority value from 1 to 254. The larger value has higher priority. The default is 100.
Username	Fill in the username of manage user.
Password	Fill in the password of manage user.
ACLs	Allow to specify what topic should be limited.
User	Select the users and identify their authority to read or write the MQTT topic/channel.
Topic	Name the topic of MQTT message.

13.4 UPnP


This section allows to set up UPnP configuration to select the mode from Disable or Enable. The default UPnP is disabled for the cellular router.

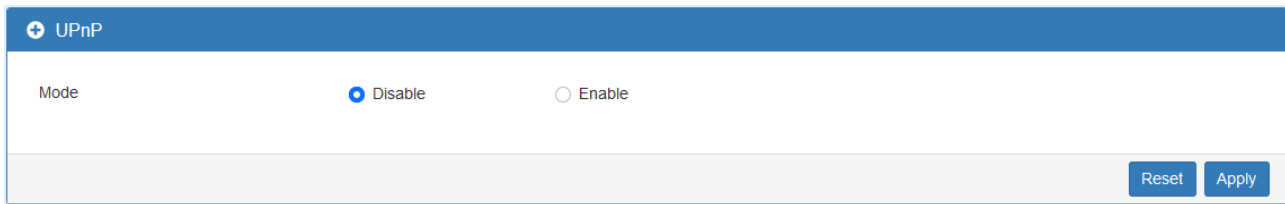

The UPnP configuration interface features a blue header with a plus icon and the text 'UPnP'. Below the header, the 'Mode' is set to 'Disable' with a selected radio button, and 'Enable' is an unselected option. At the bottom right, there are 'Reset' and 'Apply' buttons.

13.5 SMTP

This section provides you to send your email for the server. For instance, the email will be sent to notify when the Alarm has a notification by the server.

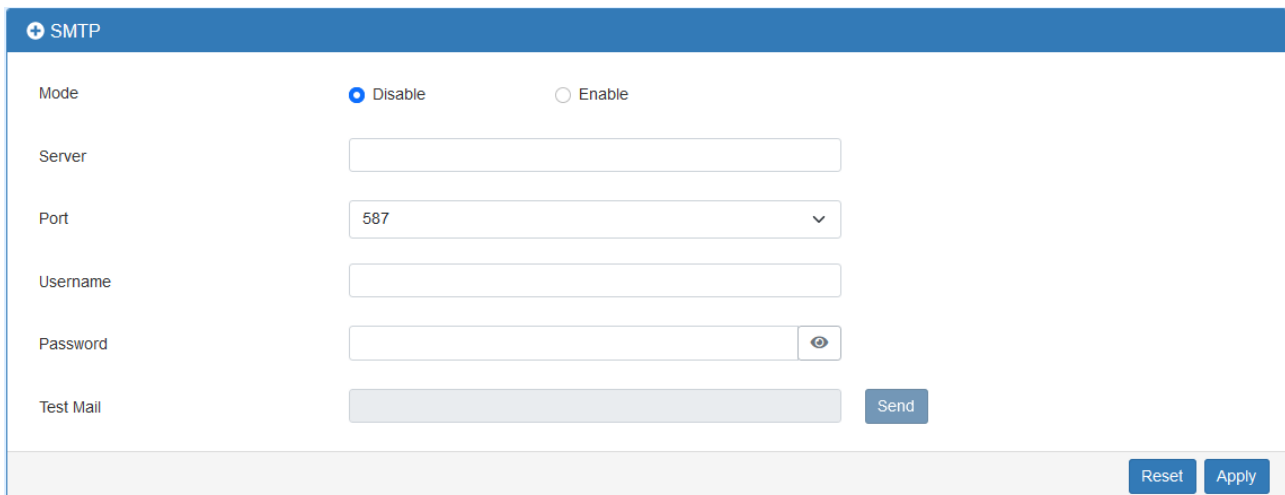

The SMTP configuration interface has a blue header with a plus icon and the text 'SMTP'. It includes a 'Mode' section with 'Disable' selected and 'Enable' as an option. Below this are input fields for 'Server', 'Port' (a dropdown menu currently showing '587'), 'Username', and 'Password' (with a toggle icon). A 'Test Mail' field and a 'Send' button are at the bottom. 'Reset' and 'Apply' buttons are located at the bottom right.

Service > SMTP	
Item	Description
Mode	Select from Disable or Enable. The default is Disable.
Server	Enter the domain or IP address of the SMTP server.
Port	There are three ports for SMTP communication between mail servers. Port 25 : Use TCP port 25 without encryption. Port 465 : SMTP connections secured by SSL. Port 587 : SMTP connections secured by TLS.
Username / Password	Fill in your username and password as the same your server.
Test Mail	Enter the mail address for sending test mail.

13.6 IP Alias

This section allows you to set **IP Alias** configuration.

IP Alias is associating more than one IP address to a network interface. With IP Alias, one node on a network can build multiple connections with the network, each serving a different purpose. IP Alias can be used to provide multiple network addresses on a single physical interface.

+

IP Alias

Mode

☒ Off☐ On

Entries

New

#	Mode	Interface	Addr	Mask	Modify
---	------	-----------	------	------	--------

Reset

Apply

IP Alias Entries - Add

×

Mode

☐ Off☒ On

Interface

SIM#1-APN

▼

Addr

xxx.xxx.xxx.xxx

ⓘ

required

Mask

255.255.255.0

OK

Service > IP Alias	
Item	Description
Mode	Select from Off or On to enable the IP Alias.
Entries	View / Modify / Delete the existing entries.
New / Edit IP Alias Entry	Mode: select from Off or On to use or not use this entry. Interface: the interface you want to provide the additional address. IP Address: Enter the IP address. IP Mask: Enter the network mask.

13.7 QoS

QoS (Quality of Service) refers to a network ability to achieve maximum bandwidth and allow minimum bandwidth. It guarantees the minimum and limit the maximum bandwidth class of traffic. The QoS configuration has three parts, including ISP bandwidth, QoS, and Status.

- ISP bandwidth allows user to configure the max bandwidth for upstream of specific WAN interface. Upstream means from LAN to WAN.
- QoS configuration allows user to classify the traffic. Once classified, the traffic will have the guarantee minimum and limit maximum bandwidth.
- Status allows user to monitor the dynamic bandwidth usage.

13.7.1 QoS > Interface Bandwidth

User can assign the Upstream Bandwidth for each interface. The Bandwidth unit is kilobits per second.

To prevent guaranteed traffic loss, the assigned bandwidth is better not to exceed the real bandwidth because the allowable traffic quantity may exceed the real bandwidth.

The screenshot displays the QoS configuration window. At the top, there is a 'QoS' tab and a 'Mode' section with 'Disable' selected. Below this are three tabs: 'Interface Bandwidth', 'QoS', and 'Status'. The 'Interface Bandwidth' tab is active, showing settings for four interfaces: WAN Ethernet, SIM#1-APN, SIM#2-APN, and LAN Ethernet. Each interface has an 'Upstream' checkbox checked and a bandwidth input field set to '1000' Kbits/s. At the bottom right, there are 'Reset' and 'Apply' buttons.

13.7.2 QoS > QoS

You can select QoS tab to show an overall view for QoS configuration.

At right side of window, there are three buttons.

- Edit button: It allows you to edit QoS Entry and configure QoS settings.
- Up/Down arrow button: It allows you to adjust priority of the QoS entry. The first QoS entry is the highest priority.

The QoS entry configuration page has two parts for assigning bandwidth, and bandwidth of group IP address.

+

QoS

Mode

☒ Disable
 ☐ Enable

Interface Bandwidth

QoS

Status

#	Mode	Name	Port	IP	Rate	Modify
1	DISABLE	surfing	0 - 0		-	
2	DISABLE	surfing	0 - 0		-	

QoS - Edit #1

Mode

☒ Disable
 ☐ Enable

Name

surfing

WAN Ethernet

☐ Enable

Min Rate

5

Kbits/s

Max Rate

100

Kbits/s

SIM#1-APN

☐ Enable

Min Rate

5

Kbits/s

Max Rate

100

Kbits/s

SIM#2-APN

☐ Enable

Min Rate

5

Kbits/s

Max Rate

100

Kbits/s

IPv4v6 Address

All

Example: (empty)

When [RANGE] is selected, the most left different octet would be the specified range. All other parts after the most left different octet would be ignored.

Protocol

☒ All
 ☐ TCP
 ☐ UDP

Port Begin

0

(0 : any)

Port End

0

OK

Service > IP Alias	
Item	Description
Mode	Select from Disable or Enable QoS.
Name	The setting can be edited or deleted the existed entries.

Interface/Min rate(Result)/Max rate	Min Rate: This value guarantees the minimum bandwidth. Max Rate: It is the maximum limited bandwidth.
IPv4v6 Address	Choose four types to set address format, including All, Single, Subnet, and Range.
Protocol	Select the protocol type of traffic.
Port Begin/Port End	Specify the port range of traffic.

13.7.3 QoS > Status

Refresher Setting select the showed content of bandwidth usage by following items:

- Refresh rate: how long the browser will update the showed content once with selected interface.
- Show detail bandwidth for each IP address: show the group IP bandwidth usage.
- Apply Refresh Setting button: press this button to take effect with above new settings.

Data part is the content of bandwidth usage.

+

QoS

Mode

☒ Disable
 ☐ Enable

Interface Bandwidth

QoS

Status

Refresher Setting

Update every

5

secs

Data

Please enable this function first

Reset

Apply

14 Web Menu Item > Management

This section provides you to manage the router, set up your administration and know about the status of current software and firmware. In addition, you can backup and restore the configuration.

 Management ^
Identification
Administration
Contacts / On Duty
SSH
Web
Telnet
Firmware
Configuration
Load Factory
Restart
Schedule Reboot
Fail2Ban
O'smart

14.1 Identification


This section allows you to confirm the profile of router, current software, firmware version and system uptime.

Identification	
Active Image Partition	A
Model Name	M331
Host Name	M331
LAN Ethernet MAC Address	00:03:79:00:00:40
Bootloader Version	V100.04
Software Version	V1.00
Software MCSV	0533000110035EE9
Hardware MCSV	0533000110035EE5
Dual Image A MCSV	0533000110035EE9
Dual Image B MCSV	0533000110035EE9
Serial Number	BKLM1234567890
Modem#1 Firmware Version	
IMEI	
Uptime	2:28:23
Refresh	

Management > Identification	
Item	Description
Active Image Partition	Show the active image partition: A or B
Model Name	Show the model name of the cellular router.
Host Name	Show the host name of the cellular router.
LAN Ethernet MAC Address	Show the MAC address of LAN interface.
Bootloader Version	The bootloader version of the device.
Software Version	Show the software version currently running on the device.
Software MCSV	Show the software MCSV of the running firmware.
Hardware MCSV	Show the hardware MCSV of the device.
Dual Image A MCSV	Show the Dual Image A MCSV.
Dual Image B MCSV	Show the Dual Image B MCSV.
Serial Number	Show the product serial number.
Modem#1 Firmware Version	Show the modem firmware version of the device.
IMEI	Show the International Mobile Equipment Identity number.
Uptime	Show the current system uptime.

14.2 Administration

This section allows you to set up the name of system and change your new password. For the Session TTL, you can set up what duration of time will be logout. If you do not need to have this timeout limitation, you can fill in “0” (Zero).

 Administration

System Setup

Host Name

M331





Session TTL

5

(minutes, 0 means no timeout)

☐ Pop up the setting wizard after logging in if the wizard has not completed.

Account List

Account	Username	Modify
Super User	-	
User #1	user	
User #2		
User #3		

Reset

Apply

Management > Administration	
Item	Description
System Setup	
Host Name	Enter the device's host name.
Session TTL	Minutes (0 means no timeout).
Admin Password	
New Password	Type the password you want to change.
Retype to confirm	Retype the password you want to change.

14.3 Contacts / On Duty

This section allows you to create groups, and add users. For more detailed instruction, please navigate to [System > Alarm](#).

Contacts / On Duty

Groups & Duty Schedule

New

#	Group	SUN	MON	TUE	WED	THU	FRI	SAT	Modify
---	-------	-----	-----	-----	-----	-----	-----	-----	--------

Contacts

New

#	Name	Phone	Email	Modify
---	------	-------	-------	--------

Reset

Apply

14.3.1 Group

Click the **New** button to create a new group. Then enter the name for the group and select the day that should be applied.

Group & Duty Schedule - Add

Group

Day

☐ SUN

☐ MON

☐ TUE

☐ WED

☐ THU

☐ FRI

☐ SAT

OK

14.3.2 Contacts

Click the **New** button to create a new user. Enter the user's information and select the group which created by above step.

User - Add

Name

worker

Phone

+886912345678

E-mail

worker@test.com

Groups

☒ test
☐ test2

OK

Please select duty day for every group. The trust and responsible groups can control/receive alarms and SMS.

14.4 SSH

Secure Shell (SSH) allows user to configure system via a secure channel.

SSH

Mode

☐ Disable
☒ Enable

LAN Server Port

22

WAN Server Port

8022

Reset


Apply

Management > SSH	
Item	Description
Mode	Select from Disable or Enable SSH function.
LAN Server Port	The listen port on LAN interface.
WAN Server Port	The listen port on WAN interface.

14.5 Web

This section allows user to change the HTTP port via HTTP. As long as pressing Apply, the web daemon will restart the new configuration, and you will not see the response at the web browser.


After pressing Apply button, the device will apply immediately and give you some hints "Please use new port to access latter". For example, port 3000.

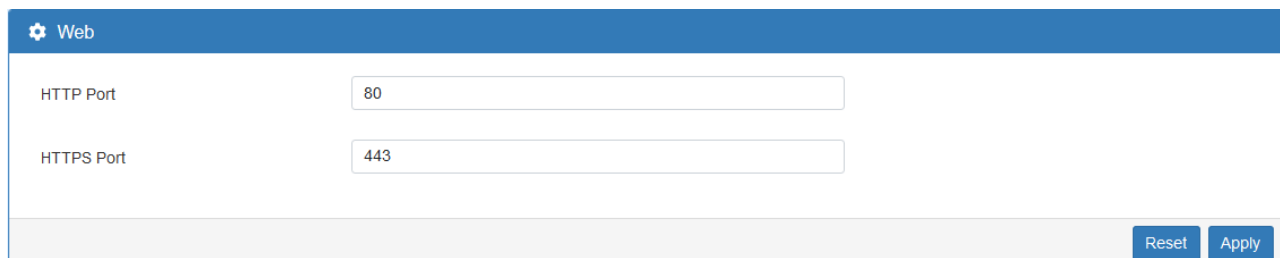The image shows a web configuration interface for a device. At the top, there is a blue header bar with a gear icon and the word "Web". Below the header, there are two input fields. The first is labeled "HTTP Port" and contains the value "80". The second is labeled "HTTPS Port" and contains the value "443". At the bottom right of the interface, there are two buttons: "Reset" and "Apply".

Management > Web	
Item	Description
HTTP Port	The TCP port listened by HTTP daemon.
HTTPS Port	The TCP port listened by HTTPS daemon.

14.6 Telnet


This section allows user to choose whether offer the telnet via LAN/WAN. Default is disable.

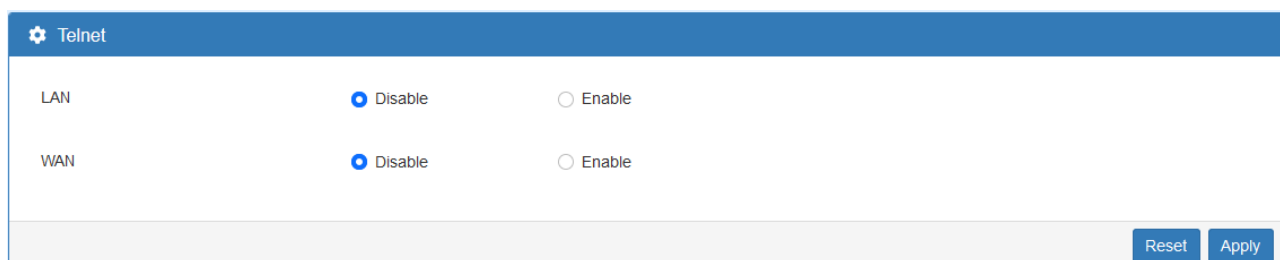The image shows a Telnet configuration interface. At the top, there is a blue header bar with a gear icon and the word "Telnet". Below the header, there are two rows of configuration options. The first row is for "LAN" and the second is for "WAN". Each row has two radio buttons: "Disable" (which is selected) and "Enable". At the bottom right of the interface, there are two buttons: "Reset" and "Apply".

Management > Telnet	
Item	Description
LAN	Whether or not offer the telnet service.
WAN	Whether or not offer the telnet service.

14.7 Firmware


This section provides you to upgrade the firmware of the device.

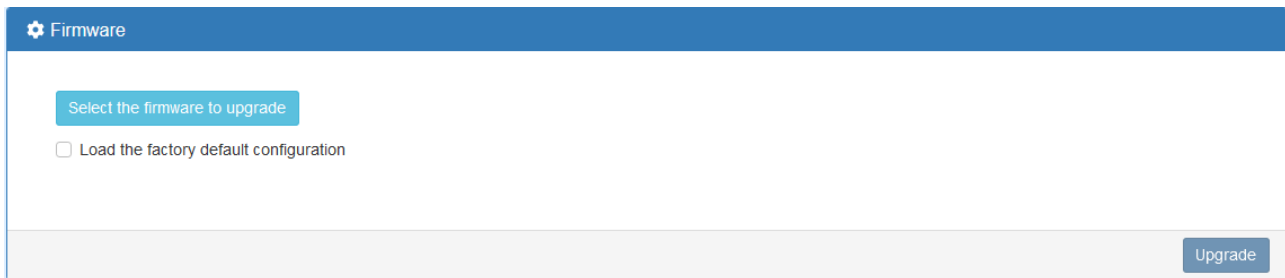The screenshot shows a web interface for firmware management. At the top, there is a blue header bar with a gear icon and the text "Firmware". Below the header, the main content area has a light blue background. It contains a button labeled "Select the firmware to upgrade" in a light blue box. Below this button is a checkbox labeled "Load the factory default configuration". At the bottom right of the main content area, there is a button labeled "Upgrade".

- (1) Click **Select the firmware to upgrade** button to choose your current firmware version in your PC.
- (2) Select **Upgrade** button to update.
- (3) After upgrading successfully, the device will reboot automatically. The configuration will reset to factory default after upgrading when "Load the factory default configuration" checked.

14.8 Configuration

This section supports you to export or import the configuration file.

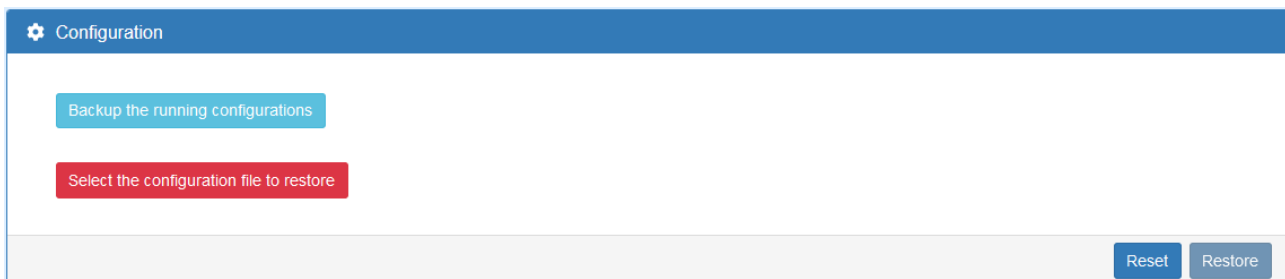The screenshot shows a web interface for configuration management. At the top, there is a blue header bar with a gear icon and the text "Configuration". Below the header, the main content area has a light blue background. It contains two buttons: "Backup the running configurations" in a light blue box and "Select the configuration file to restore" in a red box. At the bottom right of the main content area, there are two buttons: "Reset" and "Restore".

- (1) Click **Backup the running configurations** button to export your current configurations.
- (2) Click **Select the configuration file to restore** button to import the configuration file.

14.9 Load Factory

This section supports you to load the factory default configuration and restart the device immediately. You can click the **Load Factory and Restart** button.

Load Factory

Load the factory default configuration and restart the device immediately

Load Factory and Restart

14.10 Restart

This section allows you to click Restart button to restart immediately.

Restart

Restart the device immediately

Restart

14.11 Schedule Reboot

The setting allows you to schedule the reboot time regularly.

Schedule Reboot

Mode

☒ Off
☐ On

Schedule

Type

☒ Interval

60

minutes (30 ~ 1440)

☐ Per Day

Time

0

:

0

☐ Per Week

Day

0

(0 or 7 is Sunday)

Time

0

:

0

☐ Per Month

Day

1

Time

0


:

0

Reset
Apply

14.12 Fail2Ban

Fail2Ban is an intrusion prevention feature that protects the device from brute-force login attacks.

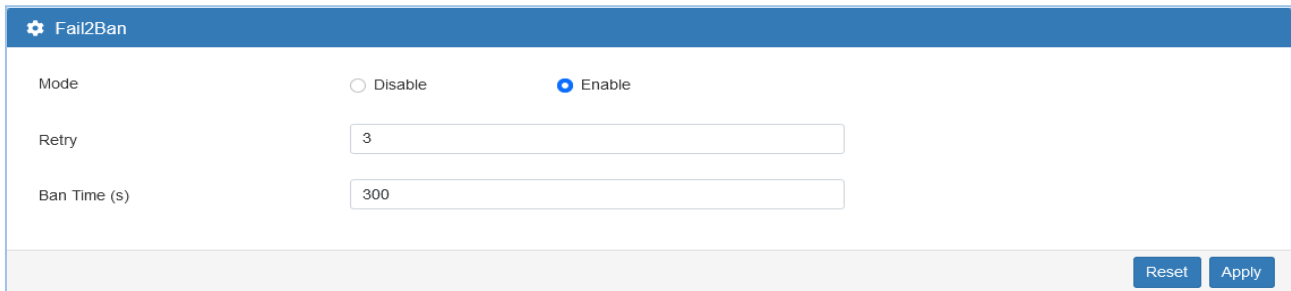The image shows the Fail2Ban configuration interface. At the top, there is a blue header bar with a gear icon and the text "Fail2Ban". Below this, the "Mode" is set to "Enable" (indicated by a blue radio button). The "Retry" field is a text input containing the number "3". The "Ban Time (s)" field is a text input containing the number "300". At the bottom right, there are two buttons: "Reset" and "Apply".

Management > Fail2Ban	
Item	Description
Mode	Select from Disable or Enable. The default is Enable.
Retry	The limit for maximum login retries/attempts.
Ban Time(s)	The banned time(s) for user or IP when it exceeded the retry limit.


Note: There is an example to explain how to configure. E.g. Assume the retry is 3 and the ban time is 300 seconds. If a specified IP has 3 login failures within 5 minutes then it will be banned 300 seconds. Moreover, if it keeps to attempt a login and still fail then the banned time will be extended automatically.

Time	The count of login failure	The banned time (s)
2019/1/1 12:00:00	0	0
2019/1/1 12:00:01	1	0
2019/1/1 12:00:03	3	300
2019/1/1 12:00:10	4	300
2019/1/1 12:00:30	6	600

14.13 O'smart

This section allows you to set up the connection with O'smart IoT management system.

About the O'smart setting, please contact with reseller.

 O'smart

Status

idle

Mode

☒ Disable
 ☐ Enable

Server

Port

1883

Token

TLS Mode

☒ Disable
 ☐ Enable

Advance Setting

MQTT Keepalive (s)

60

Alive Period Time (s)

30

Timeout (s)

60

Insecure Mode

☐ Disable
 ☒ Enable


Reset

Apply

Management > O'smart	
Item	Description
Status	The status between device and O'smart server.
Mode	Enable or disable the connection with O'smart server.
Server	Enter the O'smart server IP address or domain name.
Port	Enter the listen port of O'smart server.
Token	Enter the token that generated by O'smart server.
TLS Mode	Enable or disable the secure connection with O'smart server.
Advance Setting	
MQTT Keep alive	
Alive Period Time	
Timeout	
Insecure Mode	

15 Web Menu Item > Diagnosis

This section allows you to diagnose Ping and Traceroute.

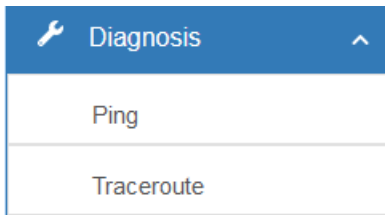

15.1 Ping

Please assign the Host that you want to ping.

A screenshot of the 'Ping' configuration page. It has a blue header with a wrench icon and the word 'Ping'. Below the header, there are three settings: 'Use Interface As Source' with radio buttons for 'No' (selected) and 'Yes'; 'Use Interface' with a dropdown menu showing 'WAN Ethernet'; and 'Host' with a text input field that has a red border and a red 'required' label below it. At the bottom right, there are two buttons: 'Reset' and 'Ping'.

Diagnosis > Ping	
Item	Description
Use Interface as Source	When set to Yes, it will use the selected interface as source IP.
Use Interface	Specify the IP address of selected interface as source IP.
Host	The host name or the host IP address

15.2 Traceroute

Please assign the Host you want to traceroute.

A screenshot of the 'Traceroute' configuration page. It has a blue header with a wrench icon and the word 'Traceroute'. Below the header, there are three settings: 'Use Interface As Source' with radio buttons for 'No' (selected) and 'Yes'; 'Use Interface' with a dropdown menu showing 'WAN Ethernet'; and 'Host' with a text input field. At the bottom right, there are two buttons: 'Reset' and 'Traceroute'.

Diagnosis > Traceroute	
Item	Description
Use Interface as Source	When set to Yes, it will use the selected interface as source IP.
Use Interface	Specify the IP address of selected interface as source IP.
Host	The host name or the host IP address

16 Troubleshooting Guide

16.1 Troubleshooting Information

If you encounter any issue, please refer to the following troubleshooting guide table first for solutions to common problems:

If you cannot find your issue listed here, please refer to the User Manual document for more information that may help you solve your problem.

Problem Type Table		
No.	Problem Type	Description
1	The Cellular Router No power.	Unit has no power.
2	The Cellular Router Access Issue.	Cannot access the Web management page.
3	No internet (From the Cellular Router).	No Internet from your LTE network.

16.2.1 The Cellular Router “No Power” Problem

#Problem 1: Unit has no power.

For the possible solution, please try the following:

- Unplug and replug your power adapter from the power source.
- Disconnect and Connect the Ethernet cable from the Ethernet port of Cellular Router.

If the above didn't solve your “No power” issue, please contact your support engineer for further advanced troubleshooting. (This could involve a possible software or hardware problem that needs to be identified and solved.)

16.2.2 The Cellular Router “Access Issue” Problem

#Problem 2: Cannot access the Web Management page.

For the possible solution, please try the following:

- Check that your PC Ethernet card is enabled and configured to get the IP/DNS address automatically.
- Disconnect and connect the Ethernet cable from the Ethernet port of Cellular Router.
- Ping the LAN IP (default IP is 192.168.1.1). The ping should PASS.
- If ping is OK, please try to access the Web Management page again.

If the above didn't solve your Access Issue then please contact your MIS or anyone that build your network infrastructure to fix the ping fail problem.

If your network infrastructure is confirmed to be OK (hardware works normally and is configured correctly), please contact your support engineer for further advanced troubleshooting. (This could involve a possible software or hardware problem that needs to be identified and solved.)

16.2.3 No Internet (from the Cellular Router) Problem

#Problem 3: No Internet from LTE network of Cellular Router.

The problem might be on the physical contact of the SIM card.

- For the possible solution 1, please try the following:
 - a. Remove your SIM card.
 - b. Please re-insert it again (Checking that the SIM card is in the correct orientation).
 - c. Reboot the Cellular Router by turning Off/On the power source.
 - d. Wait for at least 3 minutes and check again if you receive internet correctly.

If the above didn't solve your "No internet" issue then please continue to solution2 below.

- For the possible solution 2, please try the following:
 - a. Access the Web management page (default url is <http://192.168.1.1/>).
 - b. Check that the LTE configuration is OK by going to the "Cellular -> SIM Config" web page.
 - c. If you change any configuration, please wait for 2 minutes after apply and check again the internet.

If the above didn't solve your "No internet" issue then please check that your SIM card is active and with traffic enabled (by contacting your SIM card provider or by trying that SIM card in another device).

If you are still experiencing the "No internet issue" then please contact your support engineer for further advanced troubleshooting (This could involve a possible Software or Hardware problem that needs to be identified and solved).